



# TEM1000 SERIES

Installation Manual (Temperature and Humidity Programmable Controller)

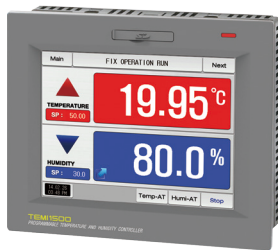

## WELCOME

Thank you for purchasing Furnace controller production.  
Please use after read instruction manual for safety.  
Free to contact to our sales/Du for  
production inquiry and after service.



Various



It is temperature and humidity programmable controller which equips with the recording function by supporting high definition TFT-LCD touch screen

<http://www.samwontech.com>

Being the controller market leader in the 21st century with the best technology



## Copyright

Copyright© 2013 SAMWON TECHNOLOGY CO.,LTD.

This installation manual is a work protected by the copyright law.

A part or entire of this manual shall not be copied, air sent, distributed, translated or changed into the form to be read by electronic media or machine without prior written consent of SAMWON TECHNOLOGY CO.,LTD.





This manual is used for TEM11000  
of Installation method.

## Contents

<b>01. Safety Instruction (Cautions)</b> .....	<b>4</b>	<b>07. Alarm signal</b> .....	<b>60</b>
1-1. Product check .....	4	7-1. Alarm signal setting .....	60
1-2. Exterior and how to install .....	6	7-2. Alarm signal operation .....	65
1-3. Wiring .....	11	<b>08. PID Group</b> .....	<b>69</b>
1-4. Display function and name .....	18	8-1. PID application range setting screen 1 .....	69
1-5. Control part LED .....	19	8-2. PID application range setting screen 2 .....	71
1-6. SD covers the opening and closing and precautions .....	19	8-3. PID application range setting screen .....	72
<b>02. System parameter setting</b> .....	<b>21</b>	8-4. PID group setting screen .....	74
2-1. Setting button operation .....	21	<b>09. Setting communication environment</b> .....	<b>77</b>
2-2. System parameter setting screen .....	22	9-1. RS232C/485 Communication setting .....	77
2-3. System parameter setting sequence .....	23	9-2. Communication environment setting screen .....	78
<b>03. Sensor input setting</b> .....	<b>26</b>	9-3. Ethernet communication environment setting screen .....	80
3-1. Sensor input setting .....	26	<b>10. DO relay output</b> .....	<b>85</b>
3-2. Sectional calibration input setting .....	31	10-1. Relay No. and parameter setting .....	85
<b>04. Control &amp; Transmitting output</b> .....	<b>35</b>	10-2. UP, SOAK, DOWN signal operation .....	100
4-1. Control output setting .....	35	<b>11. DI function and Operation</b> .....	<b>104</b>
4-2. Transmitting output setting screen .....	41	11-1. DI Operation setting .....	104
<b>05. Inner signal (IS)</b> .....	<b>44</b>	11-2. DI error name .....	109
5-1. Inner signal setting .....	44	11-3. DI error creation screen .....	113
5-2. Inner signal operation .....	46	11-4. JPG & BMP file making method .....	114
<b>06. ON/OFF &amp; Logic</b> .....	<b>50</b>	<b>12. System initial setting</b> .....	<b>120</b>
6-1. ON/OFF signal setting .....	50	12-1. Basic screen display setting .....	120
6-2. ON/OFF signal operation .....	52	12-2. State display lamp setting .....	123
6-3. Logic signal setting .....	54		

# 01. Cautions (Instructions) for safety

⋮ Thank you for your choice of our Temperature and Humidity Programmable Controller(TEMI1000). This manual describes the method of installation of the product.

## Cautions in this instruction manual

- Please deliver for the end user to possess always and keep it in the place accessible at any time.
- Use the product after full understanding of this installation manual.
- This installation manual does not warrant any other things because it is a description of the details for the function.
- A part or whole of this manual shall not be edited or copied randomly.
- The descriptions in this manual may be changed randomly without pre notice or warning.
- Even though this manual was made with elaboration, it will be appreciated if you inform to the purchasing point (Dealer shop and etc) or sales team in our company in case of deficiency, mistake or omission in the contents.

## Cautions for the safety and modification (Change) of the product

- Please use this product after full understanding on the safety cautions in this manual for the protection and safety for this product and the system connected to this system.
- Our company is not responsible to the damages occurred by using or handling or unattended using not relying on this installation manual.
- Please install at the outside of this product when the additional protection and safety circuit is installed separately for the protection and safety for this product and the system connected to this system.
- The internal modification (Change) and addition to this product are prohibited.
- Do not disassemble, repair and modify of this product because it becomes the reasons for electric shock, fire and malfunction.
- In case of changing the part or the consumables of this product, please contact to the sales department of our company.
- Do not contact to the moisture with this product. It may cause the failure on this product.
- Do not apply the strong impact on this product. It may cause the damage and failure on this product.

## With regard to the exemption for the responsibility of this product

- We are not responsible for any warranty on this product besides the defined cases in the quality assurance condition of our company.
- We are not responsible for the direct or indirect damages on the user of any third party due to the not expectable defect or the natural disaster in use of this product.

## With regard to the quality assurance condition of this product

- The warranty period shall be one year from the purchasing of this product. Free of charge repair is available only for the cases of out of order occurred from normal use conditions.
- The repair due to the out of order occurred after the warranty period shall be repaired at the actual cost according to the defined condition by our company.
- The out of order occurred within the warranty period shall be repaired at the actual cost for the following cases in spite of within the warranty period.
  - (1) Out of order due to the mistake or fault of the user (Ex: Initialization by losing the password and etc.)
  - (2) Out of order due to the natural disaster (Ex: Fire and flood and etc)
  - (3) Out of order due to the movement of product after installation.
  - (4) Out of order due to the random disassemble, change or damage on the product.
  - (5) Out of order due to the electric power instability
  - (6) Others
- Please contact to the purchasing points or sales part of our company when after sales service is necessary because of the failure on the product.

## Symbol marks for safety



(A) It means the "Handle with care" or "Cautions" In case of violation of this point, it may cause the death, severe injury or the extreme damage on the product.

- Product: It is marked on the points to be acknowledged certainly to protect the human body and device.
- Instruction manual: It describes the cautions to prevent the cases of endangered situation on the life and body of the user due to the electric shock and so on.



(B) It means "Ground terminal"

- Make the earth with the ground in case of product installation and controlling the product.



(C) It means the "supplementary explanation"

- It describes the points to supplement the explanation.



(D) It describes the "references"

- It describes the information and pages of reference to be referred.

# Part 01

## Safety Instruction (Cautions)

1-1 Product check .....	4
1-2 External shape and installation .....	6
1-3 Wiring .....	11
1-4 Display function and name .....	18
1-5 Control part LED .....	19
1-6 SD covers the opening and closing and precautions .....	19



# 01. Safety Instruction (Cautions)

## 1-1. Product check

- When the product is purchased, please check damages on the exterior of the product.

### (1) Checking the specification of the ordered product

- Check whether the purchased product is identical with the ordered specification.
- How to check: Check the model name specification code marked on the right of the packing box and on the left label of product case.

TEMI1 *00 - 0 * / * / * / N / B			
①	②	③	④
<b>① LCD display size</b>	<b>② I/O board</b>	<b>③ SD Card</b>	<b>④ Ethernet communication</b>
2 : 4.3inch wide	0 : I/O1 (Relay 12Points, DI 16Points)	N : None	N : None
3 : 5inch wide	1 : I/O1, 2 (Relay 32Points, DI 16Points)	SD : SD Card	CE : Ethernet
5 : 5.6inch	2 : I/O3 (Relay 8Points, DI 8Points)		
9 : 9inch wide			

### (2) How to treat the damaged parts

- In case of product damage after checking the exterior of the product as shown in the above or the accessories are missed, please contact to the purchasing point or the sales part of our company.







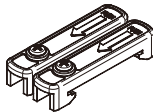
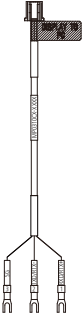







### Period of exchange for the part and Expiration

- Please check the corresponding replacing period as shown below and replace prior to the expiration if it is necessary.
- Only parts that meet the following specifications should be used.
  - Relay            JQ1P-24V DC, ALD24V Equivalent            : Under 300,000 times of ON/OFF
  - Battery         CR2030 3V Equivalent                                    : Under 200,000 hours
- The exchange of the product with expiration date, please contact to the purchasing point (Dealer shop) or the sales part of our company.

### (3) Check the package

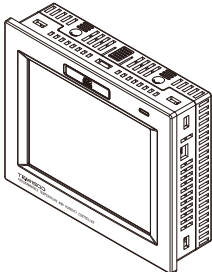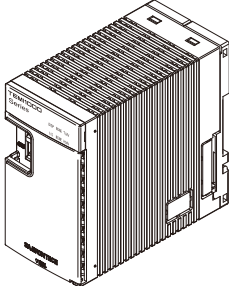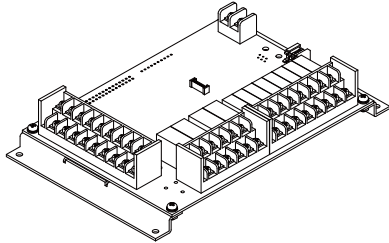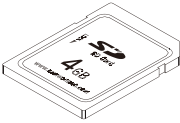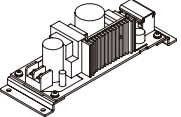- Check whether the following contents are included.

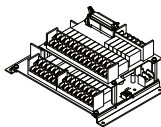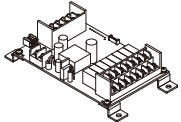Main body of TEMI1000 - Display part		Main body of TEMI1000 - Control part		I/O1 BOARD		
						
SD card (In case of option election)	SMPS 24V DC/1.3A(Product for independent selling)	Fixing mount	End bar	Cable (2m) PC ↔ Control part (MP0310CX)	Cable (1m) Control part ↔ I/O1 (MP0310CW)	Cable (3m) Display part ↔ Control part
						
I/O2 BOARD (In case of option election)	I/O3 BOARD (In case of option election)	Instruction manual				
						

## 1-2. Exterior and how to install

### (1) Installation location and environment



#### Cautions for the installation location and environment

- This product is an industrial product.
- Please manipulate in electricity on state at the installation of this product on the panel because of the electric shock risk. (Caution for electric shock)
- Do not install the product in the following location or environment.
  - A place for contacting the terminal by the human without recognition
  - A place directly exposed for mechanical vibration or impact
  - A place exposed for the corrosive gas or flammable gas
  - A place of temperature fluctuation
  - A place of extremely high (Over 50°C) and low (Under 10°C) temperature
  - A place exposed to the direct sunlight
  - A place influenced with electromagnetic wave
  - A place of moisture (A place with more than 85% of humidity)
  - A place where there are the flammable stuffs at the surrounding
  - A place of dusty and salty
  - A place of receiving the ultra violet light
- Do not use sharp thing or excessive pressure to manipulate the touch screen.
- Please pay attention to the handling of the product because the product is weak to the organic solvent (Chemical substances) as the exterior of the product is made of plastic. (Do not contact the front side of the product to the organic solvent especially.)
- Even though the case of this product is made of non flammable material such as ABS/PC, but do not install in the place where there are the stuffs of easy flammability.



#### Installation Precautions


- Don't put the device or the wiring which cause the noise near to this product.
- Use the product in 10~50°C, in 20~90% RH (It shall not be dewing.) Don't put the heat radiant device closely.
- Don't install the product in declined position.
- Keep the product in -5~70°C (It shall not be dewing.). Especially, use after full warming up (Switch on) when you use the product under 10 °C.
- The wiring work shall be made after switching off electric power on the machine.
- This product operates in 24V DC, 22V max without special manipulation. There is a risk of the electric shock or fire when the electric power other than the specification.
- Don't work with wet hands. It has the risk of electric shock.
- Follow up the basic cautions to reduce risk of fire, electric shock and injury during using.
- The installation and the use shall be made according to the specified methods in instruction manual.
- Refer to the installation procedure regarding to the description for ground. However, do not make the ground on the water supply pipe, gas pipe, phone line and lightning rod. There is a risk of explosion and fire.
- Do not switch on before finishing the connection of the devices. It may cause the failure.
- Do not close the heat radiating hole on this product. It may cause the failure.
- This product can be used under the following environmental conditions.
  - Indoor
  - Altitude up to 2000m
  - Pollution degree II
  - The level of excessive voltage protection category II



## (2) External dimension (Unit:mm)

※ Unit : mm


▶ External dimension of display part for each model

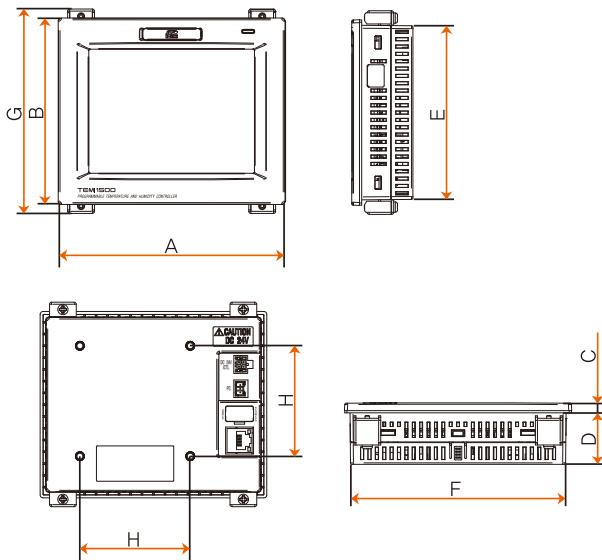


Model name	A	B	C	D	E	F	G	H
TEMI1200	116,3	83,6	3,8	32*	80,6	113,3	94,2	—
TEMI1300	151	108	6,8	34,9	102,3	145,3	121,4	75
TEMI1500	154	126,6	6,8	34,9	118,9	146,3	138,8	75
TEMI1900	239,2	155,7	6,8	34,9	149,8	233,3	168,9	75

\* 1200 model size including the protrusion of the upper SD card part: 37,3


▶ External dimension of control part

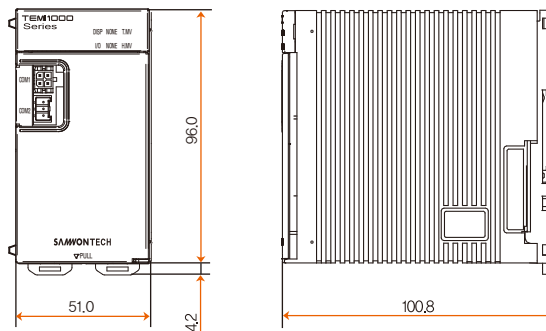


▶ I/O1 board external dimension

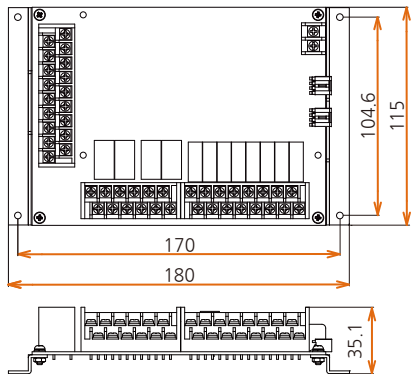

▶ I/O2 board external dimension

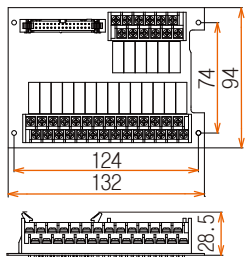


▶ I/O3 board external dimension

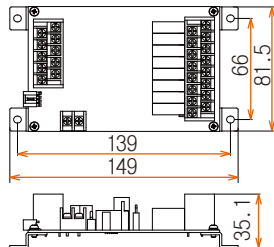

### (3) Panel cutting dimension

▶ In case of general attachment

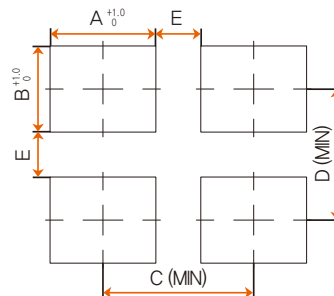

※ Panel cutting dimension for each model

Unit: mm


Model name	A	B	C	D	E
TEMI1200	113.3	80.6	146.3	129.2	33
TEMI1300	146.3	103.3	208.9	165.9	62.6
TEMI1500	147.4	120	210	182.6	62.6
TEMI1900	234.3	150.8	296.9	213.4	62.6

※ Panel cutting size: E, F tolerance: 0/+1.0, 0/+0.6 (1200 model)


#### (4) How to attach on the panel mount

\* How to install the product

##### ► How to install the TEMI1500 display unit panel

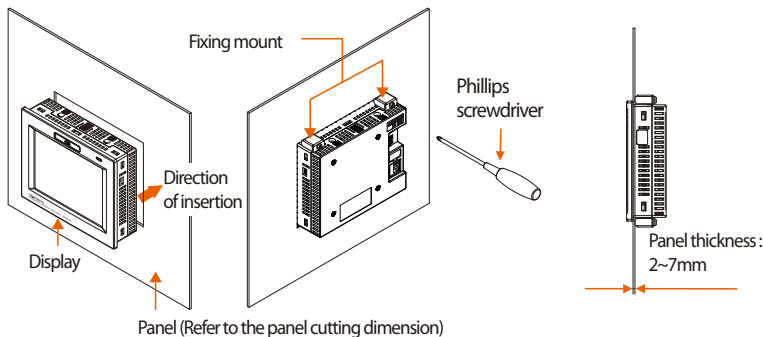

##### ► How to install the TEMI1300/1900 display unit panel

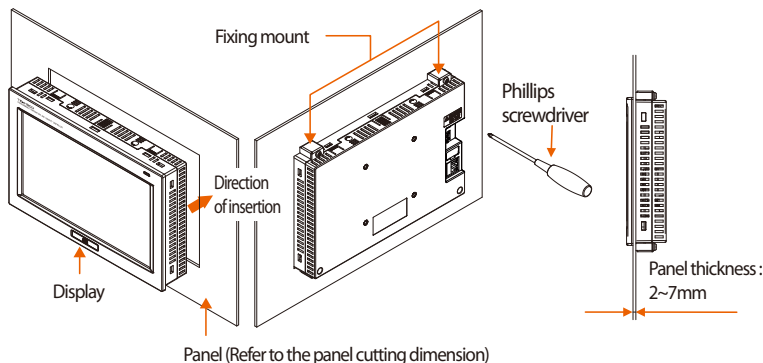

#### ☒ References

- Cut the panel to be installed. Refer to the [1-2(3) Panel cutting dimension]
- Insert into the hole from the rear side of the product as shown in the above figure.
- Fix this product using in fixing mount at the upper/lower part of the product (As shown in the figure) Apply 0.2Nm~0.4Nm of torque in case of assembling the fixing mount (Use the Phillips driver)



#### CAUTION Cautions


The clamping screw is too tightened, the panel surface is deformed. It can cause touch not working normally, or likely to decrease waterproof.

#### ☒ References


- The dimension of vesa (75\*75) is same in any product.
- Apply M4\*4L~6L in case of assembling the bolt on the vesa hole.

\* How to install the control part

▶ In case of installing on the DIN rail

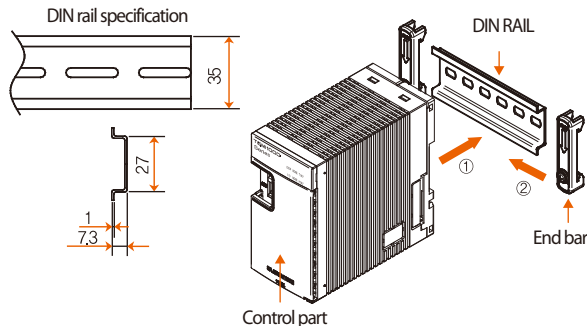


▶ In case of installing with vesa mount

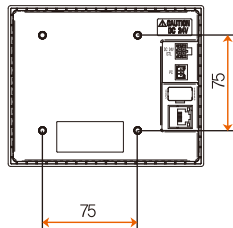

**References**

- ▶ Install the control part on DIN rail.
- ▶ Fix the control part with end bar from both sides.

▶ In case of installing directly on the wall

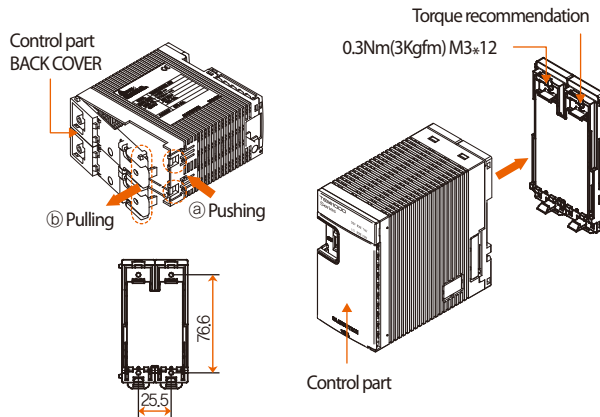

\* Dimension for screw fixing

**References**

- ▶ Separate back cover by pulling part (b) on the back cover while (a) part on the control panel is pressed.
- ▶ Fix the back cover of control part on the wall with screw.
- ▶ Assemble the main body of control part on the back cover.

## 1-3. Wiring




### Cautions

- Make the wiring after checking whether the wiring cable is applied for current with tester by switching off the main electric power in every supplied instrument.
- Never contact to the terminal because of the risk of electric shock during application of the current (Electric power on).
- Make the wiring after switching off the main electric power certainly.

### (1) How to make the wiring



- Recommended specification for electric cable : Vinyl insulated electric cable KSC3304 0.9~2.0mm<sup>2</sup>
- Recommended specification for terminal : Use the pressed terminal with insulation sleeve which is proper to the M3 screw as shown in [Fig. 1].
- Source of noise
  - (A) Relay and contact point
  - (B) Solenoid coil and solenoid valve
  - (C) Electric power line
  - (D) Induced load
  - (E) Inverter
  - (F) Commutates in motor
  - (G) SCR for controlling the phase angle
  - (H) Wireless communication device
  - (I) Welding machine
  - (J) High pressure ignition device and etc
- Solution for noise
  - (A) Make the wiring with caution for the following points from the noise creation source.
  - (B) Make the wiring for the input circuit with placing the gap from the power circuit and ground circuit.
  - (C) Use the shield line for the noise from the electrostatic induction.
  - (D) Connect the shield line to the ground terminal according to the necessity not to make the 2 point ground.
  - (E) Make the wiring in tight twisting for the noise from the electric induction.

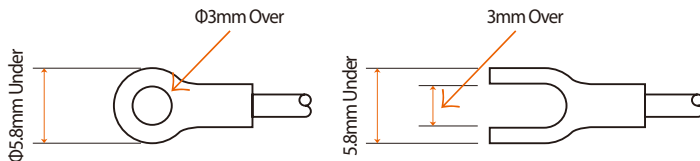

[Fig. 1]

## (2) Terminal layout


► display part terminal

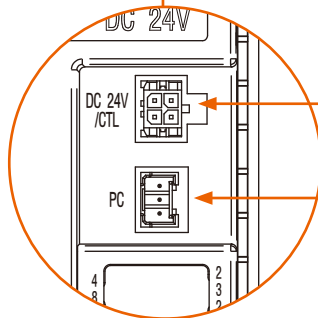
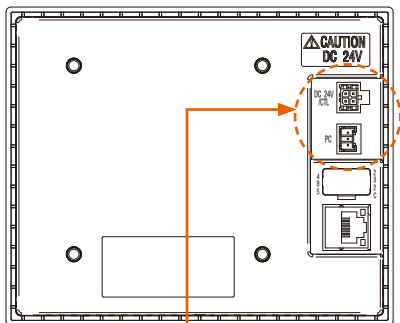


**DC24V / CTL**  
Display part to control part  
(Power, Communication)connection

**PC**  
Display part to PC connection

► Control part terminal

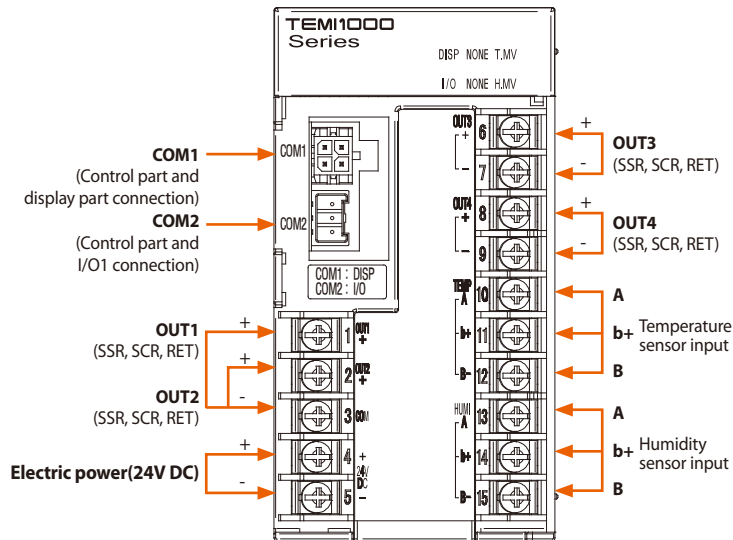

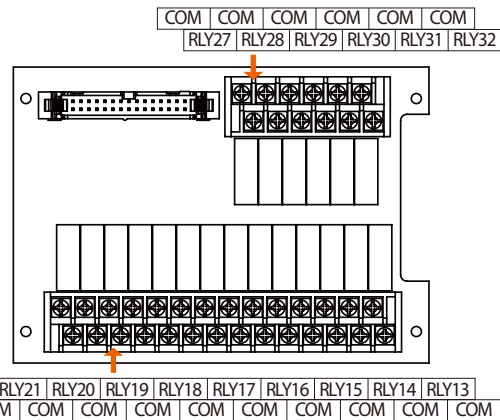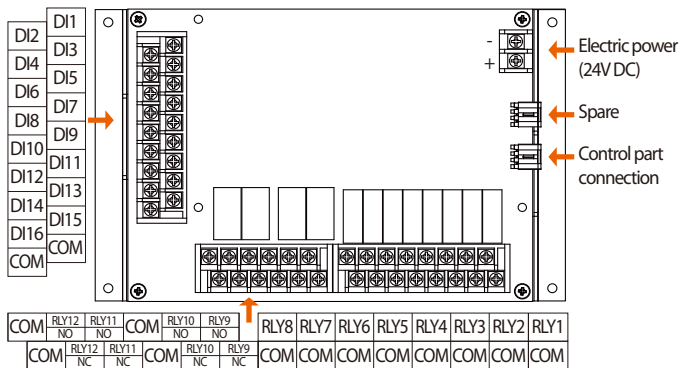

### Control part terminal

### Setting range

OUT1

Temperature - SSR, SCR, RET

OUT2

Temperature - SSR, SCR, RET

OUT3

Humidity - SSR, SCR, RET


OUT4

Humidity - SSR, SCR, RET


### (3) Electric power circuit

- Use the cable with equivalent or above the vinyl insulated cable (KSC3340) or electric cable with vinyl insulated cable.

#### ▶ How to make electric wire for TEM1000

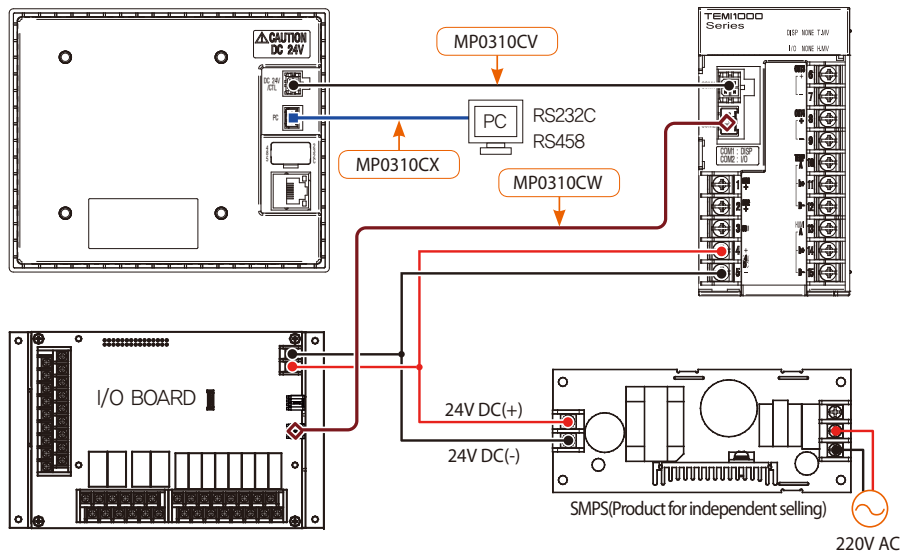

#### ▶ How to connect the electric power for control unit

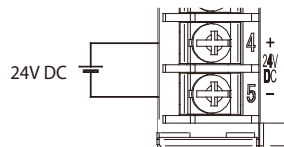

#### References

- ▶ Use core(TDK: ZCAT3035-1330) for each unit power (24V DC) supply.




#### Cautions

When wiring the MP0310CV / CW / CX cable, wire the cable so that no more than 0.5kgf of force is applied to the cable. Pulling with excessive force may result in connection failure or disconnection.



① Connection of measurement input (Analog input)

- Switch "OFF" the power of TEMI1000 main body and external power supply certainly for connecting the measurement input because of electric shock risk.
- Use the shield attached input cable and the shield shall be grounded by one point.
- Connect the signal line for measurement input by placing the gap between with electric power cable or ground circuit.
- Use the electric cable with less resistance and no difference in resistance.

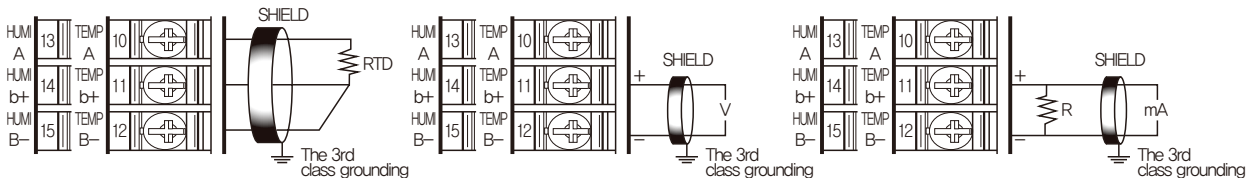

▶ Input of the temperature detecting resistor (RTD)


▶ Input of the direct current voltage (DC voltage)

▶ Input of the direct current (DC current)

② Control output connection (Analog output)

- Connect by using caution for output polarity. The misconnection becomes a reason for failure in main body.
- Use the shield attached output cable and the shield shall be grounded by one point.
- The COM(-) terminal of OUT1 and OUT2 is used for common terminal of COM(-) regardless of the type.


OUT1 and OUT2 electric voltage pulse output (SSR)

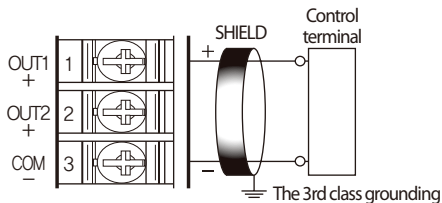

SSR : 24V DC (12V DC min, 600 $\Omega$  min)

- ▶ Use COM for OUT1, OUT2 output terminal. 24V DC is output in output voltage checking in unloaded state in case of stop or 0% control power. Check the output voltage after connecting the load (SSR).


OUT1 and OUT2 electric current output (SCR/RET)

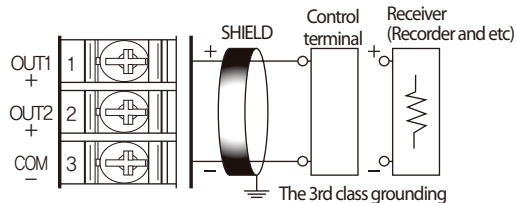

SCR / RET : 4~20mA DC, 600 $\Omega$  max


- ▶ Use common COM for OUT1, OUT2 output terminal. Connection method is same.

### OUT3 and OUT4 voltage pulse output (SSR)

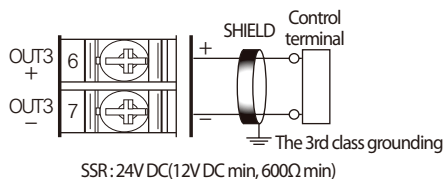

- ▶ Use independent COM for OUT3, OUT4 output terminal. Connection method is same.


### OUT3 and OUT4 electric current output (SCR/RET)

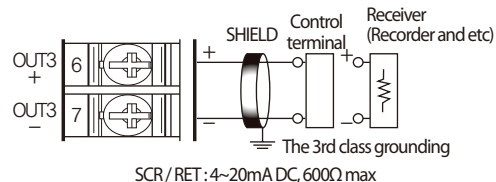


- ▶ Use independent COM for OUT3, OUT4 output terminal. Connection method is same.

### ③ Connection for external contact point output

- Switch "OFF" the power of TEM1000 main body and external power supply certainly for connecting the measurement input because of electric shock risk.
- Contact point output: Under 30V DC 1A, 250V AC 1A for Normal and Open

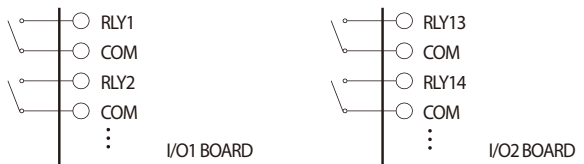

Under 30V DC 1A, 250V AC 1A

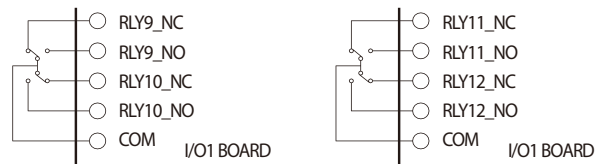


NO (Normal Open): Under 30V DC 1A, 250V AC 1A


NC (Normal Close): Under 30V DC 1A, 250V AC 1A

### ④ Connection of contact input (DI)

- Use the no voltage contact point (Relay contact point and etc) for the external contact point.
- Use no voltage contact point with sufficient opening and closing function for the terminal voltage (About 5V) "ON" and electric current (About 1mA) in blocking the no voltage contact point.
- Use the open collector for under 2V of both terminal voltage in "ON" for contact point and under 100μA of leaking current in "ON."

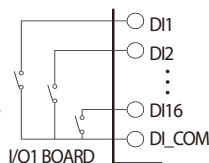


▶ Relay contact point input

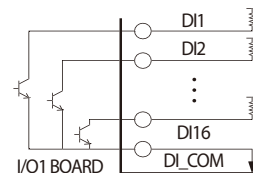


▶ Transistor contact point input

⑤ Use of sub relay

- "ON/OFF" the load by using the sub relay when the resistance load exceeds the relay specification of the product.
- Constitute the spark removing surge suppressor and insert parallel with the CR filter (In case of using AC) or diode (In case of using DC.) certainly because the use of the same inductance (L) load such as sub relay or solenoid valve becomes a reason for mal function or failure in the relay.
- CR filter recommendation
  - Sungho Electronics Co., Ltd : BSE104120 (20 25V (0.1 $\mu$ +120 $\Omega$ ))
  - Hana Parts Co., Ltd : HN2EAC
  - Songmi Electric Equipment Co., Ltd : CR unit 953, 955
  - Jiwol Electric Equipment Manufacturing Co., Ltd : SKV, SKVB etc
  - Shinyoung Communication Industry Co., Ltd : CR-CFS, CR-U etc




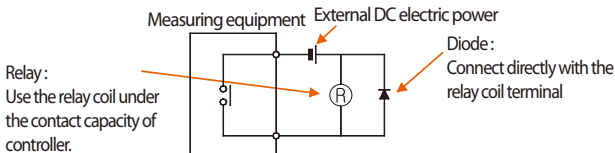


▶ In case of DC relay

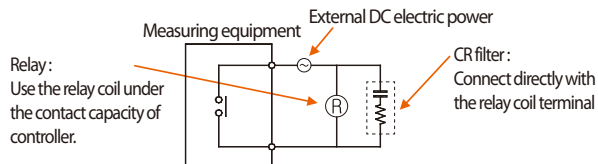


▶ In case of AC relay

⑥ TEMI1000 DISPLAY/CONTROL Unit cable connection

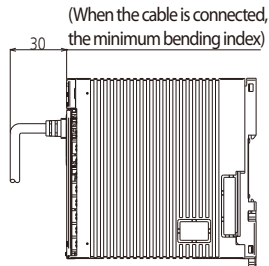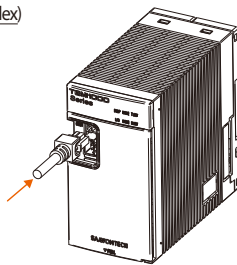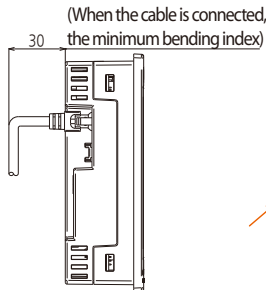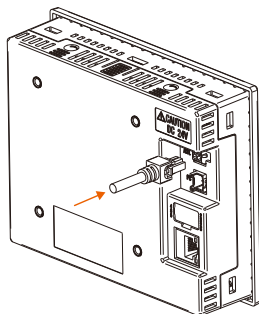


## 1-4. Display function and name

### ▶ TEMI1500 display part

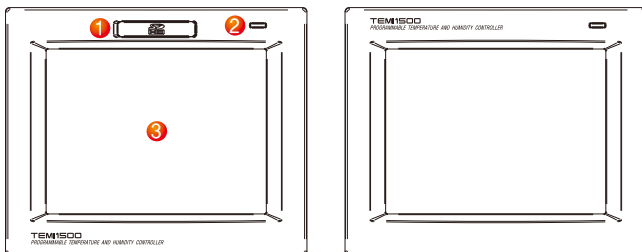


- ① SD card insertion part (Use for SD card option)
- ② Lamp (Lighting in "OFF" of backlight/Run: Green, Stop: Red)
- ③ Screen display part

### ▶ TEMI1900/1300 display part

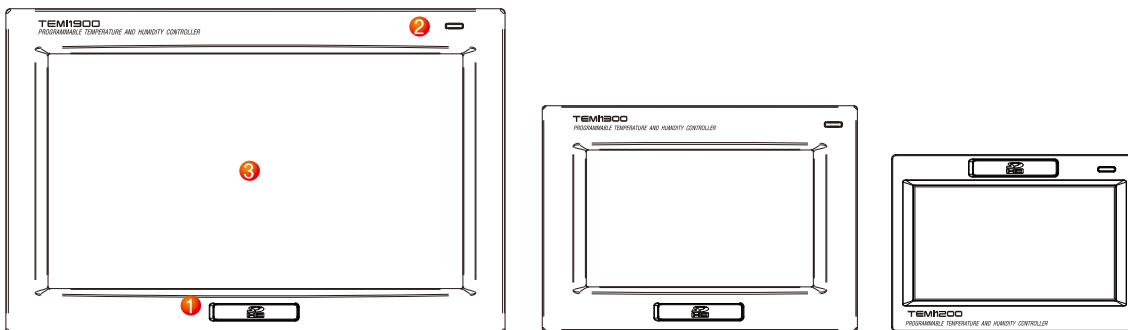

## 1-5. Control part LED


- The lamps for displaying the state of each part

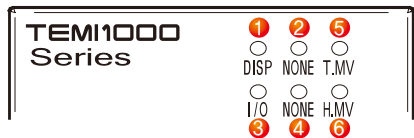

- |   |  |
|---|--|
| ① | Communication state display lamp for display part and control part<br>(The lamp flashes in normal communication.)      |
| ② | unused   |
| ③ | Communication state display lamp between the control part and I/O board<br>(The lamp flashes in normal communication.) |
| ④ | unused   |
| ⑤ | Temperature side control output display alarm<br>(The lamp flashes depending on the control output of temperature.)    |
| ⑥ | Humidity side control output display lamp<br>(The lamp flashes depending on the control output of humidity.)           |

## 1-6. SD covers the opening and closing and precautions

- When you open the SD cover, ① the projection of the direction of the push up the next area.
- When you close the SD cover, push the SD cover groove.
- SD cover after open, do not pull or force 0.4kgf.

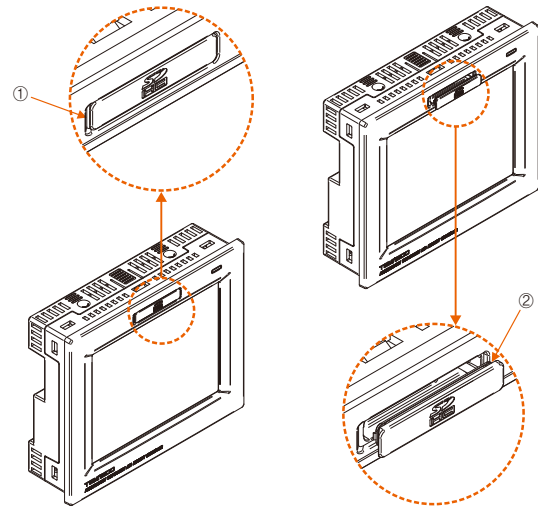

### CAUTION Cautions

- SD cover after open, do not pull or force 0.4kgf.  
Pulling force of more ② parts will be damaged.

*Part*  
**02**

## **System parameter setting**

2-1 Setting button operation .....	21
2-2 System parameter setting screen .....	22
2-3 System parameter setting sequence .....	23




## 02. System parameter setting

### 2-1. Setting button operation


Button type	Button operation
<input type="text"/>	It is used for inputting the general numbers and name.
<input type="text"/> ▼	It is used for selection for one out of many types.
<input checked="" type="radio"/> <input type="radio"/> <input type="radio"/>	It is used for selection for one out of more than 2 parameter setting. (ON/OFF/Inactive state)
<input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	It is used for selection of Y/N for the corresponding parameter. (ON/OFF/Inactive state)
Next	It is used for screen conversion.
▲ ▼	It is used for increasing or decreasing of the page within the screen.
◀ ▶	It is used for the page conversion by the decrease and increase in time axis on the same screen.

## 2-2. System parameter setting screen


- This product is a Temperature and Humidity Programmable Controller designed in dialogue type touch screen for easy use.
- Please refer to the [1-1 Basic operation flow chart] in [operation manual].
- When ① and ② on the [Fig. 2-1 Main screen] are pressed sequentially, the password box to move to the system parameter setting screen is activated.
- When the password in input in [Fig. 2-2 password input screen] is input, it is converted to [Fig. 2-3 system parameter setting screen]
  - The password in case of outgoing from the factory is set in the beginning.
  - Set the password in [12-1 Basic screen display setting] certainly at the necessity of blocking the access of the general user.

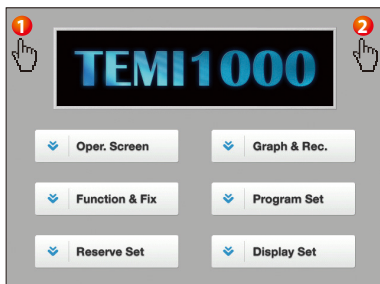

[Fig. 2-1] Main screen (Basic screen)

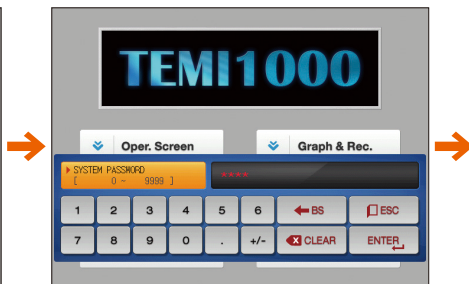

[Fig. 2-2] Password input screen

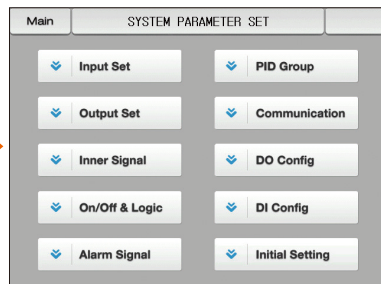


[Fig. 2-3] System parameter setting screen



Item	Function
Sensor input setting	Setting of parameter related with the type of input sensor and sensor input [Refer to 3-1]
Control & transmitting output	Setting of parameter related with the output type and output [Refer to 4-1]
Inner signal	Setting of parameter related with inner signal [Refer to 5-1]
ON/OFF signal	Setting of parameter related with ON/OFF signal [Refer to 6-1]
Alarm signal	Setting of parameter related with alarm signal [Refer to 7-1]
PID group	Setting of parameter related with PID [Refer to 8-1]
Setting of communication environment	Setting of parameter related with communication [Refer to 9-1]
DO relay setting	Setting of parameter related with I/O board relay output signal [Refer to 10-1]
DI function and Operation	Setting of parameter related to the external contact input signals [Refer to 11-1]
System initial setting	Setting of parameter related with the basic setting for screen configuration [Refer to 12-1]

### 2-3. System parameter setting sequence

- The sequence of parameter setting in priority for product installation is as follows.

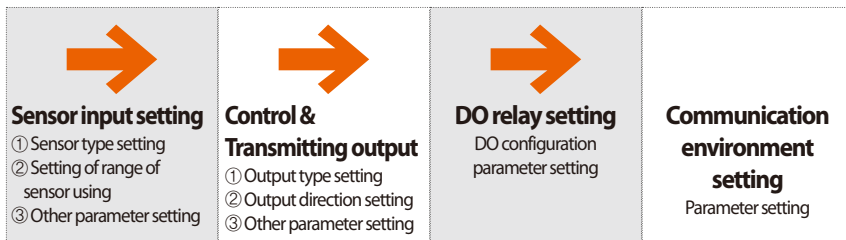

#### References


- The device may be mal operated in case of changing the setting data is changed into wrong data inside the system setting screen.

*Part* **03**


## Sensor input setting

3-1 Sensor input screen .....	26
3-2 Sectional calibrating input setting .....	31


# Sensor input flow chart

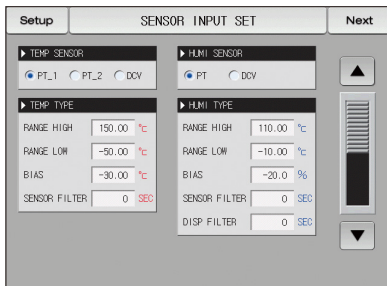


[Fig. 3-1] In case of setting for sensor input PT\_1

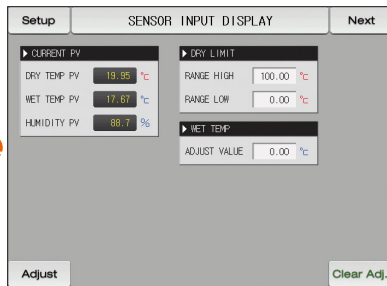

[Fig. 3-4] Sensor input display screen

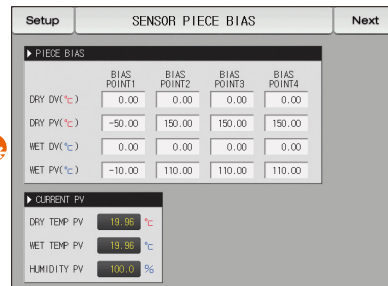

[Fig. 3-5] In case of setting the sensor input for each range

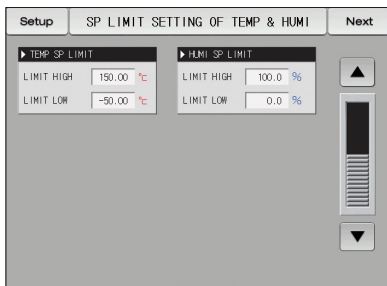

[Fig. 3-3] TEMP & HUMI limitation setting screen




## 03. Sensor input setting


### 3-1. Sensor input setting

#### (1) Sensor input screen 1

- Select the sensors for temperature (PT\_1, PT\_2 and DCV) and humidity (PT, DCV).
- The sensors shall be set firstly certainly because when the sensor selected, the parameters will be initialized.
- While Operating is run, the temperature sensor, humidity sensor, sensor type, upper limit range and lower limit shall not be changed.

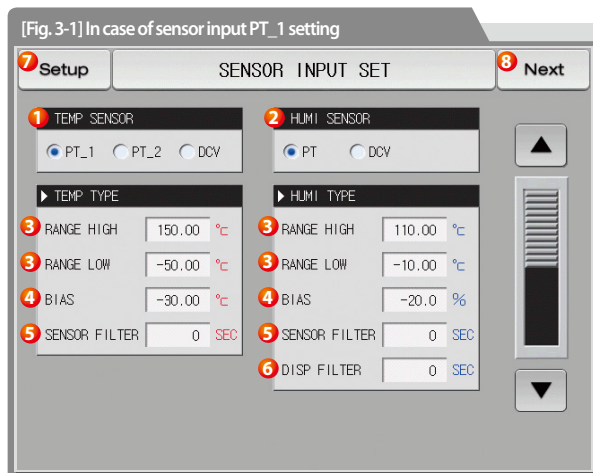

- ① Setting of the temperature sensor
  - In case of changing the sensor, the parameters with expression of EU and EUS are changed in proportion to the current data. However, the setting value for upper and lower limit will be initialized
- ② Setting of the humidity sensor
  - In case of changing the sensor, the parameters with expression of EU and EUS are changed in proportion to the current data. However, the setting value for upper and lower limit will be initialized
- ③ Setting the use range of the sensor
  - The parameters related with EU and EUS such as the inner signal and alarm are changed in proportion to the current data in case of changing the lower range (RL) and upper range (RH)
  - Refer to [Table 3-1]
- ④ Input calibration (BIAS function)
  - Calibrate the temperature and humidity input error
- ⑤ Sensor filter
  - Setting of the sensor filter time when high frequency noise is included into the input signal
- ⑥ It is set to relax the shaking of indicator for PV due to the sensitive response of sensor during normal control status.
- ⑦ Move to [Fig. 2-3 System parameter setting screen]
- ⑧ Move from the current screen to the next screen

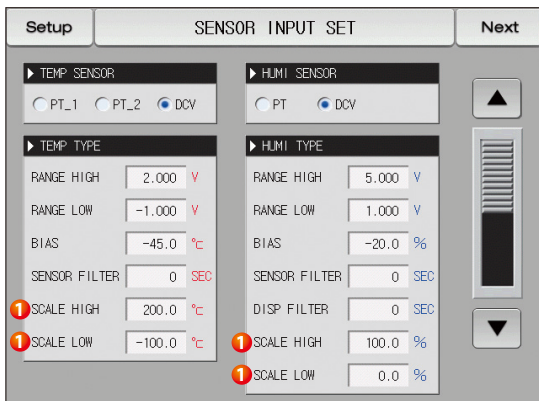


[Fig. 3-2] Screen for selection of sensor input DCV

①

It is displayed in case that temperature and humidity sensor set as DCV

## (2) Sensor input screen 2

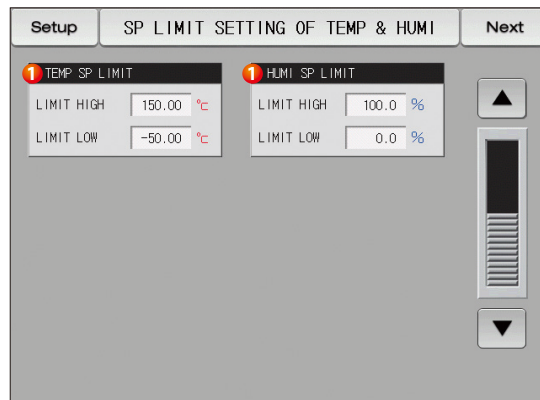

[Fig. 3-3] TEMP & HUMI limitation setting screen

①


Set to the range of setting TEMP&HUMI values to be controlled.

Parameter	Setting range	Unit	Initial data
SP upper limit setting	EU(0.0 ~ 100.0%)	EU	EU(100.0%)
SP lower limit setting	EU(0.0 ~ 100.0%)	EU	EU(0.0%)

[Table 3-1] Sensor input setting screen #1 parameter

	Parameter	Setting range	Unit	Initial data
Temperature	Sensor	PT_1 (-90.00 ~ 200.00°C) PT_2 (-100.0 ~ 300.0°C) DCV (-1.000 ~ 2.000V)	ABS	PT_1
	Upper limit range	T.EU(0.00 ~ 100.00%)	T.EU	T.EU(100.00%) However, sensor set as PT_1, it will be "150.00"
	Lower limit range	Lower limit range < Upper limit range	T.EU	T.EU(0.00%) However, sensor set as PT_1, it will be "-50.0"
	Input calibration	T.EUS (-100.00 ~ 100.00%)	T.EUS	T.EUS(0.00%)
	Sensor filter	0 ~ 120 SEC	ABS	0
	Scale upper limit	-100.0 ~ 200.0°C	°C	200.0
	Scale lower limit	Scale lower limit < Scale upper limit	°C	-100.0
Humidity	Sensor	PT (-10.0 ~ 110.0°C) DCV (1.000 ~ 5.000V)	ABS	PT
	Upper limit range	H.EU(0.0 ~ 100.0%)	H.EU	H.EU(100.0%)
	Lower limit range	Lower limit range < Upper limit range	H.EU	H.EU(0.0%)
	Input calibration	H.EUS (-100.0 ~ 100.0%)	H.EUS	H.EUS(0.0%)
	Sensor filter	0 ~ 120 SEC	ABS	0
	Display filter	0 ~ 120 SEC	ABS	0
	Scale upper limit	0.0 ~ 100.0°C	%	100.0
Scale lower limit	Scale lower limit < Scale upper limit	%	0.0	

### (3) Sensor input screen 3

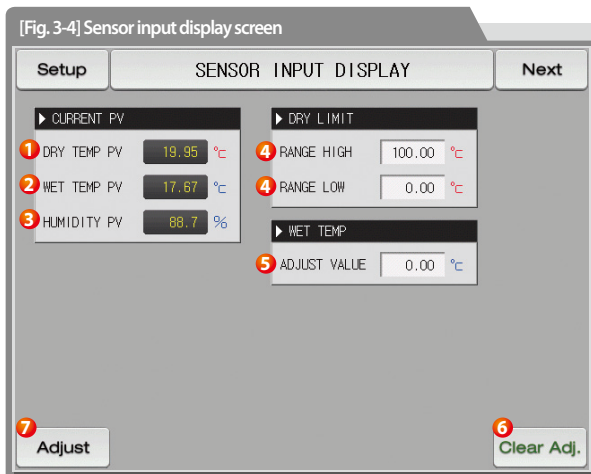


- ① Display present value (PV) of dry-bulb temperature
  - Impossible to change by touching as it is for reading only
- ② Display present value (PV) of wet-bulb temperature
  - Impossible to change by touching as it is for reading only
- ③ Display present value (PV) of relative humidity
  - Impossible to change by touching as it is for reading only
- ④ Set the upper/lower limit of relative humidity display condition range (Dry Limit)
  - Set to display the relative humidity within the wished dry-bulb temperature.
- ⑤ It adjusts the sensor data of wet-bulb temperature
  - It is available only when temperature /humidity sensor type is "PT"
- ⑥ It deletes the sensor adjusted data of wet-bulb temperature.
  - It is available only when temperature /humidity sensor type is "PT"
  - The button is inactive during operation.
- ⑦ It mates the temperature data of wet-bulb and dry-bulb through automatic calculation of sensor adjusted data in wet-bulb temperature.
  - It is available only when temperature /humidity sensor type is "PT"
  - Firmly used before installing the gauze on the temperature sensor in wet-bulb
  - The button is inactive during operation.

Parameter		Setting range	Unit	Initial data
Relative-Humidity display condition (DRY)	Upper limit range	0.00 ~ 100.00	℃	100.00
	Lower limit range	Lower limit range < Upper limit range	℃	0.00
Wet bulb temperature (Wet)	Sensor adjusted data	H.EUS (-100.00 ~ 100.00%)	H.EUS	H.EUS(0.00%)

※ When input line disconnected, It displays "S.OPEN", and the control output data is fixed in 0.0%.

#### (4) Sensor input screen 4

- It adjusts Input ranges of temperature and humidity as per the type of humidity sensor.
- The calibration for each range is made in a linear equation method between the calibration points.

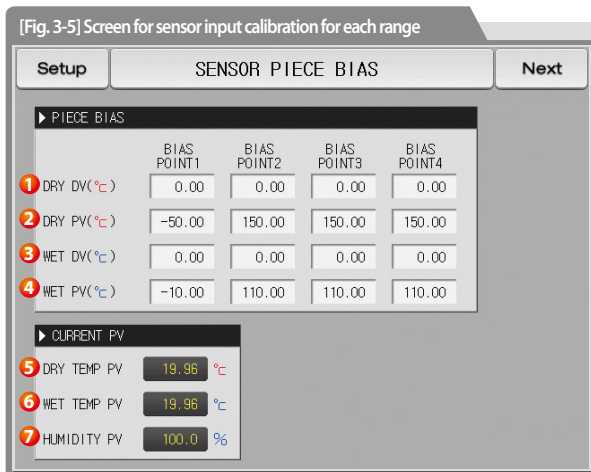


- ① It adjusts the calibration temperature of dry-bulb temperature in each standard temperature.
- ② It adjusts the calibration temperature of each basic point for calibration of dry-bulb temperature.
- ③ It adjusts the calibration temperature in each basic temperature of wet-bulb temperature.
  - It displays in humidity (%) in case of DCV input type.
- ④ It sets the temperature for each basic point for calibration of wet-bulb temperature.
  - It displays in humidity (%) in case of DCV input type.
- ⑤ It displays the dry-bulb temperature which is applied input calibration adjusting
  - Impossible to change by touching as it is for reading only
- ⑥ It displays the wet-bulb temperature which is applied input calibration adjusting
  - Impossible to change by touching as it is for reading only
- ⑦ It displays the humidity which is applied input calibration adjusting
  - Impossible to change by touching as it is for reading only

Parameter		Setting range	Unit	Initial data
DRY	DV	T.EUS(-10.00 ~ 10.00%)	T.EUS	T.EUS(0.00%)
	PV	T.EU(0.00 ~ 100.00%)	T.EU	T.EU(0.00%)
WET	DV	H.EUS(-10.00 ~ 10.00%)	H.EUS	H.EUS(0.00%)
	PV	H.EU(0.00 ~ 100.00%)	H.EU	H.EU(0.00%)



## 3-2. Sectional calibration input setting

- It displays the range input calibration adjusting of dry-bulb temperature.
- The input calibration adjusting between wet-bulb temperature and humidity is same with the case for dry-bulb temperature.

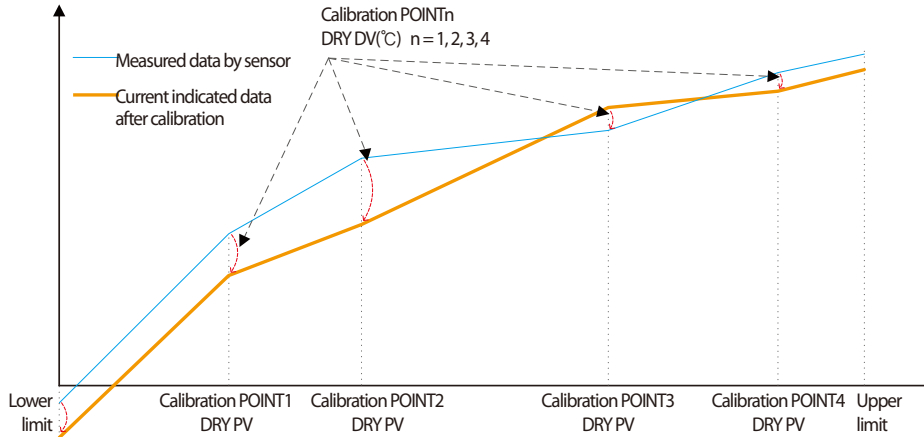

### References

- Calculation for each calibration section

① Temperature at the lower limit ~ calibration 1 point after calibration = Measured data by sensor + calibration 1 point

② Temperature at the calibration 1 point ~ calibration 2 point after calibration = Measured data by sensor +

$$(\text{Measured data by sensor} - \text{calibration 1 point DRY PV}) \times \frac{(\text{Calibration 2 point DRY PV} - \text{Calibration 1 point DRY PV})}{(\text{Calibration 2 point DRY PV} - \text{Calibration 1 point DRY PV})} + \text{Data at calibration 1 point DRY PV}$$

## References

③ Temperature at the calibration 2 point~ calibration 3 point after calibration = Measured data by sensor +

$$\text{(Measured data by sensor - calibration 2 point DRY PV) X } \frac{\text{(Calibration 3 point DRY PV - Calibration 2 point DRY PV)}}{\text{(Calibration 3 point DRY PV - Calibration 2 point DRY PV)}} + \text{Data at calibration 1 point DRY PV}$$

④ Temperature at the calibration 3 point~ calibration 4 point after calibration = Measured data by sensor +

$$\text{(Measured data by sensor - calibration 3 point DRY PV) X } \frac{\text{(Calibration 4 point DRY PV - Calibration 3 point DRY PV)}}{\text{(Calibration 4 point DRY PV - Calibration 3 point DRY PV)}} + \text{Data at calibration 3 point DRY PV}$$

⑤ Temperature at the calibration 4 point~ Temperature at the upper limit after calibration = Measured data by sensor + Calibration 4 point DRY PV

*Part*

# 04

## Control & Transmitting output

4-1 Control output setting .....	35
4-2 Transmitting output setting screen .....	41


# Control & Transmitting output flow chart




[Fig. 4-1] Output type selection screen



[Fig. 4-9] Transmitting output setting screen  
(In case of PV, SP setting)

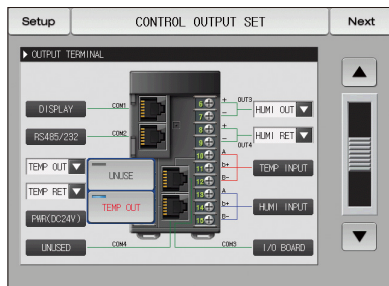

[Fig. 4-2] OUT1 output terminal setting screen

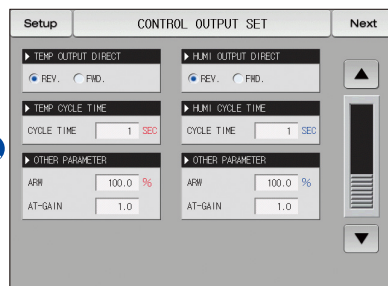

[Fig. 4-4] Output setting screen




## 04. Control & Transmitting output

### 4-1. Control output setting

#### (1) Output setting screen 1


- It sets the type of temperature and humidity control output terminal.

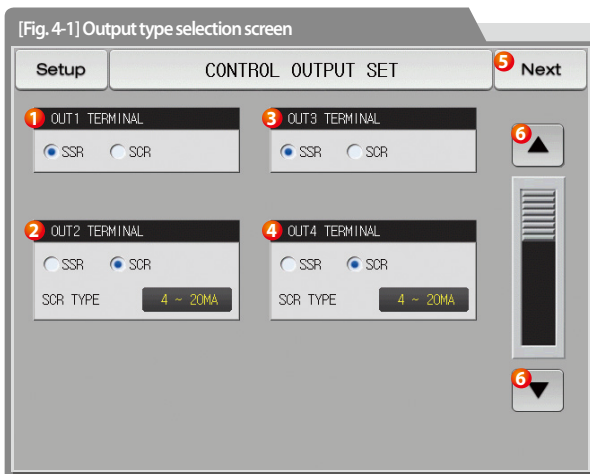


①	Setting the output type of OUT1 <ul style="list-style-type: none"><li>• SSR: Setting in case of using temperature control output</li><li>• SCR: Setting in case of using the temperature control output, temperature transmitting output</li></ul>
②	Setting the output type of OUT2 <ul style="list-style-type: none"><li>• SSR: Setting in case of using temperature control output</li><li>• SCR: Setting in case of using the temperature control output, temperature transmitting output</li></ul>
③	Setting the output type of OUT3 <ul style="list-style-type: none"><li>• SSR: Setting in case of using humidity control output</li><li>• SCR: Setting in case of using the humidity control output, humidity transmitting output</li></ul>
④	Setting the output type of OUT4 <ul style="list-style-type: none"><li>• SSR: Setting in case of using humidity control output</li><li>• SCR: Setting in case of using the humidity control output, humidity transmitting output</li></ul>
⑤	Moving from current screen to the next screen
⑥	Moving to the next or previous screen using the up/down button

## (2) Output setting screen 2

- The following figure is a screen to check/set the setting on the product with graphic.

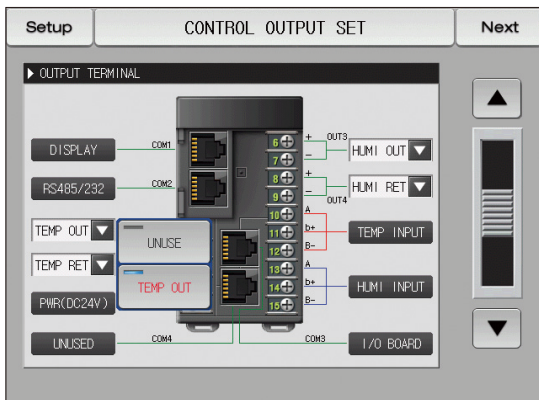

[Fig. 4-2] OUT1 output terminal selection screen (General)

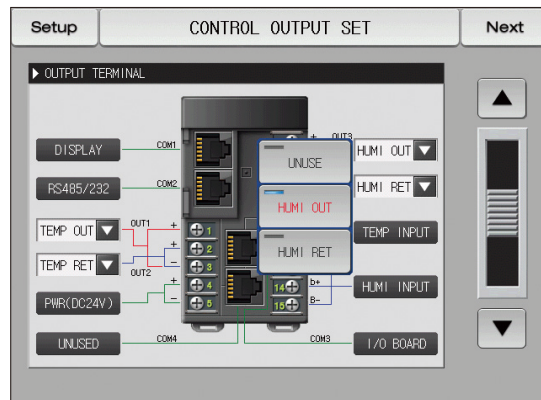

[Fig. 4-3] OUT3 output terminal selection screen (General)

### References

- The temperature control output and unused setting screen are displayed as shown when SSR was set in OUT1 output terminal.


### References

- The humidity control output, humidity transmitting output setting screen are displayed as shown when SCR was set in OUT3 output terminal.

Parameter		Setting range	Unit	Initial data
OUT1 output	SSR: No use, Temperature output	SCR: No use, Temperature output, Temperature transmitting	ABS	Temperature output
OUT2 output	SSR: No use, Temperature output	SCR: No use, Temperature output, Temperature transmitting	ABS	Temperature transmitting
OUT3 output	SSR: No use, Humidity output	SCR: No use, Humidity output, Humidity transmitting	ABS	Humidity output
OUT4 output	SSR: No use, Humidity output	SCR: No use, Humidity output, Humidity transmitting	ABS	Humidity transmitting

### (3) Output setting screen 3


- It sets the parameter to temperature and humidity control

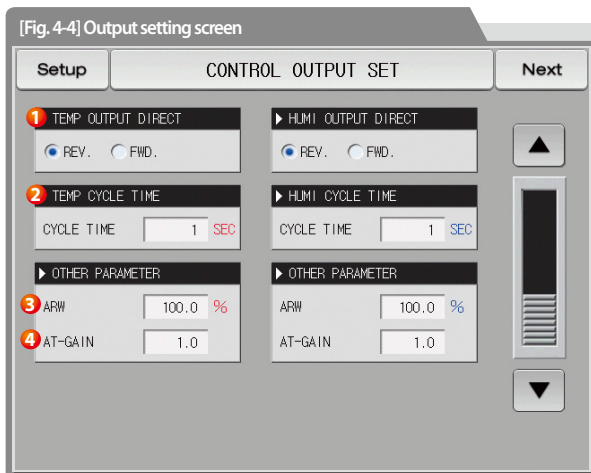

- ① Setting the PID control operation method
  - Refer to [① Operation direction]
- ② Setting the period for the operation of control output when control output is SSR (SOLID STATE RELAY)
- ③ Setting the anti reset wind-up ratio (Data) adopted in anti reset wind-up function operation
  - Refer to [③ Anti reset wind-up]
- ④ Use to control the PID data at once depending on the characteristics of the system after Autotuning
  - Control output = PID x Control time constant (Gain)
  - Refer to [④ Control time constant]


Parameter	Setting range	Unit	Initial data
Operation direction	Reversed operation, normal operation	ABS	Reversed operation
Output period	1~300 SEC	ABS	1
Anti reset wind-up	0.0(AUTO), 0.0 ~ 200.0%	%	100.0
Control time constant	0.1~10.0	ABS	1.0

## ① Operation direction

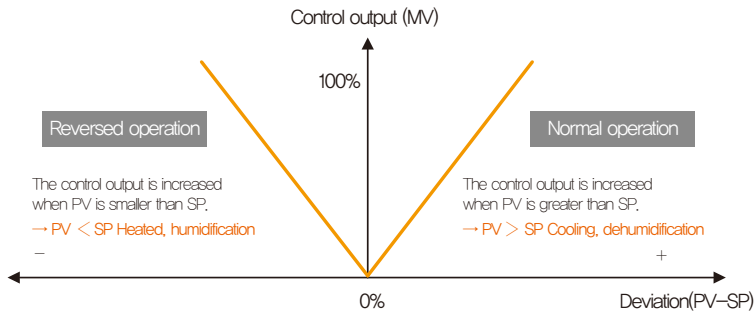

## ② Output period

- It is applied when the control output type is "SSR(Solid State Relay)".
- It means the time of 1 cycle of "ON/OFF" in the set time.
- "SSR" when output period is 10 seconds.

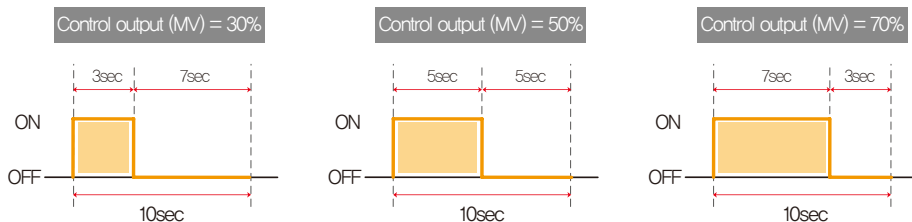




### ③ Anti reset wind-up

- It is one of the methods for effective control in case of external disturbance.
- It is a function to inhibit the over shoot by anti reset wind-up when the control output reached to the maximum point.
- When  $I = 0$ , it is not operated in the PID setting data.

► When there is no anti reset wind-up (ARW) function

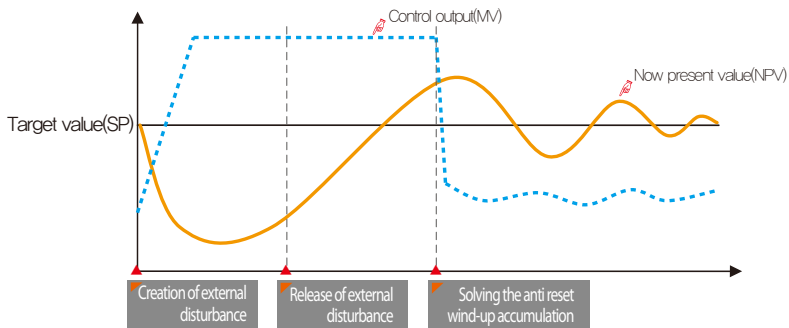

**NOTE** The over shoot is big as the time to solve the anti reset wind-up accumulation gets longer even though the external disturbance is released and it takes time for now present value to be stabilized.

#### Creation of external disturbance

:The now present value (NPV) is decreased and control output data (MV) is increased at the moment of external disturbance creation.


#### Release of external disturbance

:The control output value (MV) is 100% output by the accumulated anti reset wind-up at the moment of release of external disturbance

#### Solving the anti reset wind-up accumulation

:Control output value (MV) is decreased by solving the anti reset wind-up accumulation

► When there is anti reset wind-up (ARW) function

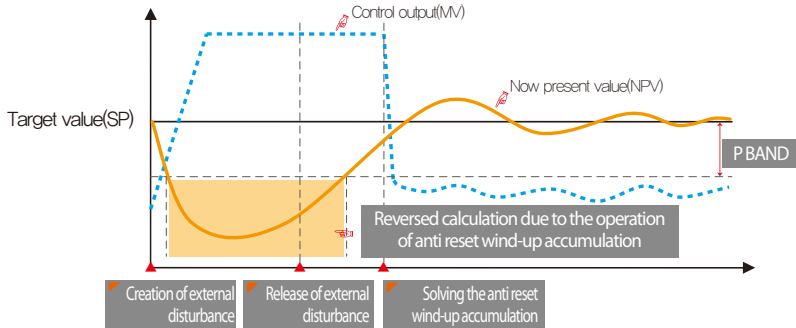

Creation of external disturbance

:The now present value (NPV) is decreased and control output data (MV) is increased at the moment of external disturbance creation.

Release of external disturbance

:The control output value (MV) is 100% output by the accumulated anti reset wind-up at the moment of release of external disturbance

Solving the anti reset wind-up accumulation

:Control output value (MV) is decreased by solving the anti reset wind-up accumulation




**NOTE** The over shoot is small as the time to solve the anti reset wind-up accumulation gets shorter by reversed calculation of the anti reset wind-up before entering of now present value (NPV) to  $\pm P$  Band and now present value is stabilized soon.

**Example** what is the P Band for input upper limit (RH) = 100.0°C, Input lower limit (RL) = -100.0°C, Proportional band (P) = 10.0%, anti reset wind-up (ARW) = 200%?

- Answer**
- ① Input range = Input upper limit (RH) - Input lower limit (RL) = 100.0°C - (-100.0°C) = 200.0°C
  - ② Input range Proportional band (P) = 200.0°C x 10.0% = 20.0°C
  - ③ P Band = ② x Anti reset wind-up (ARW) = 20.0°C x 200% = 40.0°C


④ Control time constant

- It is used to change the control characteristics based on the set PID value after auto tuning.
- It can control the control time constant depending on the object of control and characteristics.
  - Control time constant < 1.0 → The response speed is fast, but the hunting is severe.
  - Control time constant > 1.0 → The over shoot is reduced, but the response speed becomes slower.

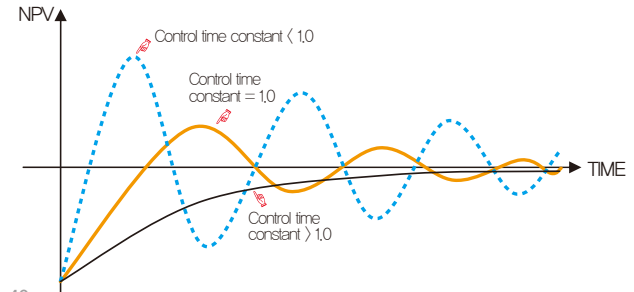

## 4-2. Transmitting output setting screen

- It is a screen to set the type of temperature and humidity transmitting output.
- Either PV or SP can be set for transmitting output.

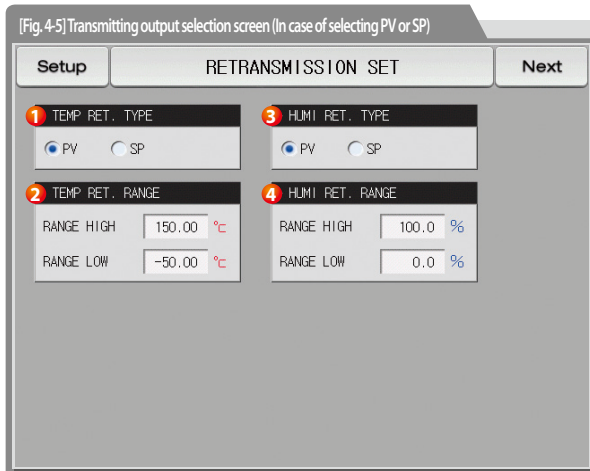


- ① Setting the type of temperature transmitting output
- ② Setting the upper-lower limit of the temperature transmitting output
- ③ Setting the type of humidity transmitting output
- ④ Setting the upper-lower limit of the humidity transmitting output

Parameter	Setting range	Unit	Initial data
Transmitting type	PV, SP	ABS	PV
Temperature transmitting upper limit range	T.EU(0.00~100.00%) Temperature transmitting lower limit range < Temperature transmitting upper limit range	T.EU	T.EU(100.00%) T.EU(0.00%)
Humidity transmitting upper limit range	H.EU(0.0~100.0%) Humidity transmitting lower limit range < Humidity transmitting upper limit range	H.EU	H.EU(100.0%) H.EU(0.0%)

### (2) Output depending on the transmitting type

- The transmitting output is in 4~20mA.
- User after attaching the 250Ωresister (Accurate resister) at both ends of transmitting output when 1~5 V is used for transmitting output.

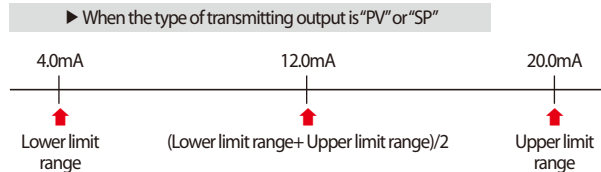

*Part* **05**

## Inner signal(IS)

5-1 Inner signal setting .....	44
5-2 Inner signal operation .....	46

Setup		INNER SIGNAL SET	
▶ IS1 TARGET		▶ IS2 TARGET	
<input checked="" type="radio"/> TEMP	<input type="radio"/> HUM1	<input checked="" type="radio"/> TEMP	<input type="radio"/> HUM1
▶ IS1 TYPE		▶ IS2 TYPE	
<input checked="" type="radio"/> SP	<input type="radio"/> PV	<input type="radio"/> TSP	
▶ IS1 BAND		▶ IS2 BAND	
<input checked="" type="radio"/> IN-B	<input type="radio"/> OUT-B		
▶ IS1 RANGE & DELAY		▶ IS2 RANGE & DELAY	
RANGE HIGH	-50.00 °C	RANGE HIGH	-50.00 °C
RANGE LOW	-50.00 °C	RANGE LOW	-50.00 °C
DELAY TIME	00.00 M.S	DELAY TIME	00.00 M.S



Setup		INNER SIGNAL SET	
▶ ISS TARGET		▶ IS10 TARGET	
<input checked="" type="radio"/> TEMP	<input type="radio"/> HUM1	<input checked="" type="radio"/> TEMP	<input type="radio"/> HUM1
▶ ISS TYPE		▶ IS10 TYPE	
<input checked="" type="radio"/> SP	<input type="radio"/> PV	<input type="radio"/> TSP	
▶ ISS BAND		▶ IS10 BAND	
<input checked="" type="radio"/> IN-B	<input type="radio"/> OUT-B		
▶ ISS RANGE & DELAY		▶ IS10 RANGE & DELAY	
RANGE HIGH	-50.00 °C	RANGE HIGH	-50.00 °C
RANGE LOW	-50.00 °C	RANGE LOW	-50.00 °C
DELAY TIME	00.00 M.S	DELAY TIME	00.00 M.S

[Fig. 5-1] Inner signal setting screen #1



[Fig. 5-2] Inner signal setting screen #2



## 05. Inner signal (IS)

### 5-1. Inner signal setting

- It is a screen to set the object of application, type and operation of each inner signal.
- Setting of 10 (IS1~IS10) inner signal operations is available
- The operation range and delay time of inner signal can be set in [Fig. 5-1] Inner signal setting screen #1.

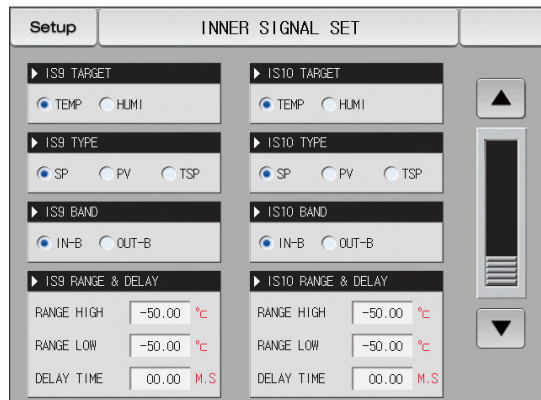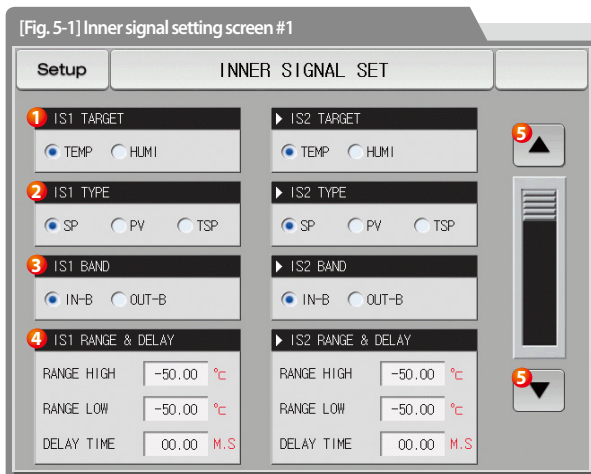

[Fig. 5-2] Inner signal setting screen #2

① Setting the application target of inner signal.

Setting the application type of inner signal.


- SP : Set value

② • PV : Present value (It has EUS 0.5% fixed hysteresis when PV is selected.)


- TSP : Target set value in program control

Setting of inner signal operation band

- Within the range : The operation of inner signal is "ON" when the selected application

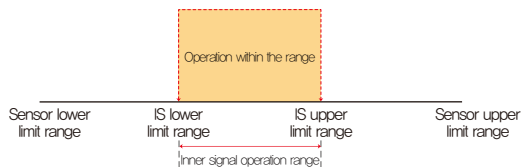

③ • Out of range: The operation of inner signal is "ON" when the selected application from application type of inner signal (SP, PV and TSP) is located out of the upper and lower limit of operation range.

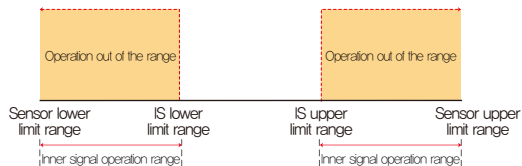

Setting of the upper/lower limit of the operation range and delay time.

④ • Upper limit range/lower limit range: Setting the operation range of inner signal application

- Delay time: Setting of the delay time to be applied in inner signal operation


⑤ Moving to the previous or next screen using up/down button.

Parameter		Setting range	Unit	Initial data
Inner signal #n target		Temperature, Humidity	ABS	Temperature
Inner signal #n application		SP, PV, TSP	ABS	SP
Inner signal #n operation band		Within the range, out of range	ABS	Within the range
Inner signal #n operation range	Upper limit	T.EU(0.00~100.00%) Inner signal #n lower limit range ≤ Inner signal #n upper limit range	T.EU/H.EU	T.EU(0.00%)
	Lower limit	H.EU(0.00~100.00%)	T.EU/H.EU	T.EU(0.00%)
	Delay time	Inner signal #n lower limit range ≤ Inner signal #n upper limit range		
		00.00~99.59 (MIN.SEC)	ABS	00.00

※ It can be set for #n = 1 ~ 10.


## 5-2. Inner signal operation

- When the change rate (Slope) is set in stationary operation, the “Target set value (TSP)” operates the same motion with “Target set value (TSP)” of program control, but, when the change rate (Slope) is not set, the “Target set value (TSP)” operates in “Now present value (SP)”

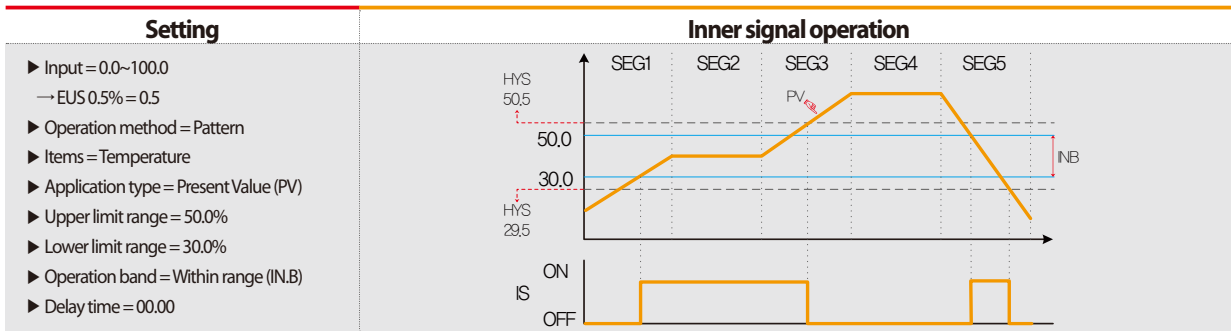





- ▶ Input = 0.0~100.0
- EUS 0.5% = 0.5
- ▶ Operation method = Pattern
- ▶ Items = Humidity
- ▶ Application type = Present Value (PV)
- ▶ Upper limit range = 50.0%
- ▶ Lower limit range = 30.0%
- ▶ Operation band = Out of range (OUT.B)
- ▶ Delay time = 00.00

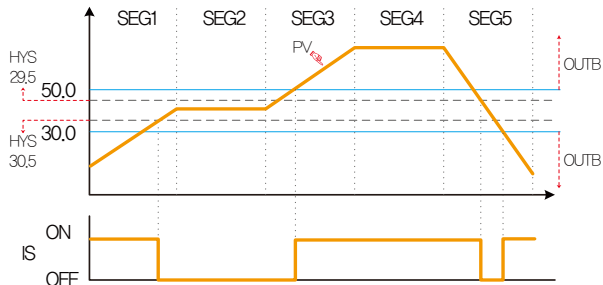

- ▶ Input = 0.0~100.0
- ▶ Operation method = Pattern
- ▶ Items = Humidity
- ▶ Application type = Present Value (PV)
- ▶ Upper limit range = 50.0%
- ▶ Lower limit range = 30.0%
- ▶ Operation band = Within range (IN.B)
- ▶ Delay time = 00.10

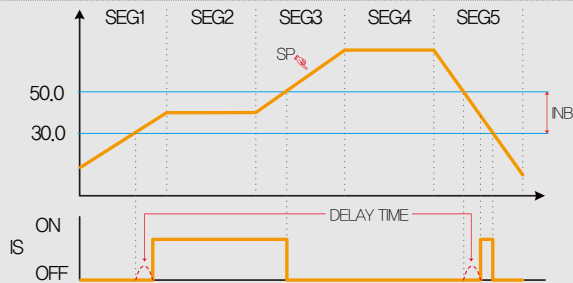

- ▶ Input = 0.0~100.0
- ▶ Operation method = Pattern
- ▶ Items = Humidity
- ▶ Application type = Present Value (PV)
- ▶ Upper limit range = 50.0%
- ▶ Lower limit range = 30.0%
- ▶ Operation band = Out of range (OUT.B)
- ▶ Delay time = 00.00

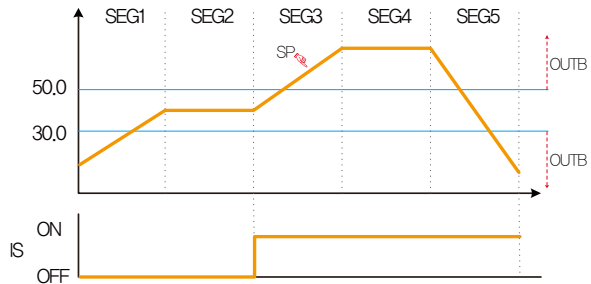

*Part*  
**06**

## **ON/OFF & Logic**

6-1 ON/OFF signal setting .....	50
6-2 ON/OFF signal operation .....	52
6-3 Logic signal setting .....	54

Setup TEMPERATURE ON/OFF SIGNAL Next

► T1 - T9 SIGNAL

	LOW SP	MIDDLE SP	HIGH SP	HIGH DEV	LOW DEV
T1(°C)	-50.00	-50.00	-50.00	0.00	0.00
T2(°C)	-50.00	-50.00	-50.00	0.00	0.00
T3(°C)	-50.00	-50.00	-50.00	0.00	0.00
T4(°C)	-50.00	-50.00	-50.00	0.00	0.00
T5(°C)	-50.00	-50.00	-50.00	0.00	0.00
T6(°C)	-50.00	-50.00	-50.00	0.00	0.00
T7(°C)	-50.00	-50.00	-50.00	0.00	0.00
T8(°C)	-50.00	-50.00	-50.00	0.00	0.00
T9(°C)	-50.00	-50.00	-50.00	0.00	0.00

[Fig. 6-1] Temperature ON/OFF signal setting screen

Setup LOGICAL SIGNAL SET Next

► LOGICAL SIGNAL1

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND

► LOGICAL SIGNAL2

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND

[Fig. 6-3] Logic signal setting screen

Setup HUMIDITY ON/OFF SIGNAL Next

► H1 - H4 SIGNAL

	LOW SP	MIDDLE SP	HIGH SP	HIGH DEV	LOW DEV
H1(%)	0.0	0.0	0.0	0.0	0.0
H2(%)	0.0	0.0	0.0	0.0	0.0
H3(%)	0.0	0.0	0.0	0.0	0.0
H4(%)	0.0	0.0	0.0	0.0	0.0

[Fig. 6-2] Humidity ON/OFF signal setting screen

Setup LOGICAL SIGNAL SET Next

► LOGICAL SIGNAL7

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND

► LOGICAL SIGNAL8

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND



[Fig. 6-3] Logic signal setting screen



## 06. ON/OFF & Logic

### 6-1. ON/OFF signal setting

- It is a screen to set the range, upper, lower deviation of ON/OFF signal.
- Can set nine pcs of temperature ON/OFF signals and four pcs of humidity ON/OFF signals
- Setting of relay number and delay time is available in [10-1(3) Temperature ON/OFF and Humidity ON/OFF signal relay setting screen].

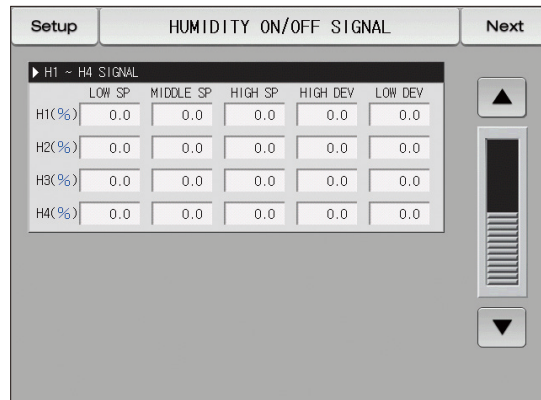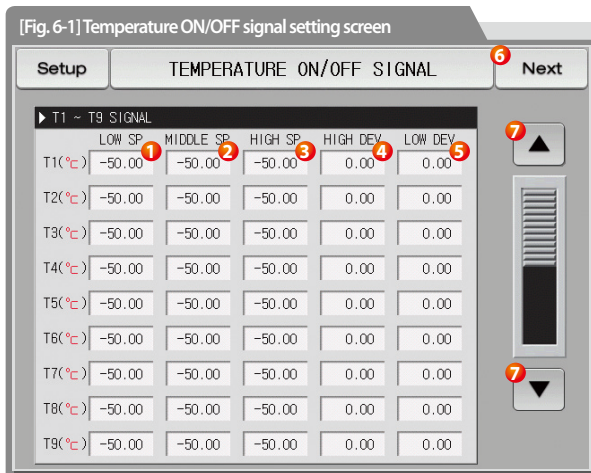

- Setting of lower limit SP boundary in ON/OFF signal operation
- Setting of medium limit SP boundary in ON/OFF signal operation
- Setting of upper limit SP boundary in ON/OFF signal operation

- Setting of operation point in upper limit range
- Setting of operation point in lower limit range
- Moving from current screen to next screen
- Moving to the next and previous screen using up/down button.

Parameter	Setting range	Unit	Initial data
Temperature T#n LOW SP	T.EU(0.00~100.00%)	T.EU	T.EU(0.00%)
Temperature T#n MIDDLE SP	Temp lower limit rang ≤ Temp T#n LOW SP < Temp T#n MIDDLE SP <	T.EU	T.EU(0.00%)
Temperature T#n HIGH SP	Temp T#n HIGH SP ≤ Temp upper limit range	T.EU	T.EU(0.00%)
Temperature T#n HIGH deviation	T.EUS(0.00~20.00%)	T.EUS	T.EUS(0.00%)
Temperature T#n LOW deviation	T.EUS(0.00~20.00%)	T.EUS	T.EUS(0.00%)
Humidity H#m LOW SP	H.EU(0.0~100.0%)	H.EU	H.EU(0.0%)
Humidity H#m MIDDLE SP	Humi lower limit rang ≤ Humi H#m LOW SP < Humi H#m MIDDLE	H.EU	H.EU(0.0%)
Humidity H#m HIGH SP	SP < Humi H#m HIGH SP ≤ Humi upper limit range	H.EU	H.EU(0.0%)
Humidity H#m HIGH deviation	H.EUS(0.0~10.0%)	H.EUS	H.EUS(0.0%)
Humidity H#m LOW deviation	H.EUS(0.0~10.0%)	H.EUS	H.EUS(0.0%)

※ It can be set for #n= 1~9. ※ It can be set for #m= 1~4.

## References

### ► High, low deviation motion explanation

#### - High deviation operation

① Middle SP < Present value (PV) ≤ In case of upper limit SP

Present value (PV) ≥ Present set value (SP) + High deviation : The operation is "ON"

Present value (PV) < Present set value (SP) + High deviation : The operation is "OFF"

#### - Low deviation operation

② Lower limit SP ≤ Present value (PV) < In case of middle SP

Present value (PV) ≥ Present set value (SP) - Low deviation : The operation is "ON"


Present value (PV) < Present set value (SP) - High deviation : The operation is "OFF"

※ Refer to [6-2 ON/OFF signal operation]

## 6-2. ON/OFF signal operation


- Delay time is the set time in ON/OFF signal delay time in DO relay setting.
- LSP = LOW SP, MSP = MIDDLE SP, HSP = HIGH SP, NPV = NOW PV, NSP = NOW SP
- LD = LOW Deviation, HD = HIGH Deviation, T = ON/OFF signal

▶ ON/OFF signal operation depending on PV

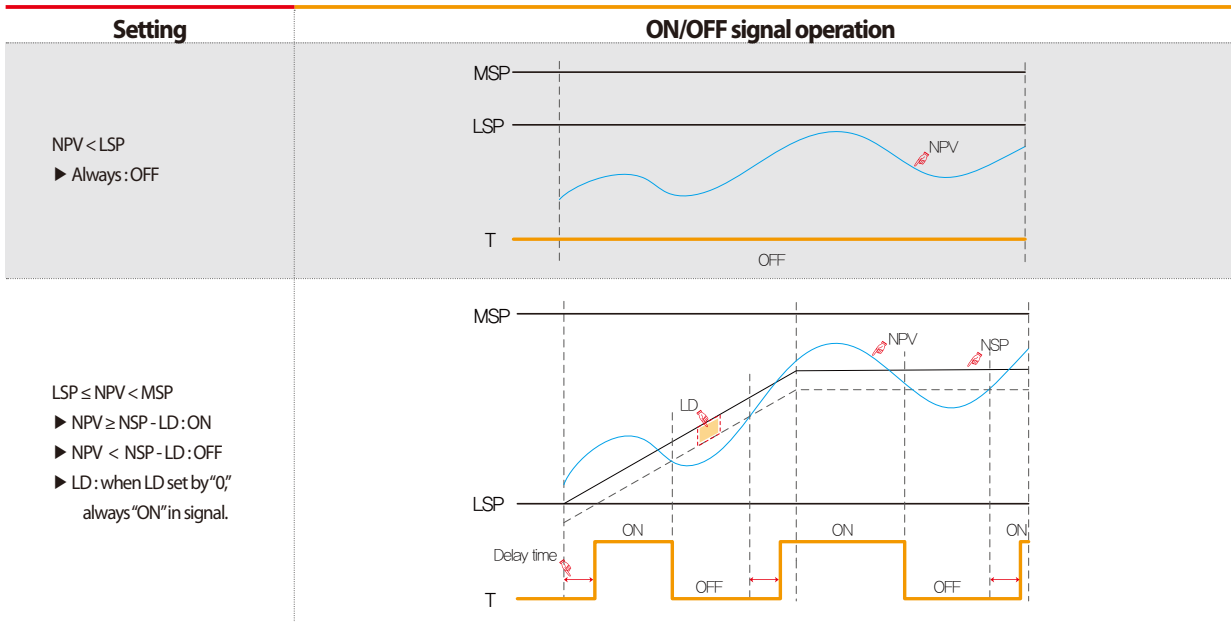


$MSP < NPV \leq HSP$

- ▶  $NPV \geq NSP + HD$ : ON
- ▶  $NPV < NSP + HD$ : OFF
- ▶ HD: when HD set by "0," always "OFF" in signal.

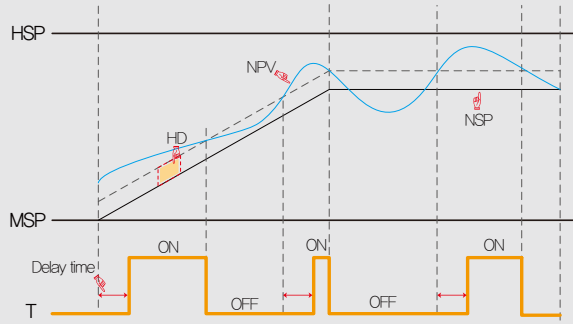



$NPV > HSP$

- ▶ Always: OFF

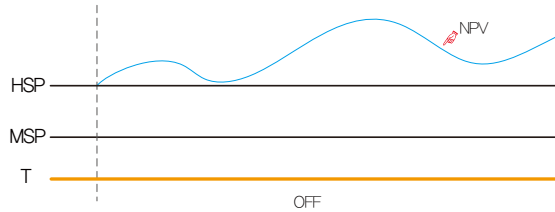

## 6-3. Logic signal setting

- It is a screen to set the logic signal.
- The logic signal can be set up to 8.

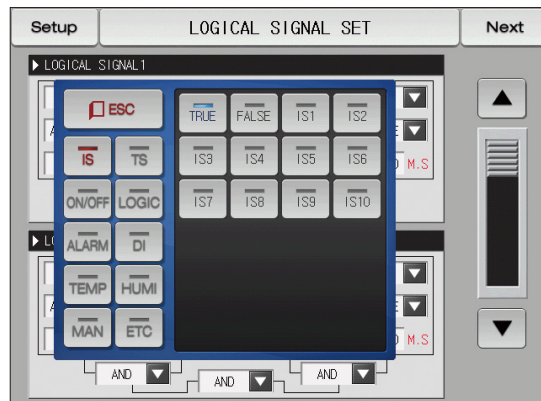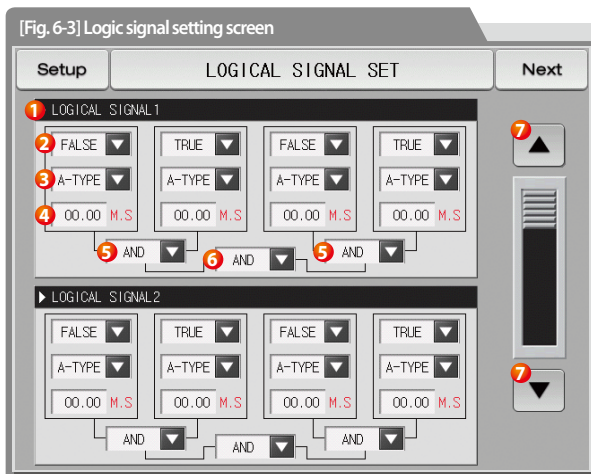

[Fig. 6-4] Applicable object of logic signal setting screen


- Set to operation condition for logic signal
- Set to delay time when the output of the application of the logic signal is activated
  - Refer to [Table 6-1]
- Set to output method of application of the operation signal
  - A-Contact: Output contact is connected, when signal of applicable object is activated
  - B-Contact: Output contact is disconnected, when signal of applicable object is activated

- Set to delay time when the output of the application of the logic signal is activated
- Set to applicable operator when logic signal works.
- Set to applicable operator for two logic groups calculated from number ⑤
- Moving to the next or previous screen using the up/down button


### References

- It does not apply to delay time and method of output when selecting a TRUE / FALSE.




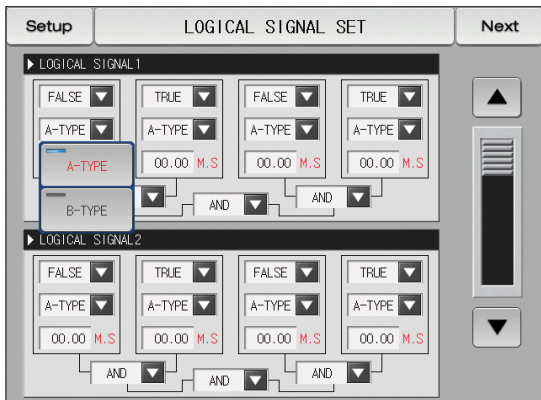


[Fig. 6-5] Setting screen of the sensing method of the logic signal

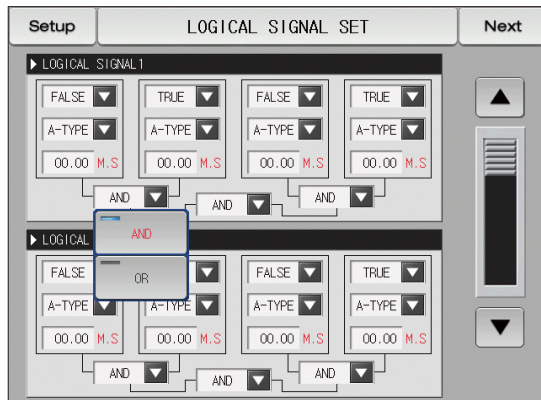

[Fig. 6-7] Logic signal operator setting screen

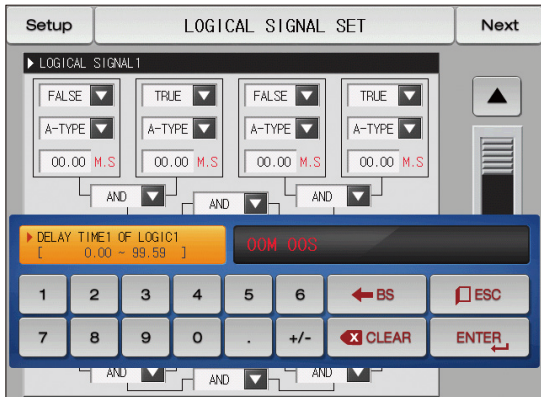

[Fig. 6-6] Logic signal delay time setting screen

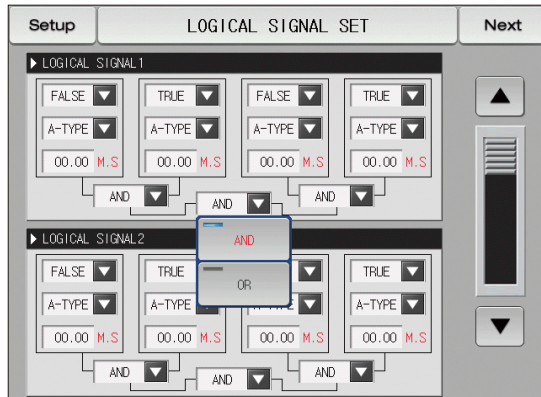

[Fig. 6-8] Logic signal operation setting screen


[Table 6-1] Forms of logic signal parameter

Parameter	Setting range		Unit	data
	Display	Logic type		
Logic signal#n applicable object	IS	TRUE, FALSE, IS1~IS10	ABS	FALSE
	TS	TRUE, FALSE, TS1~TS4	ABS	FALSE
	ON/OFF	TRUE, FALSE, T1~T10, H1~H5	ABS	FALSE
	LOGIC	TRUE, FALSE, LOG1~LOG8	ABS	FALSE
	ALARM	TRUE, FALSE, AL1~AL8	ABS	FALSE
	DI	TRUE, FALSE, DI 1~DI 16	ABS	FALSE
	TEMP	TRUE, FALSE, T.RUN, T.SOPN, T.WAIT, T.UP, T.SOAK, T.DOWN, T.FTM	ABS	FALSE
	HUMI	TRUE, FALSE, H.RUN, H.SOPN, H.WAIT, H.UP, H.SOAK, H.DOWN, H.FTM	ABS	FALSE
	MAN	TRUE, FALSE, MAN1~MAN12	ABS	FALSE
ETC	TRUE, FALSE, U-KEY, F.END, PT.END, DRAIN, ERROR, 1.REF, 2.REF, HOLD	ABS	FALSE	
Logic signal#n output method	A-Contact, B-Contact		ABS	A-Contact
Logic signal#n delay time	00.00~99.59 (MIN.SEC)		ABS	00.00
Logic signal#n operator	AND, OR		ABS	AND

※ #n:1~8

## References

- ▶ **AND** :When both ON, the logic output relay is "ON"
- ▶ **OR** :Arithmetic output relay is "ON", when more than one of logic signal object outputs are "ON".
- ▶ **TRUE** :Outputs of logic signal applicable object are calculated to "ON"
- ▶ **FALSE** :Outputs of logic signal applicable object are calculated to "OFF"

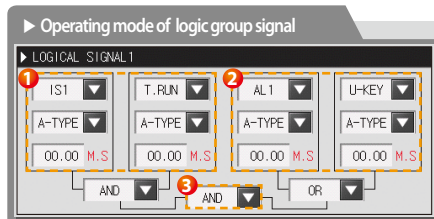

Example) Logic group signal parameter

※ When select to B-contact as output condition, operation of the ON / OFF is reversed.

1 Logic group 1		Output
IS1	T.RUN	
OFF	OFF	OFF
OFF	ON	OFF
ON	OFF	OFF
ON	ON	ON

<Logic group 1 AND Output>

2 Logic group 2		Output
AL1	U-KEY	
OFF	OFF	OFF
OFF	ON	ON
ON	OFF	ON
ON	ON	ON

<Logic group 2 OR Output>


3 Logic group 1 Output <AND> Logic group 2 Output		Output
Logic group 1 Output	Logic group 2 Output	
OFF	OFF	OFF
OFF	ON	OFF
ON	OFF	OFF
ON	ON	ON

<Logic group 1 and Logic group 2 AND Output>


*Part* **07**

## **Alarm signal**


7-1 Alarm signal setting .....	60
7-2 Alarm signal operation .....	65

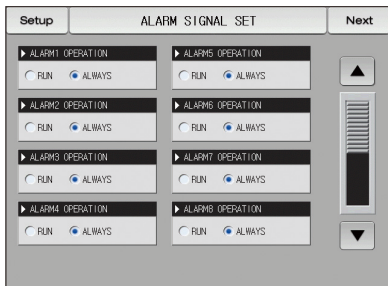


[Fig. 7-1] Alarm signal selection #1 in screen 1

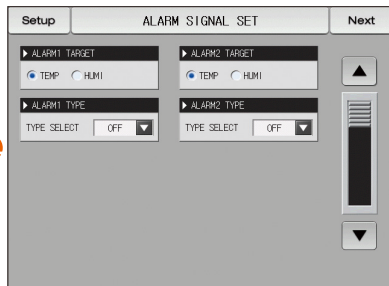

[Fig. 7-3] Alarm signal selection #1 in screen 2

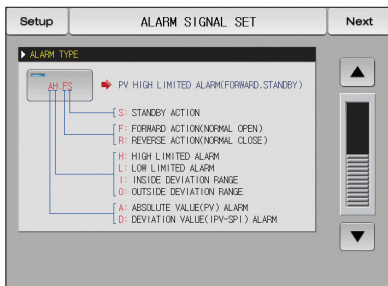

[Fig. 7-2] Alarm signal selection #2 in screen 1

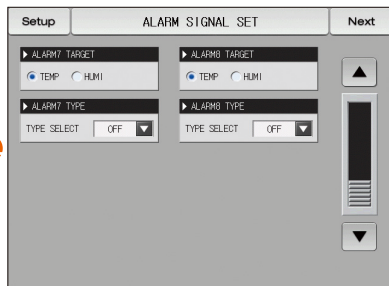



[Fig. 7-3] Alarm signal selection #1 in screen 2



## 07. Alarm signal

### 7-1. Alarm signal setting

#### (1) Alarm signal setting screen 1

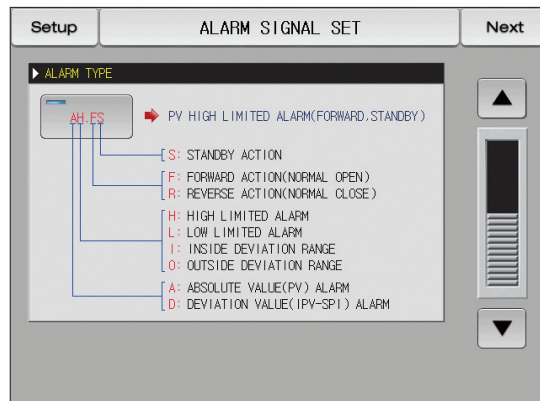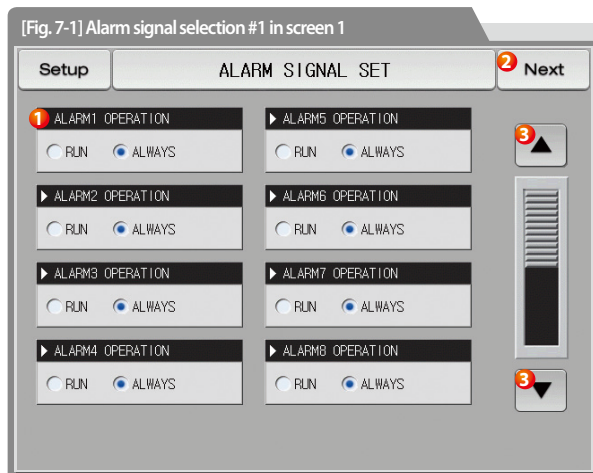

[Fig. 7-2] Alarm signal selection #2 in screen 1

Set the alarm operate condition 1~8

- ①
  - Operation : The alarm operation is performed only during operation.
  - Always : The alarm operation is performed always regardless of operation/stop.



② Moving from current screen to next screen

③ Moving to the next and previous screen using up/down button.

Parameter	Setting range	Unit	Initial data
Alarm operation	Run, Always	ABS	Always

## (2) Alarm signal setting screen 2

- It is a screen to set the alarm for temperature and humidity
- Alarm signals can be set max. 8 points
- There are 20 types of alarm signal.

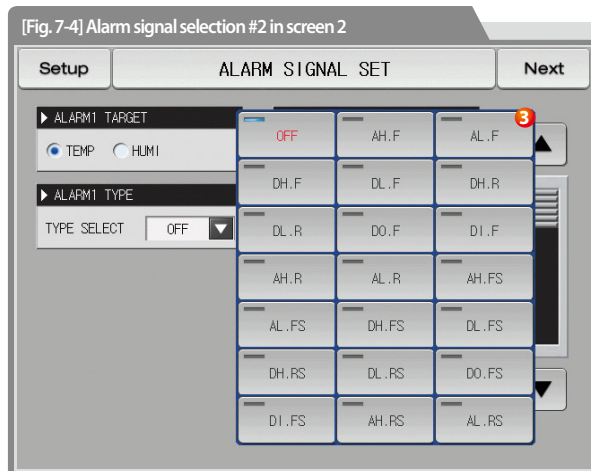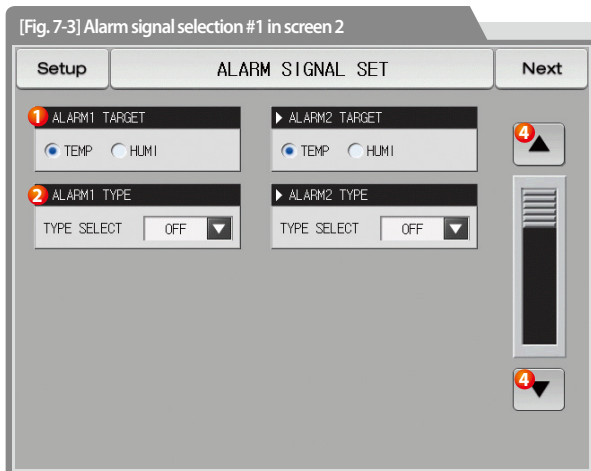

- ① Setting of alarm signal target
- ② Setting of alarm signal type
- ③ Selection of the alarm signal type to be used
  - Refer to [Table 7-1 Alarm type]
- ④ Moving to the next and previous screen using up/down button.

[Fig. 7-5] Alarm signal selection #3 in screen 2

Setup **ALARM SIGNAL SET** Next

▶ ALARM1 TARGET  
 TEMP  HUM1

▶ ALARM2 TARGET  
 TEMP  HUM1

▶ ALARM1 TYPE  
TYPE SELECT AH.F ▼

▶ ALARM2 TYPE  
TYPE SELECT DO.F ▼

▶ ALARM1 PARAMETER

1 POINT	150.00 °C
2 HYSTERESIS	1.00 °C
3 DELAY TIME	00.00 M.S

▶ ALARM2 PARAMETER

4 HIGH POINT	200.00 °C
5 LOW POINT	200.00 °C
2 HYSTERESIS	1.00 °C
3 DELAY TIME	00.00 M.S

▲

▼

## References

▶ When the alarm type was set in AH.F and DO.F in [Fig. 7-4 Alarm signal selection screen #2], the following screen is displayed.

- ① Setting of alarm setting data
- ② Setting of hysteresis data to be applied to release after alarming
- ③ Setting of delay time to be applied during alarm signal operation
- ④ Setting of upper limit deviation data in alarming for deviation
- ⑤ Setting of lower limit deviation data in alarming for deviation




Parameter	Setting range	Unit	Initial data
Alarm #n target	Temperature, Humidity	ABS	Temperature
Alarm #n type	No use, AH.F, AL.F, DH.F, DL.F, DH.R, DL.R DO.F, DI.F, AH.R, AL.R, AH.FS, AL.FS DH.FS, DL.FS, DH.RS, DL.RS, DO.FS, DI.FS, AH.RS, AL.RS	ABS	No use
Alarm #n POINT	T.EU(-5.00~105.00%) / H.EU(-5.0~105.0%)	T.EU / H.EU	EU(100.0%) (Alarm#n type = is not one of alarming for deviation)
Alarm #n upper limit POINT	T.EUS(-100.00~100.00%) / H.EUS(-100.0~100.0%)	T.EUS / H.EUS	EU(0.0%)
Alarm #n lower limit POINT			(Alarm#n type = is one of alarming for deviation)
Alarm #n hysteresis	T.EUS(0.00~100.00%) / H.EUS(0.0~100.0%)	T.EUS / H.EUS	T.EUS(0.50%) / H.EUS(0.5%)
Alarm #n delay time	00.00~99.59 (MIN.SEC)	ABS	00.00


※ #n: 1~8

[Table 7-1] Alarm type

Display	Alarm type		Output direction		Standby motion	
	Absolute data operation	Deviation motion	Normal operation	Reverse operation	Yes	No
AH.F	Indicated data upper limit		■		■	
AL.F	Indicated data upper limit		■		■	
DH.F		Deviation upper limit	■		■	
DL.F		Deviation lower limit	■		■	
DH.R		Deviation upper limit		■	■	
DL.R		Deviation lower limit		■	■	
DO.F		Out of upper limit.Lower limit deviation range	■		■	
DI.F		Within upper limit.Lower limit deviation range	■		■	
AH.R	Indicated data upper limit			■	■	
AL.R	Indicated data upper limit			■	■	
AH.FS	Indicated data upper limit		■			■
AL.FS	Indicated data upper limit		■			■
DH.FS		Deviation upper limit	■			■
DL.FS		Deviation lower limit	■			■
DH.RS		Deviation upper limit		■		■
DL.RS		Deviation lower limit		■		■
DO.FS		Out of upper limit.Lower limit deviation range	■			■
DI.FS		Within upper limit.Lower limit deviation range	■			■
AH.RS	Indicated data upper limit			■		■
AL.RS	Indicated data upper limit			■		■


## 7-2. Alarm signal operation

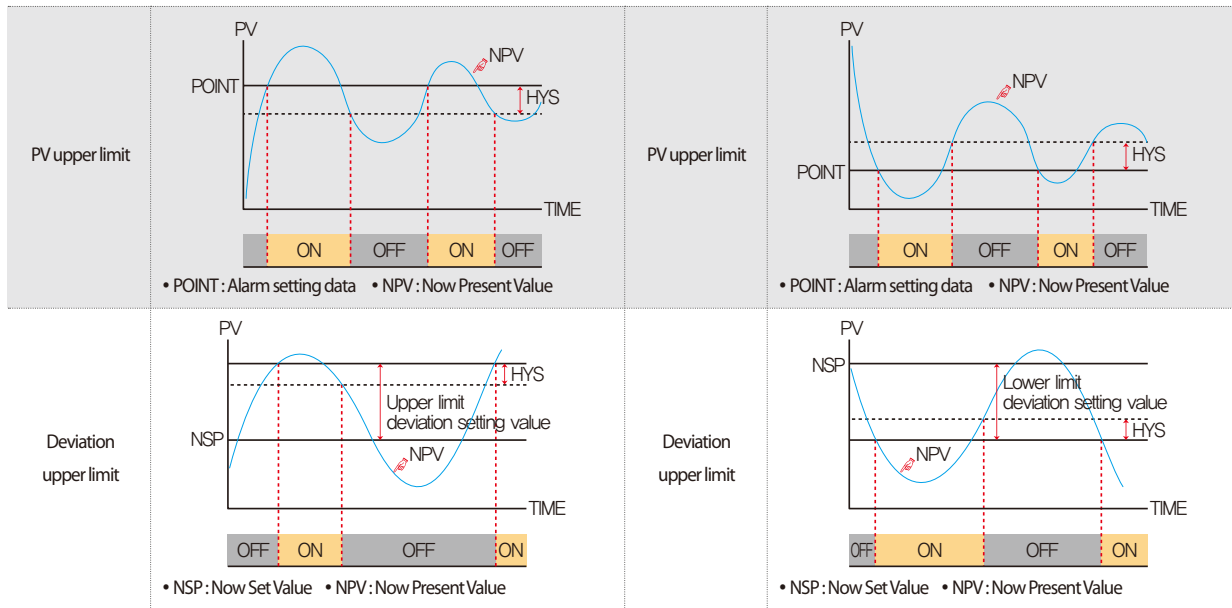

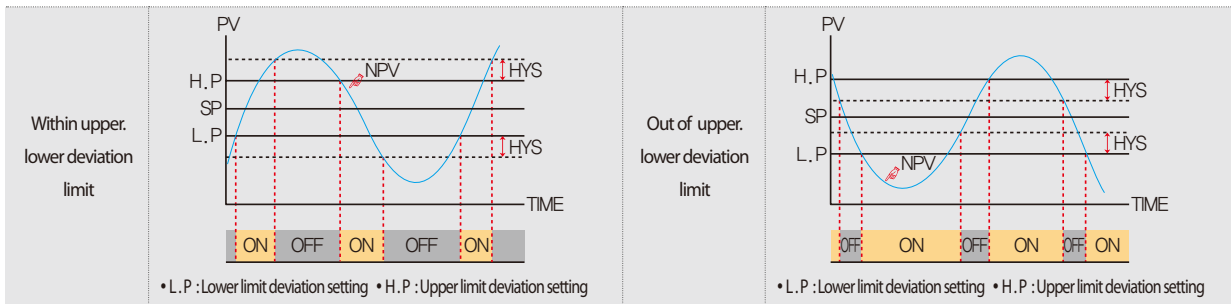

## References

▶ HYS(HYSTERESIS) : HYS (Hysterisis): It is a deviation applied in recovery (OFF) after alarming (ON). The initial data is EUS (0.5%) and it is not operated when EUS(0.0%) is set.

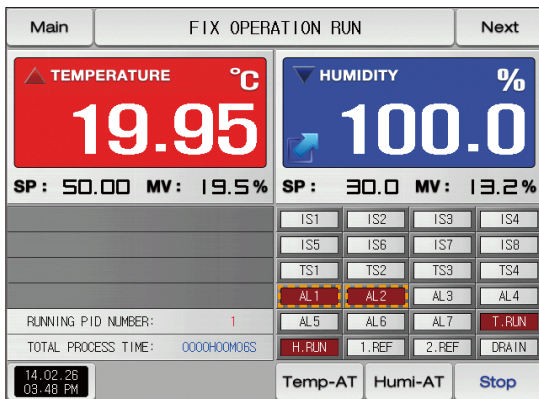

[Fig. 7-6] Alarm operation screen

*Part*

# 08

## PID Group

8-1 PID application range setting screen 1 .....	69
8-2 PID application range setting screen 2 .....	71
8-3 PID application range setting screen .....	72
8-4 PID group setting screen .....	74


# PID Group flow chart




Next Flow chart




Flow chart

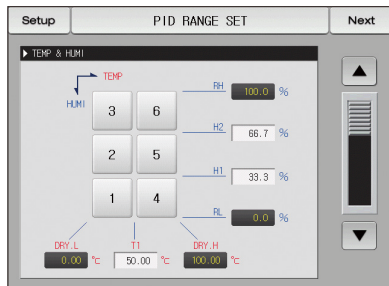


[Fig. 8-1] PID application range setting screen #1

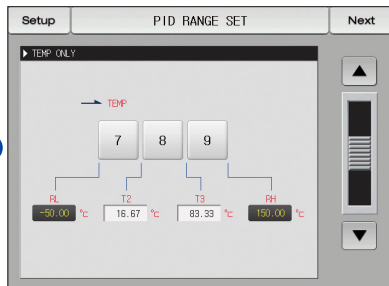


[Fig. 8-2] PID application range setting screen #2

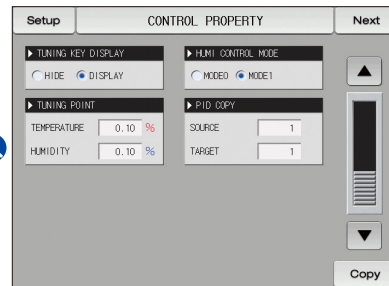

[Fig. 8-3] PID application range setting screen #3

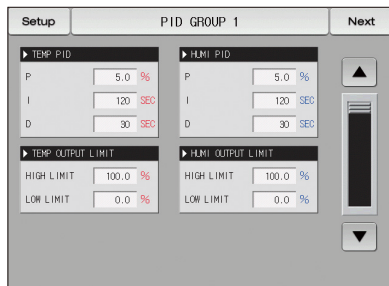

[Fig. 8-4] PID group setting screen

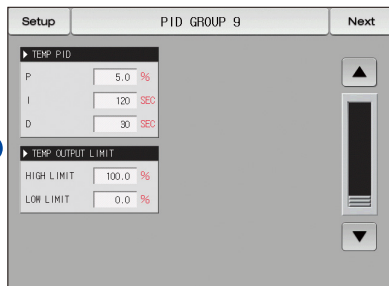


[Fig. 8-4] PID group setting screen



## 08. PID Group

### 8-1. PID application range setting screen 1

- It is composed of six pcs of temperature-humidity PID and three pcs of temperature only PID.
- It is displayed in light yellowish green in the corresponding PID No. in stationary program operation.

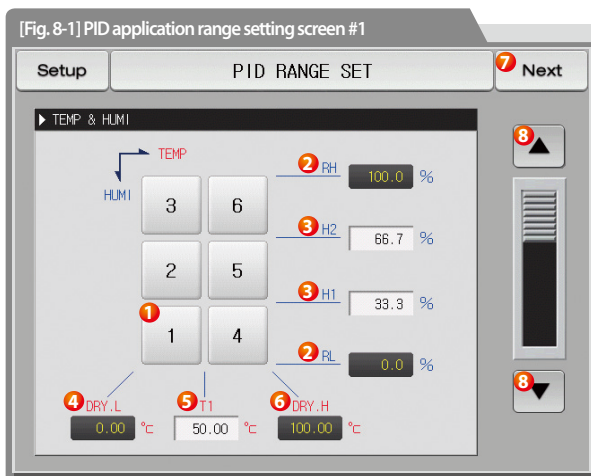


- Moving to the corresponding PID group setting screen when the number is pressed.
  - Moving to the PID group setting screen when **Next** is pressed.
- RH, RL : It displays the range for entire range of humidity.
  - Not changeable as it is only for reading
- H1, H2 : It sets the boundary value of the PID range for entire humidity scale.
- DRYL : It displays the lower limit of the dry-bulb temperature input for displaying the humidity.
  - Not changeable as it is only for reading
- T1 : It sets the boundary value to classify the range PID for the dry-bulb temperature span for humidity.
- DRYH : It displays the upper limit of the dry-bulb temperature input for displaying the humidity.
  - Not changeable as it is only for reading
- Moving from current screen to next screen
- Moving to the next and previous screen using up/down button.

Parameter	Setting range	Unit	Initial data
Temperature boundary value1 (T1)	DRYL < T1 < DRYH	ABS	(DRYL + DRYH) / 2
Humidity boundary value1 (H1)	H.EU(0.0 ~ 100.0%)	H.EU	(RH - RL) / 3
Humidity boundary value2 (H2)	RL < H1 < H2 < RH	H.EU	2(RH - RL) / 3


► Proportion band(P) : It controls to the direction to reduce the deviation between Now Present Value (NPV) and target value (SP)

Proportion band(P) increase

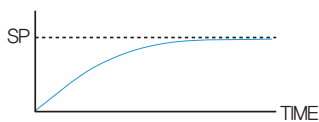

Now Present Value (NPV) approaches slowly to the target value (SP), but overshoot is reduced.


Proportion band(P) decrease

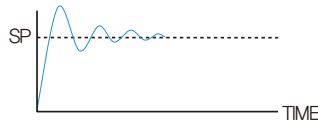

Now Present Value (NPV) approaches to the target value (SP) faster, but overshoot and hunting are taken place.


► Integral time(I) : It controls to the direction to reduce the residual deviation which can be taken place in proportion(P) control.

Integral time(I) increase



The approaching time of Now Present Value (NPV) to the target value (SP) becomes longer, but overshoot and hunting are reduced.


Integral time(I) decrease



The hunting is created and Now Present Value (NPV) approaches to the target value (SP) faster, but it can reach to the uncontrollable condition.


► Derivative time(D) : It controls to the direction to reduce the changing rate of deviation between the Now Present Value (NPV) and target value (SP) in abrupt temperature change.

Derivative time(D) increase



The overshoot and undershoot are decreased, but minor hunting can be taken place.

Derivative time(D) decrease




The overshoot and undershoot are created and it takes time for Now Present Value (NPV) to reach to the target value (SP).



## 8-2. PID application range setting screen 2

- It is a screen which shows temperature PID group only

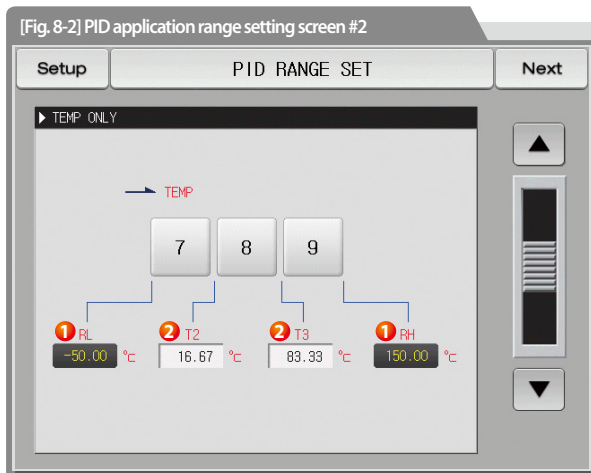


- ① RH, RL : It displays the whole range of temperature span without displaying the humidity.
  - Not changeable as it is only for reading
- ② T2, T3 : It sets the boundary value to classify the whole temperature range PID (Zone PID without displaying the humidity).

Parameter	Setting range	Unit	Initial data
Temperature boundary value2 (T2)	T.EU(0.00 ~ 100.00%)	T.EU	RL + (RH - RL) / 3
Temperature boundary value3 (T3)	RL < T2 < T3 < RH	T.EU	RL + 2(RH - RL) / 3

## 8-3. PID application range setting screen

- It is a screen to set the parameters related to the control characteristics in PID control and to copy the time constant between PID groups.

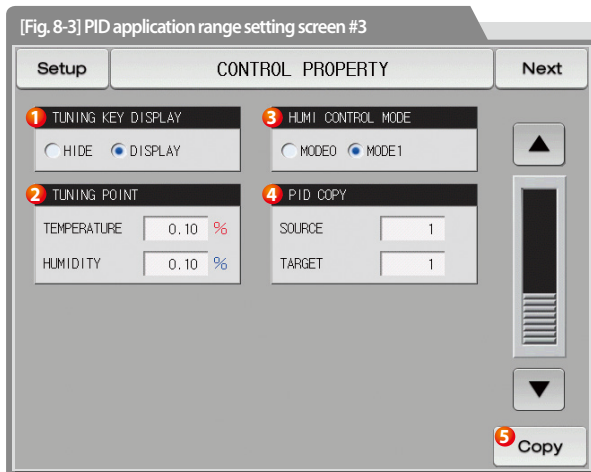


- Setting the Y/N for displaying the auto tuning key in operation screen
  - Refer to [Fig. 3-6 Stationary operation operation screen #2] and [Fig. 3-13 Program operation operation screen #2] in [Operation manual]
- It sets the Auto-Tuningpoint of temperature.humidity applied during Auto-Tuning.
- It sets types of humidity control method.
  - Mode 0 : Used in case of adopting the direct reading sensor (DCV) for humidity. Plus, for better stabilized results, recommend using at wider internal area controlling.
  - Mode 1 : Used in case of adopting PT or DCV sensor for humidity side. Plus, for better stabilized results, recommend using at smaller internal area controlling.
- It sets for the original and target number to be copied.
  - Set copy both temperature PID data and humidity PID data if the original PID is 1 to 6 and target PID is 1 to 6 or 0(ALL).
  - However, PID 7 to 9 copy the temperature data only.
  - Set Copy only temperature PID data,if the original PID is 7 to 9 and target PID is 7 to 9 or 0(ALL).
  - However, PID 1 to 6 copy the temperature data only.
- Copy the set PID time constant

Parameter		Setting range	Unit	Initial data
Y/N for tuning key display		Hiding, Display	ABS	Display
Temperature Auto-Tuning criticality value		0.01 ~ 1.00%	%	0.10
Humidity Auto-Tuning criticality value		0.01 ~ 1.00%	%	0.10
Humidity control type		Mode 0, Mode 1	ABS	Mode 1
Copy	Original to be ccopy	1 ~ 9	ABS	1
	Target to be copy	0(ALL) ~ 9	ABS	1

## 8-4. PID group setting screen

- It is a screen to set the details for each PID group.
- It sets PID group 1~6 in temperature and humidity respectively.
- It sets PID group 7~9 in temperature.

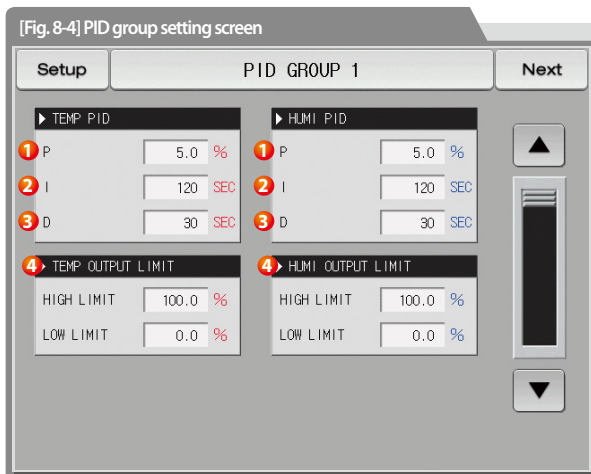

Proportion (P) range : It controls to the direction to reduce the deviation between Set Value (SP) and Present Value (PV)

- When the proportional constant is small, the present value (PV) approaches to the set value (SP) quickly, but the control output value (MV) is oscillated and it makes bad influence on the stability of control.
- When the proportional constant is large, the present value (PV) approaches to the set value (SP) quickly, but there is a possibility to create the residual deviation.

Integral time (I) : When the integral time becomes longer, the time to approach to the set value (SP) is extended as the control output value (MV).

- When the integral time becomes shorter, the time to approach to the set value (SP) is shortened as the control output value (MV) becomes larger.
- The integral motion removes the residual deviation to be created in P operation.
- The control is impossible when the integral time is too short.

Derivative (D) time : It prevents the change of deviation (PV-SP) by calculating the control output (MV) corresponding to the deviation (PV-SP) change rate.

- The approach to the set value (SP) becomes speedier and it prevents the abrupt change or external disturbance in present value (PV).

Output upper limit-lower limit : Setting the upper-lower value of the control output operation range

- It is operated in 0%, 100% output data regardless of the set limit value and upper limit for output during auto tuning.

Parameter	Setting range	Unit	Initial data
#n Temperature proportional band	0.1~1000.0	%	5.0
#n Temperature integral time	0~6000	SEC	120
#n Temperature derivative time	0~6000	SEC	30
#n Temperature output upper limit	0.0~100.0 %	ABS	100.0
#n Temperature output lower limit	#n Temp output lower limit < #n Temp output upper limit	ABS	0.0
#m Humidity proportional band	0.1~1000.0	%	5.0
#m Humidity integral time	0~6000	SEC	120
#m Humidity derivative time	0~6000	SEC	30
#m Humidity output upper limit	0.0~100.0 %	ABS	100.0
#m Humidity output lower limit	#m Humi output lower limit < #m Humi output upper limit	ABS	0.0

※ #n: 1~9

※ #m: 1~6

*Part*  
**09**

# Setting communication environment


9-1 RS232C/485 Communication setting .....	77
9-2 Communication environment setting screen .....	78
9-3. Ethernet communication environment setting screen	80




## 09. Setting communication environment

### 9-1. RS232C/485 Communication setting


- When TEM11000 is RS232C/485 communication is provided basically.
- It was set in RS232C at the delivery from the factory.
- The necessity of changing into RS 485 is shown as follows.
  - ① To disassemble the cover, Insert and push into the right side crack on communication part with small driver from [Fig 9-1 TEM11000 display part]
  - ② RS232C move to RS485 from [Fig. 9-2 Serial communication setting].
  - ③ Finally, insert the wide protrusion (①) of the communication cover into the groove on the "RS232C" side and push the opposite side to close the cover.

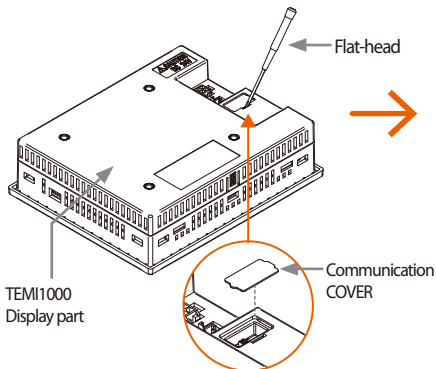

[Fig. 9-1] TEM11000 Display part

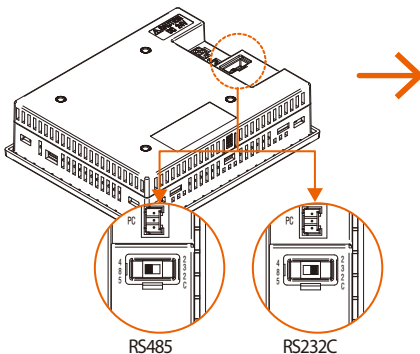

[Fig. 9-2] Serial communication setting

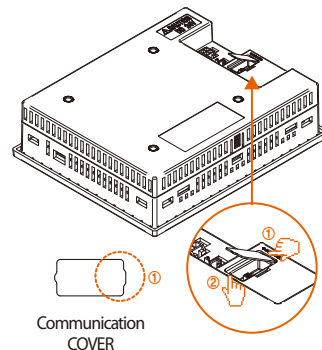

## 9-2. Communication environment setting screen

- It is a screen to set the communication conditions such as communication protocol and speed.



- Setting the communication  
Setting the communication speed
- Refer to [Communication speed setting screen in [Fig. 9-4 in communication environment]]
- Setting the stop beat
- Setting the communication address  
In case of RS485 communication, it can be used by defining address differently up to maximum 99
- Setting the response time
- Setting the parity  
NONE: No parity  
EVEN: Even number parity  
ODD: Odd number parity
- Setting the data length  
The data length is fixed in 7, when communication protocol is set in MODBUS ASC.  
The data length is fixed in 8, when communication protocol is set in MODBUS RTU.
- Set to lock operation for related communication COMMAND transmitting / receiving  
Operation setting of communication parameters can not be changed



**Setup** COMMUNICATION SET

▶ PROTOCOL  
 PCLINK  PCLINK+SUM  MODBUS ASC  MODBUS RTU

▶ BAUD RATE  ▶ PARITY  
 EVEN  ODD

▶ STOP BIT  
 1  2

▶ OTHER PARAMETER  
 ADDRESS  COMM. SET  
 OFF  ON

RESPONSE TIME  MS

9600  
19200  
38400  
57600  
115200

[Fig. 9-4] Communication speed setting screen in communication environment

Parameter	Setting range	Unit	Initial data
Communication protocol	PC LINK, PC LINK + SUM, MODBUS ASC, MODBUS RTU	ABS	PC LINK + SUM
Communication speed	9600, 19200, 38400, 57600, 115200	ABS	115200
Stop beat	1, 2	ABS	1
Communication address	1 ~99	ABS	1
Response time	0~10	ABS	0
Parity	NONE, EVEN, ODD	ABS	NONE
Data length	7, 8	ABS	8
Lock of comm. set	OFF, ON	ABS	OFF

### 9-3. Ethernet communication environment setting screen

- It is a screen to set the parameter for Ethernet communication (TCP/IP).

[Fig.9-5] Ethernet DHCP no use screen

**Setup** COMMUNICATION SET

① DHCP FUNCTION      ② LOCK OF COMM. SET

UNUSE    USE       OFF    ON

③ NETWORK SET

IP ADDRESS	192	168	0	100
SUBNET MASK	255	255	255	0
GATEWAY	192	168	0	1

④ Apply

- ① Setting Y/N for Ethernet communication use
- ② Set communication setting lock
- ③ Manual setting of network IP
- ④ Use to apply the changed conditions of Ethernet related parameters



CAUTION

#### Cautions

- The parameters are not changed when  button is not pressed after changing the network setting.

Setup		COMMUNICATION SET			
▶ DHCP FUNCTION		▶ LOCK OF COMM. SET			
<input checked="" type="radio"/> UNUSE <input type="radio"/> USE		<input checked="" type="radio"/> OFF <input type="radio"/> ON			
▶ NETWORK SET					
IP ADDRESS	192	168	0	100	
SUBNET MASK	255	255	255	0	
GATEWAY	192	168	0	1	
					Apply

[Fig. 9-6] Ethernet DHCP use screen

## References

Message box

- ▶ ETHERNET APPLY : Ethernet normal operation
- ▶ ETHERNET READY : Ready for Ethernet
- ▶ NET ADDRESS ERROR : Incorrect net address
- ▶ CONNECTION ERROR : No connection of Ethernet cable or in failure
- ▶ DHCP FAILURE : Ethernet communication error

## References

- ▶ RS232C/485 communication is provided as a basic and RS232C/485 communication is not usable in case of using Ethernet option.
- ▶ The serial communication using RS232C/485 is not available in case of Ethernet communication selection
- ▶ When DHCP is not used in Ethernet setting, it can be used when IP address, subnet mask, gateway are set. Refer to [Fig. 10-5 Ethernet DHCP no use screen]
- ▶ Network setting is made automatically when DHCP is used in Ethernet setting. Refer to [Fig. 10-6 Ethernet DHCP use screen]

*Part* **10**

## **DO relay output**

10-1 Relay No. and parameter setting .....	85
10-2 UP, SOAK, DOWN signal operation .....	100

Setup	DO CONFIGURATION				Next
▶ INNER SIGNAL					
IS1 RELAY	<input type="checkbox"/>	IS5 RELAY	<input type="checkbox"/>		
IS2 RELAY	<input type="checkbox"/>	IS7 RELAY	<input type="checkbox"/>		
IS3 RELAY	<input type="checkbox"/>	IS9 RELAY	<input type="checkbox"/>		
IS4 RELAY	<input type="checkbox"/>	IS9 RELAY	<input type="checkbox"/>		
IS5 RELAY	<input type="checkbox"/>	IS10 RELAY	<input type="checkbox"/>		
▶ I/O BOARD					
ITEM	TYPE OF DO OUTPUT	NUMBER			
START/STOP	RELAY(A, CONTACT)	1 - 8			
	RELAY(C, CONTACT)	9 - 12			
OFF/TIME	RELAY(A, CONTACT)	13 - 32			

[Fig. 10-1] Inner signal relay setting screen

Setup	DO CONFIGURATION				Next
▶ TIME SIGNAL					
TS1 RELAY	<input type="checkbox"/>	TS3 RELAY	<input type="checkbox"/>		
TS2 RELAY	<input type="checkbox"/>	TS4 RELAY	<input type="checkbox"/>		
▶ ALARM SIGNAL					
AL1 RELAY	<input type="checkbox"/>	AL5 RELAY	<input type="checkbox"/>		
AL2 RELAY	<input type="checkbox"/>	AL6 RELAY	<input type="checkbox"/>		
AL3 RELAY	<input type="checkbox"/>	AL7 RELAY	<input type="checkbox"/>		
AL4 RELAY	<input type="checkbox"/>	AL8 RELAY	<input type="checkbox"/>		
▶ USER KEY SIGNAL					
U-KEY RELAY	<input type="checkbox"/>	OPER. TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>

[Fig. 10-2] Time signal/Alarm signal/User key signal relay setting screen

Setup	DO CONFIGURATION				Next
▶ TEMP. ON/OFF SIGNAL					
T1 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T2 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T3 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T4 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T5 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T6 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T7 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
T8 RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>

[Fig. 10-3] Temp ON/OFF signal relay setting screen

Setup	DO CONFIGURATION				Next
▶ RUN SIGNAL					
TEMP RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
HUMI RELAY	<input type="checkbox"/>	DELAY TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
▶ SENSOR OPEN SIGNAL					
TEMP RELAY	<input type="checkbox"/>	KEEP TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
HUMI RELAY	<input type="checkbox"/>	KEEP TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
▶ WAIT SIGNAL					
TEMP RELAY	<input type="checkbox"/>	KEEP TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>
HUMI RELAY	<input type="checkbox"/>	KEEP TIME	<input type="text"/>	<input type="text"/>	<input type="text"/>

[Fig. 10-8] Sub output relay setting screen #1

Setup	DO CONFIGURATION				Next
▶ MANUAL SIGNAL					
MAN1 RELAY	<input type="checkbox"/>	MAN7 RELAY	<input type="checkbox"/>		
MAN2 RELAY	<input type="checkbox"/>	MAN8 RELAY	<input type="checkbox"/>		
MAN3 RELAY	<input type="checkbox"/>	MAN9 RELAY	<input type="checkbox"/>		
MAN4 RELAY	<input type="checkbox"/>	MAN10 RELAY	<input type="checkbox"/>		
MAN5 RELAY	<input type="checkbox"/>	MAN11 RELAY	<input type="checkbox"/>		
MAN6 RELAY	<input type="checkbox"/>	MAN12 RELAY	<input type="checkbox"/>		
MAN1	MAN2	MAN3	MAN4	MAN5	MAN6
MAN7	MAN8	MAN9	MAN10	MAN11	MAN12

[Fig. 10-6] Manual signal relay setting screen

Setup	DO CONFIGURATION				Next
▶ DI SIGNAL					
DI1 RELAY	<input type="checkbox"/>	DI9 RELAY	<input type="checkbox"/>		
DI2 RELAY	<input type="checkbox"/>	DI10 RELAY	<input type="checkbox"/>		
DI3 RELAY	<input type="checkbox"/>	DI11 RELAY	<input type="checkbox"/>		
DI4 RELAY	<input type="checkbox"/>	DI12 RELAY	<input type="checkbox"/>		
DI5 RELAY	<input type="checkbox"/>	DI13 RELAY	<input type="checkbox"/>		
DI6 RELAY	<input type="checkbox"/>	DI14 RELAY	<input type="checkbox"/>		
DI7 RELAY	<input type="checkbox"/>	DI15 RELAY	<input type="checkbox"/>		
DI8 RELAY	<input type="checkbox"/>	DI16 RELAY	<input type="checkbox"/>		

[Fig. 10-5] DI signal relay setting screen

# DO relay output flow chart



Setup	DO CONFIGURATION		Next
<b>TEMP ON/OFF SIGNAL</b>			
T1 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T2 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T3 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T4 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T5 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T6 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T7 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T8 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S

[Fig. 10-3] Temp ON/OFF signal relay setting screen

Setup	DO CONFIGURATION		Next
<b>MANUAL SIGNAL</b>			
MANT RELAY	<input type="checkbox"/>	MANT RELAY	<input type="checkbox"/>
MAN2 RELAY	<input type="checkbox"/>	MAN2 RELAY	<input type="checkbox"/>
MAN3 RELAY	<input type="checkbox"/>	MAN3 RELAY	<input type="checkbox"/>
MAN4 RELAY	<input type="checkbox"/>	MAN4 RELAY	<input type="checkbox"/>
MAN5 RELAY	<input type="checkbox"/>	MAN5 RELAY	<input type="checkbox"/>
MAN6 RELAY	<input type="checkbox"/>	MAN6 RELAY	<input type="checkbox"/>
MAN7 RELAY	<input type="checkbox"/>	MAN7 RELAY	<input type="checkbox"/>
MAN8 RELAY	<input type="checkbox"/>	MAN8 RELAY	<input type="checkbox"/>
MAN9 RELAY	<input type="checkbox"/>	MAN9 RELAY	<input type="checkbox"/>
MAN10 RELAY	<input type="checkbox"/>	MAN10 RELAY	<input type="checkbox"/>
MAN11 RELAY	<input type="checkbox"/>	MAN11 RELAY	<input type="checkbox"/>
MAN12 RELAY	<input type="checkbox"/>	MAN12 RELAY	<input type="checkbox"/>

[Fig.10-6] Manual signal relay setting screen

Setup	DO CONFIGURATION		Next
<b>REM SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
HUMI RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
<b>GROUP OPEN SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S
HUMI RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S
<b>WAIT SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S
HUMI RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S

[Fig. 10-8] Sub output relay setting screen #1

Setup	DO CONFIGURATION		Next
<b>FIX TIMER SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	DEVIATION	1.00 %
DELAY TIME	00:00 H.M	OPER. TIME	00:00 H.S
HUMI RELAY	<input type="checkbox"/>	DEVIATION	0.5 %
DELAY TIME	00:00 H.M	OPER. TIME	00:00 H.S
<b>OTHER SIGNAL</b>			
ERROR RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S
1.REP RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
2.REP RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
HOLD RELAY	<input type="checkbox"/>	OPER. TIME	00:00 H.S

[Fig. 10-11] Sub output relay setting screen #4

Setup	DO CONFIGURATION		Next
<b>TEMP ON/OFF SIGNAL</b>			
T9 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
T10 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
<b>HUMI ON/OFF SIGNAL</b>			
H1 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
H2 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
H3 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
H4 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S
H5 RELAY	<input type="checkbox"/>	DELAY TIME	00:00 H.S

[Fig. 10-4] Humi ON/OFF signal relay setting screen

Setup	DO CONFIGURATION		Next
<b>LOGICAL SIGNAL</b>			
LOGIC1 RELAY	<input type="checkbox"/>	LOGIC1 RELAY	<input type="checkbox"/>
LOGIC2 RELAY	<input type="checkbox"/>	LOGIC2 RELAY	<input type="checkbox"/>
LOGIC3 RELAY	<input type="checkbox"/>	LOGIC3 RELAY	<input type="checkbox"/>
LOGIC4 RELAY	<input type="checkbox"/>	LOGIC4 RELAY	<input type="checkbox"/>

[Fig.10-7] Logical signal relay setting screen

Setup	DO CONFIGURATION		Next
<b>UP SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	TEMP RELAY	0.00 %
HUMI RELAY	<input type="checkbox"/>	TEMP RELAY	0.0 %
<b>DOWN SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S
HUMI RELAY	<input type="checkbox"/>	KEEP TIME	00:00 H.S
<b>DOWN SIGNAL</b>			
TEMP RELAY	<input type="checkbox"/>	TEMP RELAY	0.00 %
HUMI RELAY	<input type="checkbox"/>	TEMP RELAY	0.0 %

[Fig. 10-9] Sub output relay setting screen #2

Setup	DO CONFIGURATION		Next
<b>DDO SIGNAL</b>			
FIX RELAY	<input type="checkbox"/>	OPER. TIME	00:00 H.S
DELAY TIME	00:00 H.S	OPER. TIME	00:00 H.S
PROG RELAY	<input type="checkbox"/>	OPER. TIME	00:00 H.S
DELAY TIME	00:00 H.S	OPER. TIME	00:00 H.S
<b>DRAIN SIGNAL</b>			
DRAIN RELAY	<input type="checkbox"/>	OPER. TIME	00:00 H.S
RANGE LOW	0.00 °C	RANGE HIGH	100.00 °C

[Fig. 10-10] Sub output relay setting screen #3




## 10. DO relay output

### 10-1. Relay No. and parameter setting

- When various states created during operation are output to the I/O relay board, the relay number for the corresponding state is set.
- The relay operates ("OR" condition) when any signal out of the set signals is output when the set relay number is overlapped.
- Relay number 13~32 can be used when I/O2 board option is added.
- 33~64 relay numbers are an internal relay numbers. It is used when using the logic signal

#### (1) Inner signal/time signal relay setting screen

- The Inner signal relay set screen.
- It outputs the Contact Point Output via the set relay when inner signal occurs.

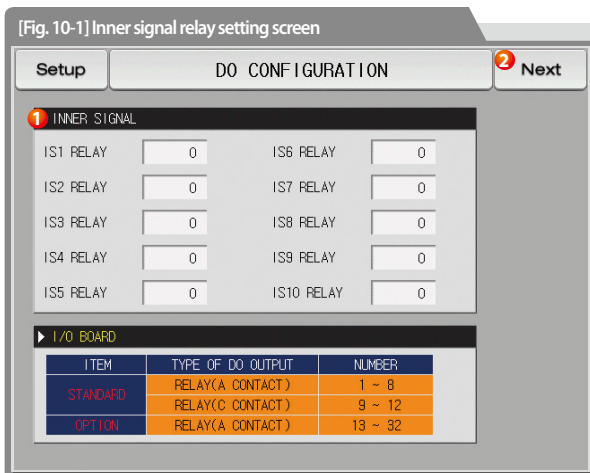

① Setting the relay number of inner signal

② Moving from current screen to the next screen

Parameter	Setting range	Unit	Initial data
inner signal1~ inner signal10 relay	0~32	ABS	0

## (2) Time signal/Alarm signal/User key signal relay setting screen

- The time signal relay /alarm signal relay /user signal relay set screen.
- It outputs the the Contact Point Output via the set relay when time signal/alarm signal /user signal occurs

[Fig. 10-2] Time/Alarm/User key signal relay setting screen

Setup
DO CONFIGURATION
Next

**1 TIME SIGNAL**

TS1 RELAY	0	TS3 RELAY	0
TS2 RELAY	0	TS4 RELAY	0

**2 ALARM SIGNAL**

AL1 RELAY	0	AL5 RELAY	0
AL2 RELAY	0	AL6 RELAY	0
AL3 RELAY	0	AL7 RELAY	0
AL4 RELAY	0	AL8 RELAY	0

**3 USER KEY SIGNAL**

U-KEY RELAY	0	OPER. TIME	00.00	M.S
-------------	---	------------	-------	-----

- ① Setting the relay number of time signal
  - ② Setting the relay number of alarm signal
- Setting the user button relay
- Y/N for use of the button is set in [13. System initial setting]
  - When the user button is set, the user can use the wanted relay by setting in [10. DO relay output] and the set relay is operated when
- ③ User-Key is pressed at the screen for stationary, program stop/operation and the corresponding button is displayed on the operation screen.
    - Operation time : When user signal relay is "ON", after settled operation time, relay turn to " OFF"


Parameter	Setting range	Unit	Initial data
Time signal1~Time signal4 relay	0~32	ABS	0
Alarm signal1~ Alarm signal8 relay	0~32	ABS	0
User output button relay	0~32	ABS	0
Operation time	00.00~99.59(MIN. SEC)	ABS	00.00

※ #n: 1~4



### (3) Temperature ON/OFF and Humidity ON/OFF signal relay setting screen

- It sets the relay number of temperature & humidity ON/OFF signal and delayed time for each ON/OFF signal.
- This set ON/OFF signal outputs the contact output after passing the set time for delay time when the signal generation condition is fulfilled.

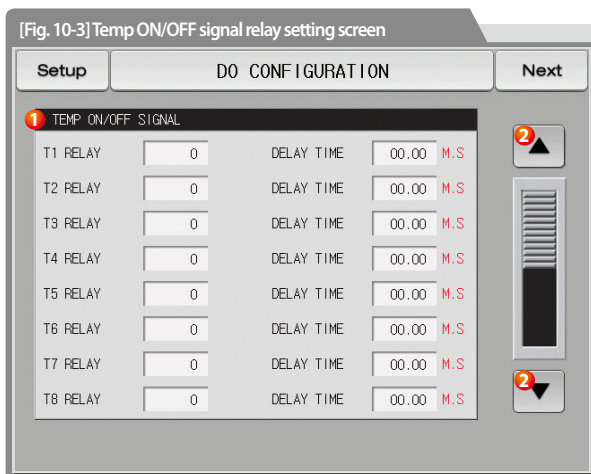

- ① Setting the relay number of temperature ON/OFF signal and delay time
  - The set relay is "ON" after elapsing the set relay time
  - Delay time: Setting of delay time to be applied in ON/OFF signal operation
- ② Moving to the next or previous screen using the up/down button

Parameter	Setting range	Unit	Initial data
Temp ON/OFF signal1 ~Temp ON/OFF signal10 relay	0~32	ABS	0
Temp ON/OFF signal1 delay time ~Temp ON/OFF signal10 delay time	00.00~99.59 (MIN.SEC)	ABS	00.00

[Fig. 10-4] Humi ON/OFF signal relay setting screen

Setup
DO CONFIGURATION
Next

▶ TEMP. ON/OFF SIGNAL

T9 RELAY	0	DELAY TIME	00.00	M.S
T10 RELAY	0	DELAY TIME	00.00	M.S

① HUMI. ON/OFF SIGNAL

H1 RELAY	0	DELAY TIME	00.00	M.S
H2 RELAY	0	DELAY TIME	00.00	M.S
H3 RELAY	0	DELAY TIME	00.00	M.S
H4 RELAY	0	DELAY TIME	00.00	M.S
H5 RELAY	0	DELAY TIME	00.00	M.S

- ① Setting the relay number of humidity ON/OFF signal and delay time
- The set relay is "ON" after elapsing the set relay time
  - Delay time: Setting of delay time to be applied in ON/OFF signal operation


Parameter	Setting range	Unit	Initial data
Humi ON/OFF signal1 ~ Humi ON/OFF signal5 relay	0~32	ABS	0
Humi ON/OFF signal1 delay time ~ Humi ON/OFF signal5 delay time	00.00~99.59 (MIN. SEC)	ABS	00.00

### References

- ▶ T10 operation: It operates after T9 operation and T10 delay time.
- ▶ H5 operation: It operates after H4 operation and H5 delay time.

#### (4) DI signal relay setting screen

- It is a screen to set the relay number for DI signal.
- DI signal transmits the set actual contact point output in DI error creation for corresponding number.

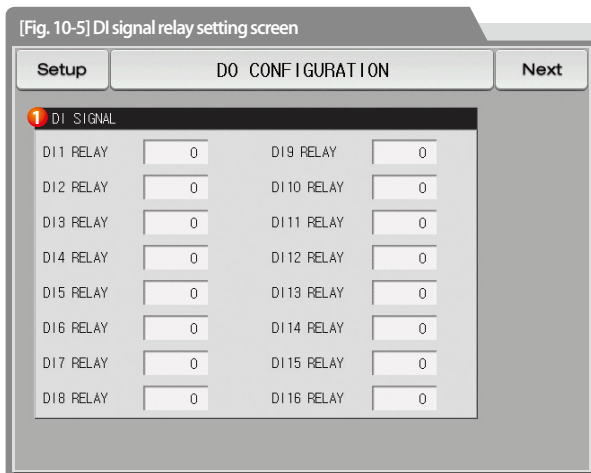


Setting the relay number of DI signal (DI1~DI16)

- ①
- DI signal operates when the operation method is set in "Error" in [11-2 DI error name]

Parameter	Setting range	Unit	Initial data
DI signal1 ~DI signal 16 relay	0~32	ABS	0

#### (5) Manual signal relay setting screen

- It is a screen to set the relay number for manual signal.
- It is used to transmit a certain relay manually.

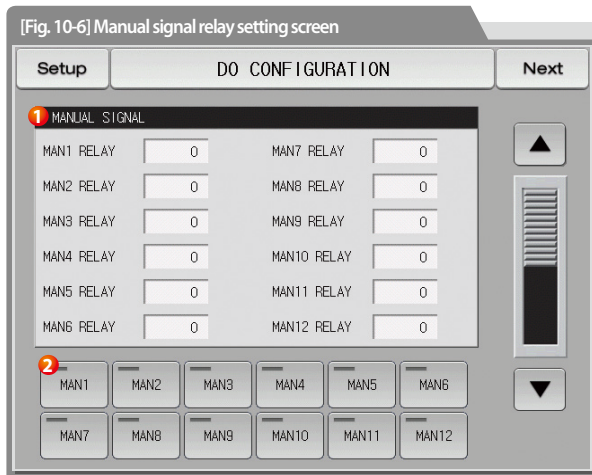

- ① Setting the relay number of manual signal (Manual1~Manual12)


Switch "ON" the relay for the corresponding number manually.

- ②
- Key operation: The output of relay "5" is "ON" when "Manual 1" button is pressed after inputting "5" on the "Manual1" relay column.

Parameter	Setting range	Unit	Initial data
Manual signal1 ~ Manual signal 12 relay	0~32	ABS	0

## (6) Logic signal relay setting screen

- It is a screen to set the logic relay signal.
- The logic signal can be set up to 8.

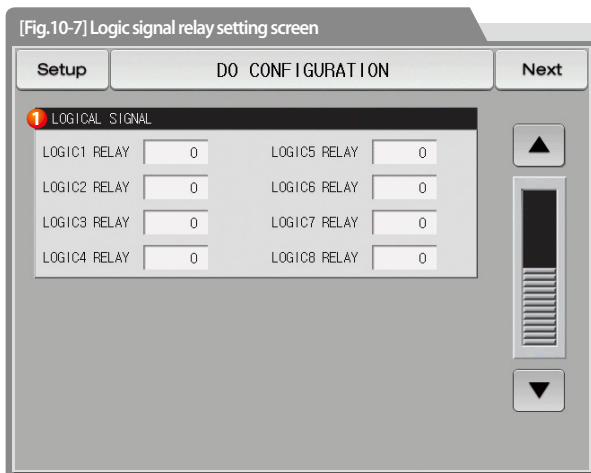


① Setting the relay number of logic signal

Parameter	Setting range	Unit	Initial data
Logic relay #n	0~32	ABS	0

※ #n = 1 ~ 8

## (7) Sub output relay setting screen

- It is a screen to set the sub output relay signal.
- It transmits the contact point output to the set sub output relay when sub output signal is created.

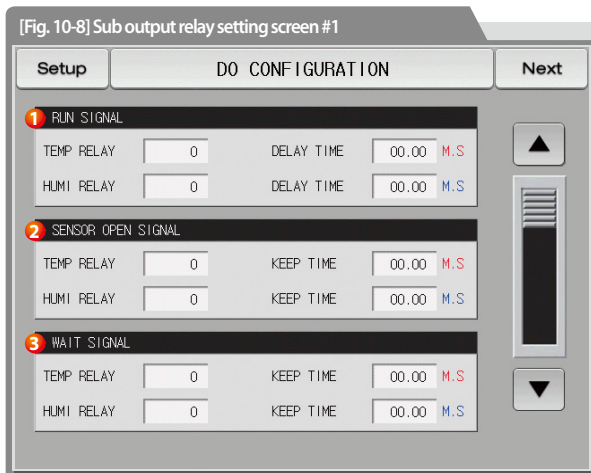

Setting the temp, humi operation(RUN) signal relay and delay time

- Temp relay : The set temp relay is "ON" in stationary or program operation
- Humi relay : The set humi relay is "ON" in stationary or program operation  
However, the humidity relay will be "OFF" when the present value (PV) for humidity is ---.-%
- Delay time : The set relay is "ON" after set delay time is elapsed.

Setting the temp, humi sensor short relay and Holding Time

- Temp relay : When the temp sensor is short, the set relay is "ON"
- Humi relay : When the sensor is short, the set relay is "ON"
- Holding Time : The relay is "ON" during the set Holding Time and the operating state is maintained later on when the sensor is short.

Setting the temp, humi wait signal relay and Holding Time

- Temp relay : The set relay is "ON" during standby in program operation
- Humi relay : The set relay is "ON" during standby in program operation
- Holding Time : The relay is "ON" during the set Holding Time and the operating state is maintained later on depending on the standby operation condition.

<b>Parameter</b>	<b>Setting range</b>	<b>Unit</b>	<b>Initial data</b>
Temp Operation signal relay	0~32	ABS	0
Temp Operation signal delay time	00.00~99.59 (MIN.SEC)	ABS	00.00
Humi Operation signal relay	0~32	ABS	0
Humi Operation signal delay time	00.00~99.59 (MIN.SEC)	ABS	00.00
Temp Sensor short signal relay	0~32	ABS	0
Temp Sensor short signal Holding Time	00.00~99.59 (MIN.SEC)	ABS	00.00
Humi Sensor short signal relay	0~32	ABS	0
Humi Sensor short signal Holding Time	00.00~99.59 (MIN.SEC)	ABS	00.00
Temp Standby signal relay	0~32	ABS	0
Temp Standby signal Holding Time	00.00~99.59 (MIN.SEC)	ABS	00.00
Humi Standby signal relay	0(OFF)~32	ABS	0
Humi Standby signal Holding Time	00.00~99.59 (MIN.SEC)	ABS	00.00

[Fig. 10-9] Sub output relay setting screen #2



- ①
- Up relay : Setting the relay number of up signal
  - Down relay : Setting the relay number of down signal
  - Operation condition : Setting the operation condition of up and down signal
  - Application deviation : Setting the application deviation in operation of up and down signal

※ **TSP - NSP** In

- Up signal : The relay is "ON" in up range when the Now set value (NSP) < [Target set value (TSP) - Applied deviation], and it is "OFF" when the set value (SP) > [Target set value (TSP) - Applied deviation]
- Down signal : The relay is "ON" in down range when the Now set value (NSP) > [Target set value (TSP) + Applied deviation], and it is "OFF" when the set value (SP) < [Target set value (TSP) + Applied deviation]

① • Even [TSP-NSP] is set in stationary operation, it operates in [TSP-NPV]

※ **TSP - NPV** In

- Up signal : The relay is "ON" in up range when the Now Present Value (NPV) < [Target set value (TSP) - Applied deviation], and it is "OFF" when the Now Present Value (NPV) > [Target set value (TSP) - Applied deviation]
- Down signal : The relay is "ON" in down range when the Now Present Value (NPV) > [Target set value (TSP) + Applied deviation], and it is "OFF" when Now Present Value (NPV) < [Target set value (TSP) + Applied deviation]

- Keeping relay : Setting the relay number of the keeping signal
- Holding Time : Setting the Holding Time to be maintained during the keeping signal operation

- ②
- The keeping relay is "ON" when it is entered into the keeping range while it is in the Program operation. Plus, In case of "[Keeping SEG operation time=Keeping SEG setting time - Holding Time]"; the relay is "OFF"
  - The state lamp is displayed in the operation screen in the Stationary Operation and the relay output is not created.

<b>Parameter</b>	<b>Setting range</b>	<b>Unit</b>	<b>Initial data</b>
Temp Up signal relay	0~32	ABS	0
Temp Up signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)
Humi Up signal relay	0~32	ABS	0
Humi Up signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)
Temp Keeping signal relay	0~32	ABS	0
Temp Signal Holding Time	00.00~99.59(MIN.SEC)	ABS	00.00
Humi Keeping signal relay	0~32	ABS	0
Humi Signal Holding Time	00.00~99.59(MIN.SEC)	ABS	00.00
Temp Down signal relay	0~32	ABS	0
Temp Down signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)
Humi Down signal relay	0~32	ABS	0
Humi Down signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)



[Fig. 10-10] Sub output relay setting screen #3

Setup	DO CONFIGURATION		Next
<b>1 END SIGNAL</b>			
FIX RELAY	<input type="text" value="0"/>		
DELAY TIME	<input type="text" value="00.00"/> M.S	OPER. TIME	<input type="text" value="00.00"/> M.S
PROG RELAY	<input type="text" value="0"/>		
DELAY TIME	<input type="text" value="00.00"/> M.S	OPER. TIME	<input type="text" value="00.00"/> M.S
<b>2 DRAIN SIGNAL</b>			
DRAIN RELAY	<input type="text" value="0"/>	OPER. TIME	<input type="text" value="00.00"/> M.S
RANGE LOW	<input type="text" value="0.00"/> °C	RANGE HIGH	<input type="text" value="100.00"/> °C

Setting the stationary operation, program operation termination relay and delay time operation time

- FIX relay : The set relay is "ON" when the stationary time set operation is terminated.
- ① • PROG relay : The set relay is "ON" when the program operation is terminated.
- Delay time : The set relay is "ON" when the set delay time is passed.
- Operation time : The relay is "OFF" when the stationary or program termination signal relay is "ON" after the set operation time is passed.

It sets the Drain signal relay and operation time.

- The display for upper / lower limit is set in the [Relative humidity display condition] in [3-1(2) Sensor input screen #2].
- Power ON : The set relay is "ON" if operation stops.
- ② • During operation (RUN): The set relay is "ON" during operation time in the state out of upper/lower limit, 0.0~100.0°C for temperature indication (T,PV) and 0,0% for humidity set data (H.SP)
- In case when it operates(RUN) and then Stops(STOP) : "The set relay is "ON" during operation time when it is stopped during while it outputs Humidity Operation Signal.

Parameter	Setting range	Unit	Initial data
Stationary control termination signal relay	0 ~ 32	ABS	0
Stationary control termination signal delay time	00.00 ~ 99.59 (MIN.SEC)	ABS	00.00
Stationary control termination signal operation time	00.00 ~ 99.59 (MIN.SEC)	ABS	0
Program control termination signal relay	0 ~ 32	ABS	00.00
Program control termination signal delay time	00.00 ~ 99.59 (MIN.SEC)	ABS	00.00
Program control termination signal operation time	00.00 ~ 99.59 (MIN.SEC)	ABS	00.00
Drain signal relay	0 ~ 32	ABS	0
Drain signal operation time	00.00 ~ 99.59 (MIN.SEC)	ABS	00.00
Upper limit range	It is same with the upper.lower limit for relative humidity display condition in input screen #2.	°C	100.00
lower limit range		°C	0.00

[Fig. 10-11] Sub output relay setting screen #4

Setup	DO CONFIGURATION				Next
<b>1 FIX TIMER SIGNAL</b>					
TEMP RELAY	<input type="text" value="0"/>	DEVIATION	<input type="text" value="1.00"/>	°C	
DELAY TIME	<input type="text" value="00.00"/> H.M	OPER. TIME	<input type="text" value="00.00"/>	M.S	
HUMI RELAY	<input type="text" value="0"/>	DEVIATION	<input type="text" value="0.5"/>	%	
DELAY TIME	<input type="text" value="00.00"/> H.M	OPER. TIME	<input type="text" value="00.00"/>	M.S	
<b>2 OTHER SIGNAL</b>					
ERROR RELAY	<input type="text" value="0"/>	KEEP TIME	<input type="text" value="00.00"/>	M.S	
1. REF RELAY	<input type="text" value="0"/>	DELAY TIME	<input type="text" value="00.00"/>	M.S	
2. REF RELAY	<input type="text" value="0"/>	DELAY TIME	<input type="text" value="00.00"/>	M.S	
HOLD RELAY	<input type="text" value="0"/>	OPER. TIME	<input type="text" value="00.00"/>	M.S	

Setting the stationary timer signal relay, deviation, delay time and operation time

- Deviation :  $|\text{Present value(PV)} - \text{Set value (SP)}|$  the relay is "ON" during operation time (M.S) from deviation till delay time (H.M)  
Namely, the relay is "ON" during operation time (M.S) when the data of  $|\text{Present value(PV)} - \text{Set value (SP)}|$  is within the deviation.
- ① • Delay time : The set relay is "ON" after the set delay time is elapsed.
- Operation time : The set relay is "OFF" after the set operation time elapse when the stationary timer signal relay operation state is maintained.
- Operation only in stationary operation
- Stop or operation time = The relay is "OFF" when 00.00 M.S is input
- The processing time is continued out of the deviation during relay time operation.

Error relay : Setting the error signal relay number

Holding Time : Setting the Holding Time to be applied in error signal operation

- The relay is "ON" until error recovery when the DI error is being created after the error signal relay is "ON" after maintaining time during the set maintaining time in DI error creation.
- Error signal : It is operated when error is created in DI1~16.
- When DI sensing is set in "Operation", the error signal output is not created.

②

1. REF relay : Setting the 1st freezer signal relay number

2. REF relay : Setting the 2nd freezer signal relay number

Delay time : Setting the delay time to be applied in the 1st and the 2nd freezer signals are operating.


- The signals in the 1st and the 2nd freezer are "ON" after operation of inner signal (S1) and set delay time is elapsed.

Hold relay : Hold signal relay number setting.

Operation time : The relay is "OFF" when the hold relay maintains operation status after the setted operation time is passed.

Parameter	Setting range	Unit	Initial data
Temp Stationary timer signal relay	0~64	ABS	0
Temp Stationary timer signal deviation	EUS (0.0 ~ 10.0%)	EUS	EUS (0.5%)
Temp Stationary timer signal delay time	00.00~99.59 (HOUR.MIN)	ABS	00.00
Temp Stationary timer signal operation time	00.00~99.59 (MIN.SEC)	ABS	00.00
Humi Stationary timer signal relay	0~64	ABS	0
Humi Stationary timer signal deviation	EUS (0.0 ~ 10.0%)	EUS	EUS (0.5%)
Humi Stationary timer signal delay time	00.00~99.59 (HOUR.MIN)	ABS	00.00
Humi Stationary timer signal operation time	00.00~99.59 (MIN.SEC)	ABS	00.00
Error signal relay	0~64	ABS	0
Error signal Holding Time	00.00~99.59 (MIN.SEC)	ABS	00.00
1st Freezer operation signal relay	0~64	ABS	0
1st Freezer operation signal delay time	00.00~99.59 (MIN.SEC)	ABS	00.00
2nd Freezer operation signal relay	0~64	ABS	0
2nd Freezer operation signal delay time	00.00~99.59 (MIN.SEC)	ABS	00.00

► Stationary timer signal relay operation

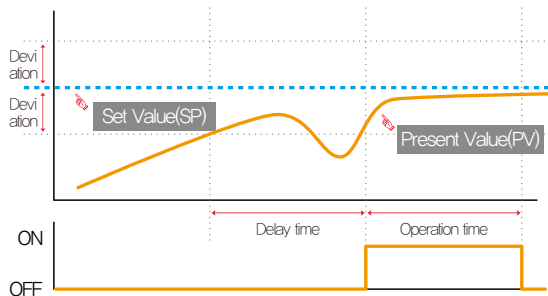

## References


- The stationary timer signal operation is calculated again in operation starting, changing the set value (SP), electric power "ON" (When it is set for immediate operation in electricity "ON", recovery operation in black out or product is ON).
  - ※ When the recovery motion is re-starting or continue in black out, it operates in same pattern. Namely, the delay time starts again after recover of electric power in operation state

## (7) Definition of relay operation time for each signal

Signal	Condition	Relay ON time
Drain signal	In case that recovers, after the relay operation time for set relay and after output occurrence.	Operation until the set operation time
	In case that recovers during the relay operation time for set relay after output occurrence.	Operates until recovery
Termination signal	In case of deleting the message by touching the screen after output creation and set relay maintaining time is elapsed.	Operation until the set operation time
	In case of deleting the message by touching the screen during relay maintaining time after set output creation is made.	Operation until screen touch
Error signal/Sensor short signal/ Standby signal	In case of recovery after output creation and set relay maintaining time is elapsed.	Operation until error recovery
	In case of recovery during relay maintaining time after set output creation is made.	Operation until set Holding Time

## 10-2. UP, SOAK, DOWN signal operation

- Input sensor = Temperature (k2), range = -200.0°C ~1370.0°C
- Up, down signal range → [EUS 0%~EUS 10%] = [0.0°C ~ 157.0°C]

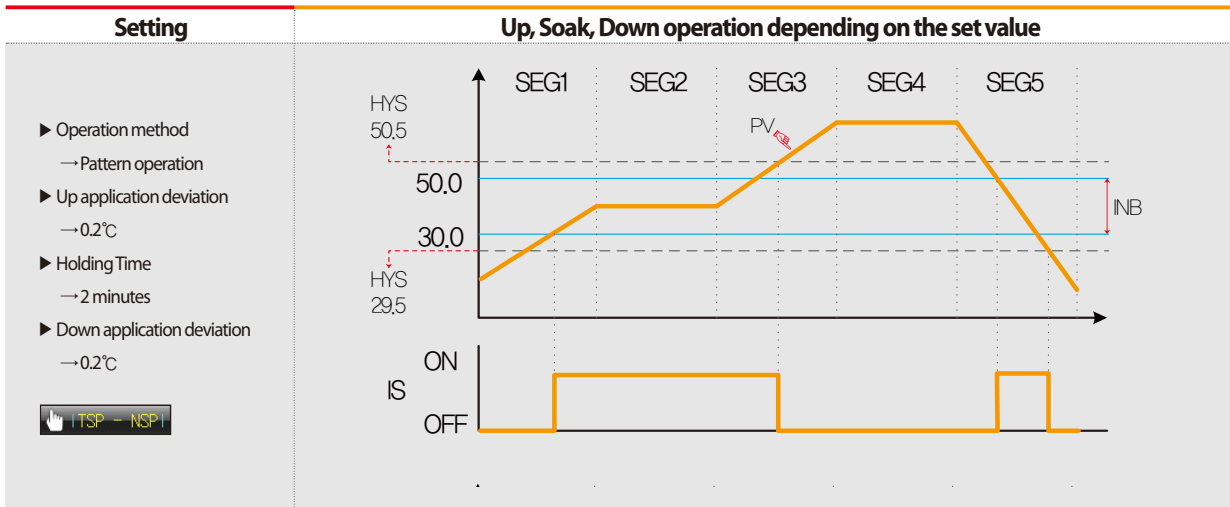

## Setting

- ▶ Operation method
  - stationary operation
- ▶ Up application deviation
  - 0.2°C
- ▶ Holding Time
  - 2 minutes
- ▶ Down application deviation
  - 0.2°C




- ▶ It operates with 

regardless of the conditions of deviation application in stationary operation.

- ▶ The Soak signal relay is not "ON" in stationary operation and only the state lamp in operation screen is "ON".

## Up, Soak, Down operation depending on the set value

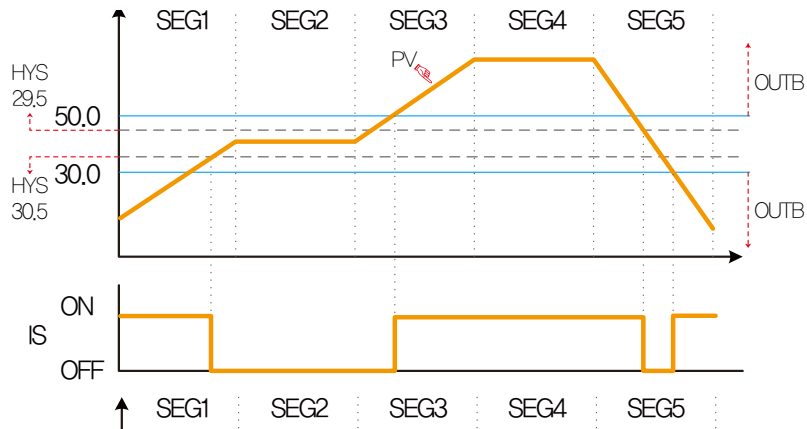

*Part* **11**

# DI function and Operation

11-1 DI operation setting .....	104
11-2 DI error name .....	109
11-3 DI error creation screen .....	113
11-4 JPG & BMP file making method .....	114





Next Flow chart



Flow chart

Setup	DI CONFIGURATION	Next													
▶ DISPLAY METHOD <input type="radio"/> TEXT <input type="radio"/> PICTURE	▶ D11 OPERATION OPERATION <input type="radio"/> RUN/STOP	▲ ▼													
▶ BUZZER TIME KEEP TIME 00.01 M.S	▶ D12 OPERATION OPERATION <input type="radio"/> HOLD														
▶ DI DETECTION TIME DETECT TIME 00.01 M.S	▶ D13 OPERATION OPERATION <input type="radio"/> STEP														
▶ DI OPERATION <table border="1"> <thead> <tr> <th>SETTING</th> <th>DI ERROR SCREEN</th> <th>OPERATION STATUS</th> </tr> </thead> <tbody> <tr> <td>KEEP STATUS</td> <td>DISPLAY</td> <td>OPERATION STOP</td> </tr> <tr> <td>IN STOP</td> <td>DISPLAY</td> <td>STOP AFTER SETTING TIME</td> </tr> <tr> <td>KEEP DI</td> <td>DISPLAY</td> <td>KEEP STATUS</td> </tr> <tr> <td>NOT</td> <td>NOT DISPLAY</td> <td>KEEP STATUS</td> </tr> </tbody> </table>	SETTING		DI ERROR SCREEN	OPERATION STATUS	KEEP STATUS	DISPLAY	OPERATION STOP	IN STOP	DISPLAY	STOP AFTER SETTING TIME	KEEP DI	DISPLAY	KEEP STATUS	NOT	NOT DISPLAY
SETTING	DI ERROR SCREEN	OPERATION STATUS													
KEEP STATUS	DISPLAY	OPERATION STOP													
IN STOP	DISPLAY	STOP AFTER SETTING TIME													
KEEP DI	DISPLAY	KEEP STATUS													
NOT	NOT DISPLAY	KEEP STATUS													

[Fig. 11-1] DI function and operation setting screen 1



Setup	DI CONFIGURATION	Next
▶ D11 SIGNAL OPERATION <input type="radio"/> ERR_STOP	▶ D14 SIGNAL OPERATION <input type="radio"/> TM_STOP DELAY TIME 00.00 M.S	▲ ▼
▶ D12 SIGNAL OPERATION <input type="radio"/> ERR_RUN	▶ D15 SIGNAL OPERATION <input type="radio"/> RUN	
▶ D13 SIGNAL OPERATION <input type="radio"/> ERR_STOP	▶ D16 SIGNAL OPERATION <input type="radio"/> ERR_STOP	

[Fig. 11-4] DI function and operation setting screen 3 #1



Setup	DI ERROR NAME SET	Next
▶ DI ERROR NAME		▲ ▼
D11 NAME	THE D11 ERROR OCCURRED	
D12 NAME	THE D12 ERROR OCCURRED	
D13 NAME	THE D13 ERROR OCCURRED	
D14 NAME	THE D14 ERROR OCCURRED	
D15 NAME	THE D15 ERROR OCCURRED	
D16 NAME	THE D16 ERROR OCCURRED	
D17 NAME	THE D17 ERROR OCCURRED	
D18 NAME	THE D18 ERROR OCCURRED	
D19 NAME	THE D19 ERROR OCCURRED	

[Fig. 11-8] DI function and operation setting screen 4 #1



Setup	DI CONFIGURATION	Next
▶ D11 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	▶ D15 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	▲ ▼
▶ D12 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	▶ D16 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	
▶ D13 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	▶ D17 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	
▶ D14 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	▶ D18 DETECTION <input type="radio"/> A-TYPE <input type="radio"/> B-TYPE	

[Fig. 11-2] DI function and operation setting screen 2 #1

Setup	DI CONFIGURATION	Next
▶ D17 SIGNAL OPERATION <input type="radio"/> ERR_STOP	▶ D110 SIGNAL OPERATION <input type="radio"/> ERR_STOP	▲ ▼
▶ D18 SIGNAL OPERATION <input type="radio"/> ERR_STOP	▶ D111 SIGNAL OPERATION <input type="radio"/> ERR_STOP	
▶ D19 SIGNAL OPERATION <input type="radio"/> ERR_STOP	▶ D112 SIGNAL OPERATION <input type="radio"/> ERR_STOP	

[Fig. 11-6] DI function and operation setting screen 3 #3

Setup	DI ERROR NAME SET	Next
▶ DI ERROR NAME		▲ ▼
D110 NAME	THE D110 ERROR OCCURRED	
D111 NAME	THE D111 ERROR OCCURRED	
D112 NAME	THE D112 ERROR OCCURRED	
D113 NAME	THE D113 ERROR OCCURRED	
D114 NAME	THE D114 ERROR OCCURRED	
D115 NAME	THE D115 ERROR OCCURRED	
D116 NAME	THE D116 ERROR OCCURRED	

[Fig. 11-8] DI function and operation setting screen 4 #1



# 11. DI function and Operation


## 11-1. DI Operation setting

### (1) DI function and Operation setting screen 1

- Screen for setting the operation type for DI function and each DI signal.

[Fig. 11-1] DI function and Operation setting screen #1

SETTING	DI ERROR SCREEN	OPERATION STATUS
ERR_STOP	DISPLAY	OPERATION STOP
TM_STOP	DISPLAY	STOP AFTER SETTING TIME
ERR_RUN	DISPLAY	KEEP STATUS
RUN	NOT DISPLAY	KEEP STATUS

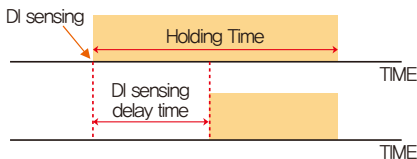

DI function operation setting

Setting the error display method in DI error creation

- ① Letter : The error is displayed in letter in DI error creation
- Photo : The error is displayed with input photo in DI error creation
- The uploaded photo file into the internal memory is displayed into the DI error and basic photo is displayed when it is not uploaded.

Setting the buzzer ringing time in DI error creation

- ② The buzzer ringing is made in DI error creation in spite of setting into "0"
- The buzzer ringing is not made when DI operation method is set in Operation/Stop, Hold, Step and Pattern

Setting the DI sensing delay time

- ③ In case of physical DI contact, it operates with DI input when it is "ON" during the contact point setting time.

Setting the DI1 operation method


- ④ Error : Use the DI1 operation for error detection
- Operation/Stop : The operation is stopped at the time of releasing error while the operation is being made at the DI1 error creation

⑤	Setting the DI2 operation method <ul style="list-style-type: none"> <li>• Error : Use the DI2 operation for error detection</li> <li>• Hold : It holds the current operation screen at the DI2 operation and the hold is released at the time of error releasing (It is possible in program operation only.)</li> </ul>
⑥	Setting the DI3 operation method <ul style="list-style-type: none"> <li>• Error : Use the DI3 operation for error detection</li> <li>• Step : Force moving from the current segment to the next segment at DI3 error creation (It is possible in program operation only.)</li> </ul>
⑦	Moving from current screen to the next screen
⑧	Moving to the next or previous screen using the up/down button

Parameter	Setting range	Unit	Initial data
Display method	Letter, Photo	ABS	Letter
Buzzer Holding Time	00.00 ~ 99.59 (MIN.SECOND)	ABS	00.01
DI sensing delay time	00.00 ~ 99.59 (MIN.SECOND)	ABS	00.01
DI1 Operation method	Error, Operation/stop	ABS	Error
DI2 Operation method	Error, hold	ABS	Error
DI3 Operation method	Error, step	ABS	Error

## (2) DI function and Operation setting screen 2


- It sets the sensing method for each DI signal.

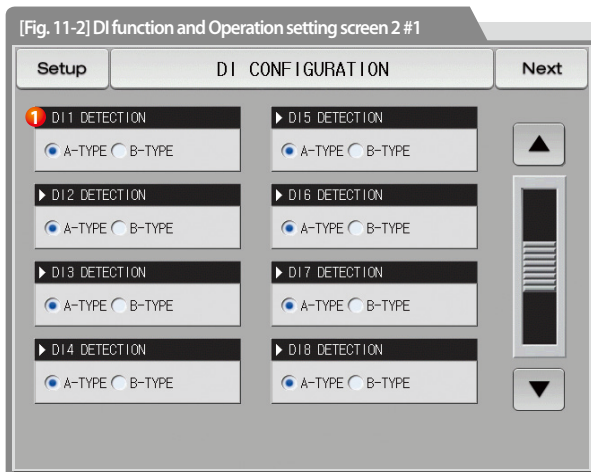

①

Setting the DI1 sensing method

- A-contact point : It senses the input of DI in case of physical DI contact point creation. (When the external signal is entered.)
- B-contact point : It senses the input of DI in case of physical DI contact point release. (When the external signal is disconnected.)

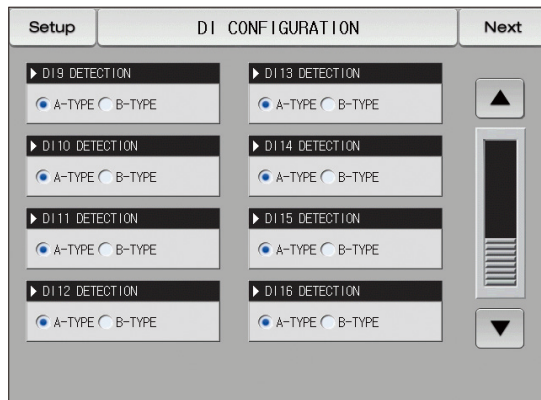

[Fig. 11-3] DI function and Operation setting screen 2 #2



▶ DI sensing pattern A- Contact point selection

DI1	DI2	DI3	operation
Error	Hold	Step	Operation
ON			Operation
OFF			Stop
	ON		Hold operation
	OFF		Hold release
		ON	Step operation

### References

- ▶ ON/OFF operation is opposite in case of selection of DI sensing type B-contact point.

### (3) DI function and Operation setting screen 3

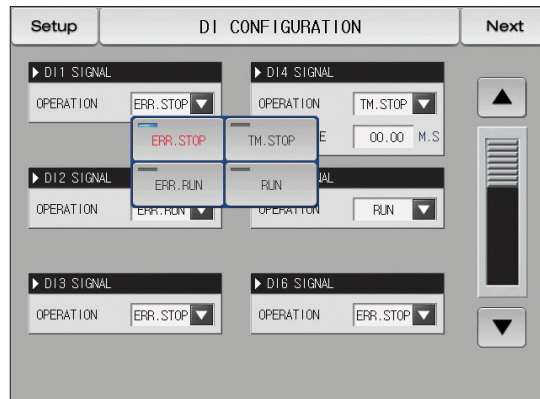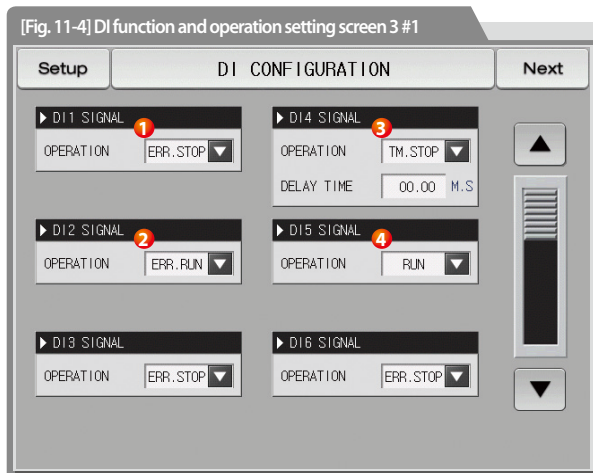


[Fig. 11-5] DI function and operation setting screen 3 #2


- |   |                 |  |
|---|-----------------|--|
| ① | Error stop      | : It displays DI error screen in case of DI error creation and stops operation.                          |
| ② | Error operation | : It displays DI error screen in case of DI error creation and maintains the current operation state.    |
| ③ | Time stop       | : It displays DI error screen in case of DI error creation and stops operation after the set delay time. |
| ④ | Operation       | : It displays DI error screen in case of DI error creation and maintains the current operation state.    |

#### References

- ▶ It displays the operation state and Y/N for display in case of each DI error creation
- ▶ The error signal relay is not operated in case of each DI error creation when it is set in "Operation" and DI signal relay output is operated. Also, the history is not saved in the DI error occurrence history display.
- ▶ The state display lamp and error signal are created in [Operation screen 2].

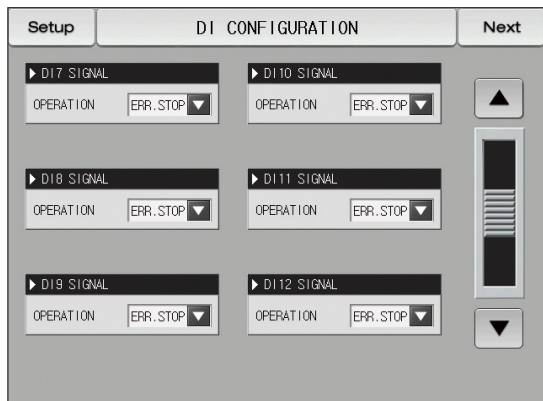

[Fig. 11-6] DI function and operation setting screen 3 #3

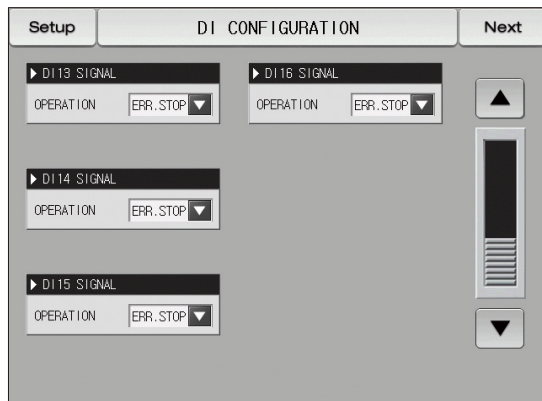

[Fig. 11-7] DI function and operation setting screen 3 #4


Parameter	Setting range	Unit	Initial data
Operation after sensing DI #n signal	Error stop, Time stop, Error operation, Operation	ABS	Error stop
DI #n signal delay time	0.00 ~ 99.99(MIN.SEC)	ABS	00.00

※ #n = 1 ~ 16

## 11-2. DI error name

### (1) DI error name setting

- The setting is available when the display method is "Letter".
- It is a screen to input the DI error name.
- The DI error name can be put in 24 letters in maximum.

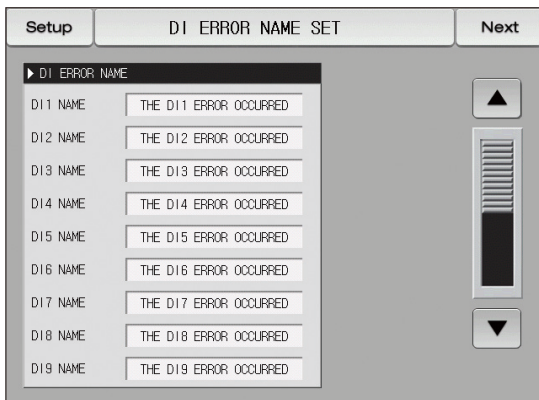

[Fig. 11-8] DI function and operation setting screen 4 #1




[Fig. 11-9] DI function and operation setting screen 4 #2

Parameter	Setting range	Unit	Initial data
DI #n name	0~9, A~Z, Special letters (24 letters in maximum)	ABS	THE DI#n ERROR OCCURRED

※ #n = 1 ~ 16


## (2) DI error creation photo setting

- The setting is available when the display method is "Photo".
- The uploaded photo file (JPG) into the internal memory is displayed in DI error and basic photo is displayed when it is not uploaded.
- The photo can be uploaded when there is a SD card option.

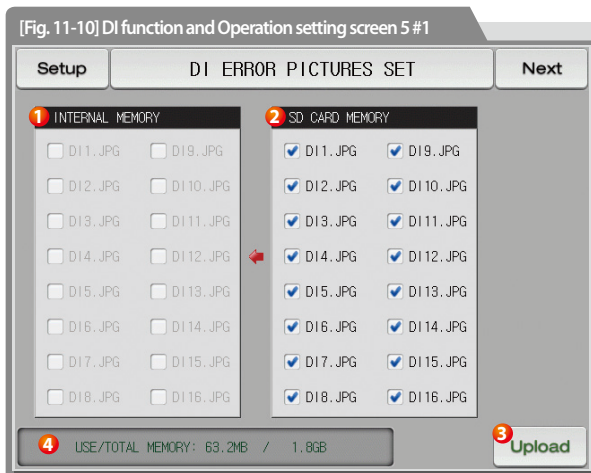


- ① The photo file corresponding of its name to DI out of the saved photo files (JPG) into the memory is displayed and it is inactive () when there is not corresponding file.
- ② The photo file corresponding of its name to DI out of the saved photo files (JPG) into the SD card is displayed.
  - The file selected with () is uploaded into the internal memory.
- ③ The photo files (JPG) saved into SD card is uploaded to internal memory.
- ④ It displays the capacity of current SD card.
  - It is displayed when the SD card is inserted.



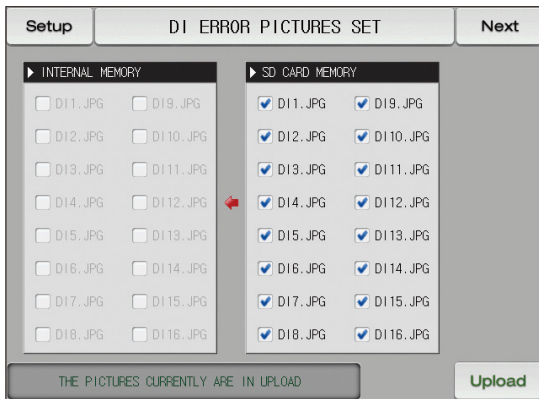

[Fig. 11-11] DI function and operation setting screen 5 #2

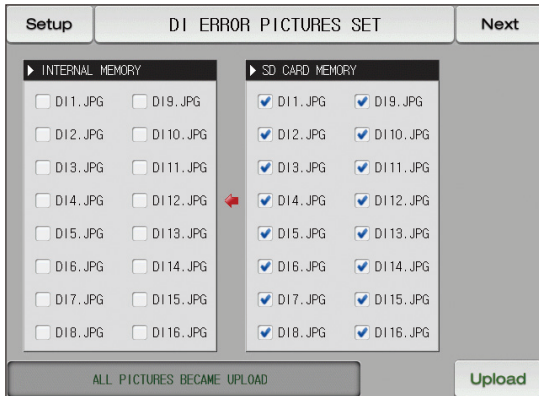


[Fig. 11-12] DI function and operation setting screen 5 #3

## References

- ▶ In case of file management for SD card, it recognizes when the folder name shall be JPG, and file name shall be DI\*.JPG.
- ▶ The message, "It is uploaded now," is displayed at the bottom of screen during upload.
- ▶ Please use BMP file before Old Ver.  
For more information, refer to [11-4. JPG & BMP file making method]

## References

- ▶ When the upload is completed, the message, "The upload is completed!" is displayed.
- ▶ The photo files(□) are activated for selection at the internal memory when the upload is completed.

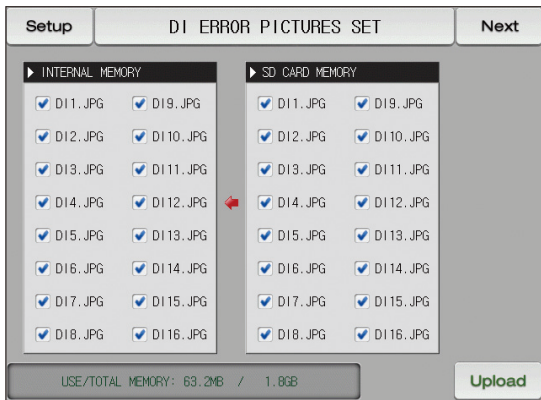

[Fig. 11-13] DI function and operation setting screen 5 #4

## References


- ▶ When the wanted file is selected() , it can be used for screen in case of DI error creation.
- ▶ The basic photo inside the memory is displayed when the error is made from the unselected DI.

### 11-3. DI error creation screen


- It is a screen in case of DI error creation.
- It is converted to the operation screen after escaping from the DI error screen when **Exit** is touched by user.
- The same DI error creation is neglected for 1 minute when the screen is changed by pressing **Exit** button after DI creation.

Ex) When it is exit with "Revert" in creation of D11, neglect it for 1 minute in spite of DI1 creation. It displays DI error screen when DI1 is created after 1 minute. ● Here, the neglecting means the DI error screen.

- **Buz.Off** button is to block the alarming sound when DI error is occurred.
- DI error no creation ("OFF" state)  THE D11 ERROR OCCURRED
- DI error creation ("ON" state)  THE D11 ERROR OCCURRED
- Release after DI error creation ("ON" state after "OFF")  THE D11 ERROR OCCURRED

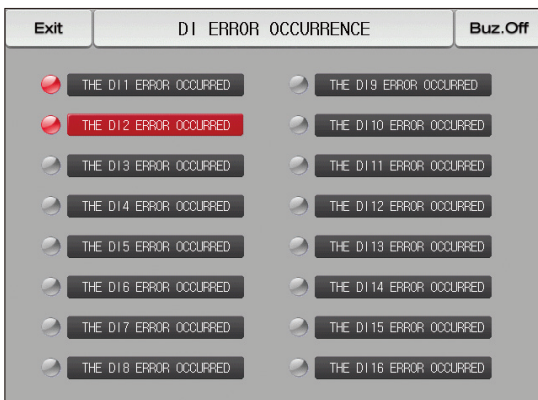

[Fig. 11-14] The screen with letter for DI error display method

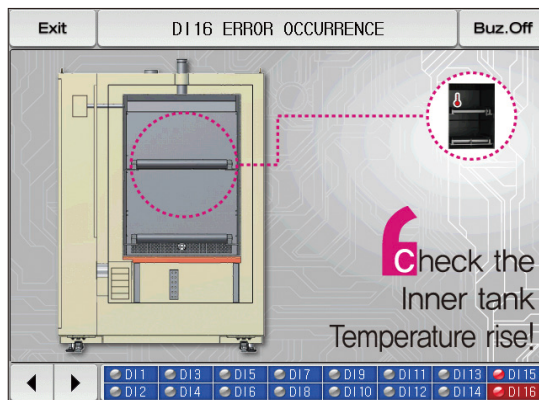



[Fig. 11-15] The screen with photo for DI error display method

## 11-4. JPG & BMP file making method




- Please use BMP file before Old Ver.
- JPG / BMP files can be created using BitEditor or Adobe Photoshop. (JPG can be saved as Paint.)  
BitEditor can be downloaded from its homepage. Please refer to the BitEditor manual for instructions. To create with Adobe Photoshop:

### 1 Adobe Photoshop


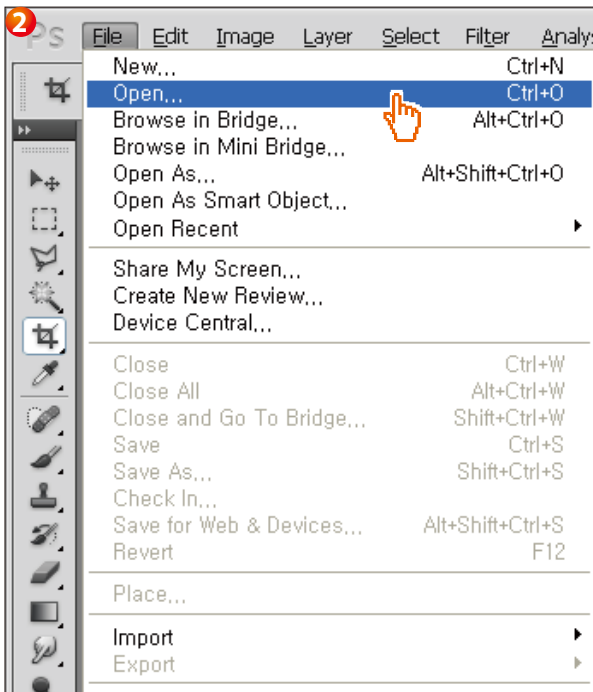


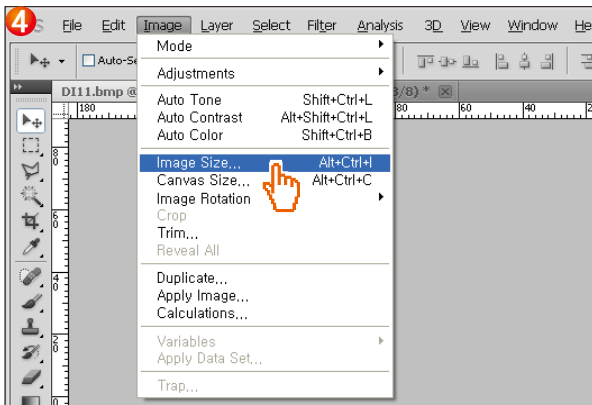


## (1) Create JPG file

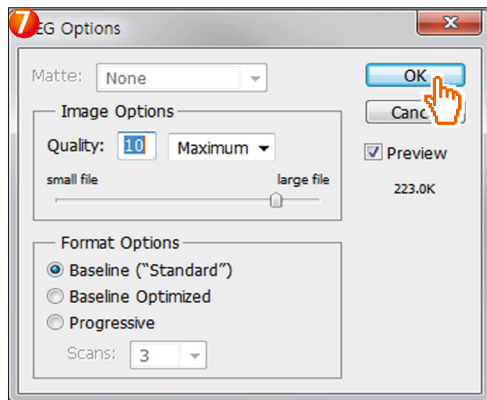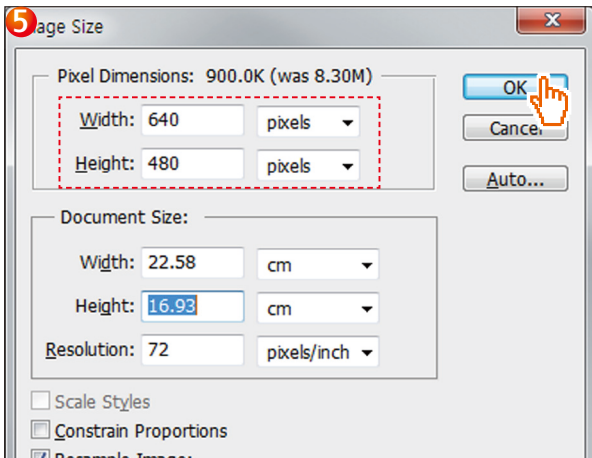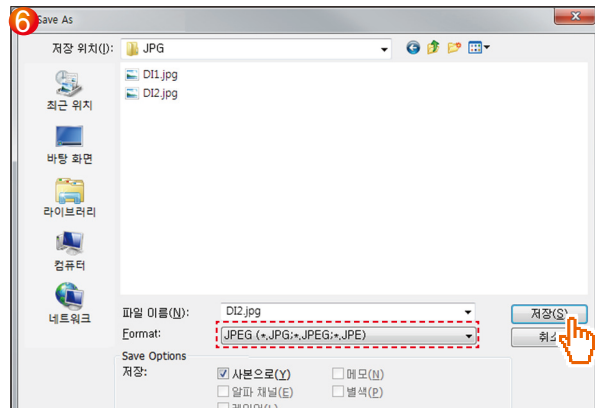

## (2) Create BMP file

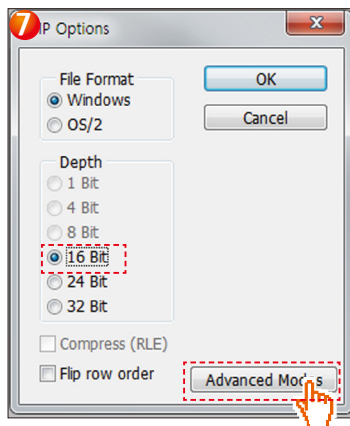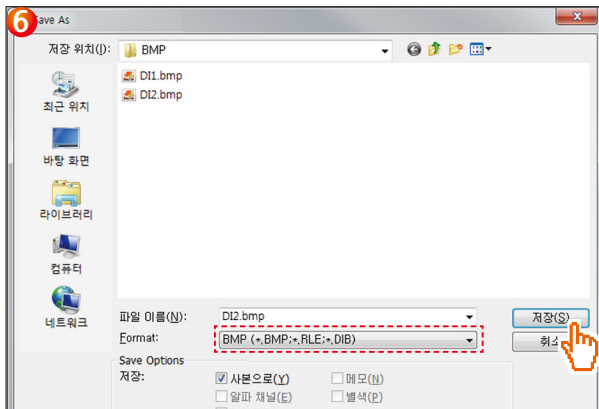

▶ After saving the file extension as "BMP", if the BMP option active window appears, set it to 16-bit and then select [Advanced Mode].

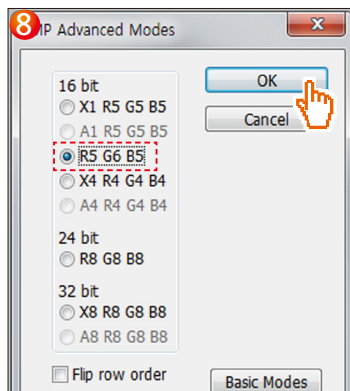

▶ [In the 16-bit setting box of [Advanced Mode], set R5 to G6 B5, then select OK to complete.

Division	DI error screen	User display of main menu screen
JPG resolution	640 X 368 pixels (within 360K)	464 X 128 pixels
BMP resolution	640 X 380 pixels	-
File name	DI#n.JPG / DI#n.BMP	TITLE.JPG
Number of files	16 pcs	1 pcs

#n: 1~16

## References

- ▶ When the files are saved in different name with the defined one in the DI error screen, they cannot be used.
- ▶ The folder name inside the SD card is defined in BMP or JPG.
- ▶ When creating a BMP file, it is recommended to use [Photoshop program].
- ▶ When saving BMP files, "Paint", which is commonly used in computers, cannot be used because bitmaps cannot be saved in 16BIT.

*Part* **12**

## **System initial setting**

12-1 Basic screen display setting .....	120
12-2 State display lamp setting .....	123



# System initial setting flow chart

Next Flow chart

Setup INITIAL DISPLAY Next

▶ LANGUAGE SET  
LANGUAGE ENGLISH

▶ SYSTEM PASSWORD  
PASSWORD \*\*\*\*\*

▶ USER DISP. OF MAIN MENU  
 UNUSE  USE

▶ INIT. INFORMATION  
INFORMATION1 SAMICON TECHNOLOGY CO.,LTD.  
INFORMATION2 TEL: 82-32-326-9120  
INFORMATION3 HTTP://WWW.SAMICOTECH.COM

▶ USER KEY  
 USE  User-Key  
 Lamp.On  
 Buz.Off  
 RELAY.ON

Initialize



Setup STATUS DISPLAY LAMP Next

▶ LAMP SELECT (24)

<input checked="" type="checkbox"/> IS1	<input checked="" type="checkbox"/> IS2	<input checked="" type="checkbox"/> IS3
<input checked="" type="checkbox"/> IS4	<input checked="" type="checkbox"/> IS5	<input checked="" type="checkbox"/> IS6
<input checked="" type="checkbox"/> IS7	<input checked="" type="checkbox"/> IS8	<input type="checkbox"/> IS9
<input type="checkbox"/> IS10	<input checked="" type="checkbox"/> TS1	<input checked="" type="checkbox"/> TS2
<input checked="" type="checkbox"/> TS3	<input checked="" type="checkbox"/> TS4	<input checked="" type="checkbox"/> AL1
<input checked="" type="checkbox"/> AL2	<input checked="" type="checkbox"/> AL3	<input checked="" type="checkbox"/> AL4
<input checked="" type="checkbox"/> AL5	<input checked="" type="checkbox"/> AL6	<input checked="" type="checkbox"/> AL7

[Fig. 12-1] System initial setting screen 1

[Fig. 12-7] System initial setting screen 2 #1



## 12. System initial setting

### 12-1. Basic screen display setting


[Fig. 12-1] System initial setting screen 1

- ① Setting the language
- ② Setting the password used in system screen entering
  - The password was set in "0" when it is delivered from the factory.
- ③ Set whether to use the user display on the main screen
  - User indication is activated when there is at least one selected photo file in internal memory or SD card memory.
- ④ Display the wording on the initial screen with electric power ON
  - Setting 1, 2, 3 wording for information is available and maximum 24 characteristics can be input


[Fig. 12-1] System initial setting screen 1

- ⑤ Set to the usage of user button using the button in stationary ,  and program operation screen.
  - Possible to select user button type and edition
- ⑥ Changing every parameter into the factor initial state
- ⑦ Move from current user screen to the previous user screen
- ⑧ When selecting use in ③, the file in the internal memory is displayed, and the file can be selected.
- ⑨ When there is a file in the SD card memory, it can be uploaded to the internal memory using the ,  button.
- ⑩ SD card memory upload button

Parameter	Setting range	Unit	Initial data
Screen display language	Eng / Kor / Chn / Jpn	ABS	English
System password setting	0 ~ 9999	ABS	0
User button	UNUSE, USE	ABS	UNUSE
Initial screen information	Information display 1	0~9, A~Z, Special character (Maximum 24 characters)	SAMWONTECHNOLOGY CO.,LTD.TEL :82-
	Information display 2	0~9 A~Z, Special character (Maximum 24 characters)	32-326-9120
	Information display 3	0~9 A~Z, Special character (Maximum 24 characters)	HTTP://WWW.SAMWONTECH.COM

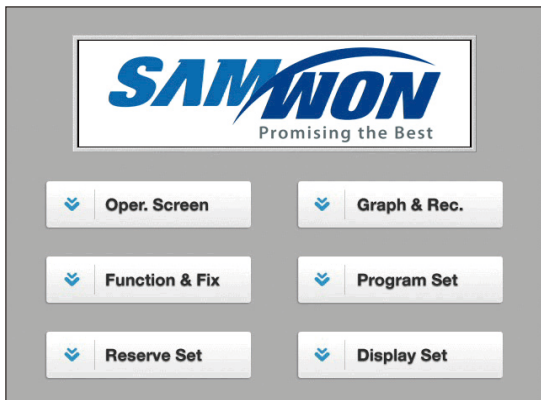


[Fig. 12-3] Screen when selecting user display BASE of the main screen

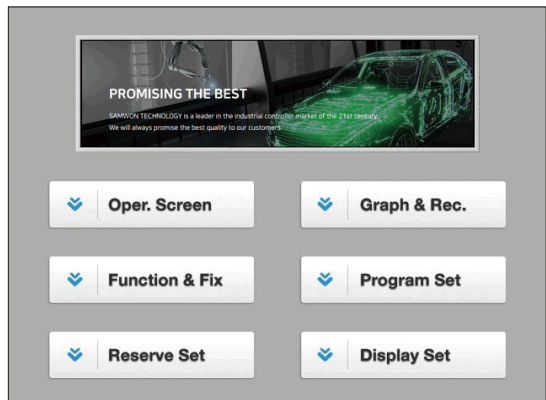


[Fig. 12-4] Select (upload) the user display title on the main screen

## References

- ▶ TITLE of the user display screen of the main screen is [11-4. JPG & BMP file writing method] Please refer to.

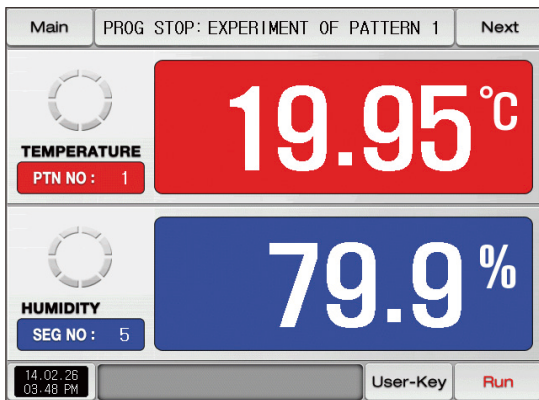

[Fig. 12-5] Program operation user button relay setting screen # 1

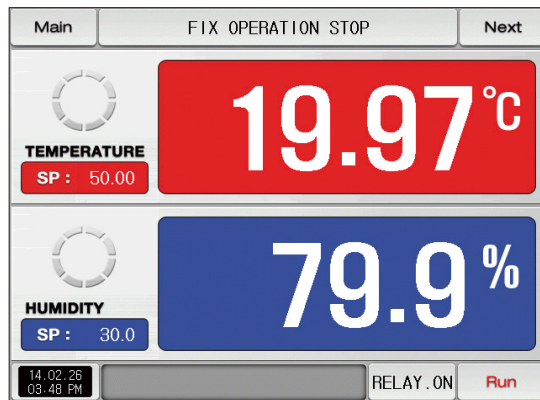


[Fig. 12-6] Stationary operation user button relay setting screen # 2

## References

- ▶ User button relay setting
- ▶ Set to the usage of button from [12. system initial setting]
- ▶ When set to use the user button, possible to set and use the user wanted relay from [10. DO relay output], Possible to use for stationary and program still screen and operation screen #3

## 12-2. State display lamp setting

- It is a screen to set the type of lamps to be display in the stationary and program operation screen #2.
- Maximum 24 lamps can be selected.

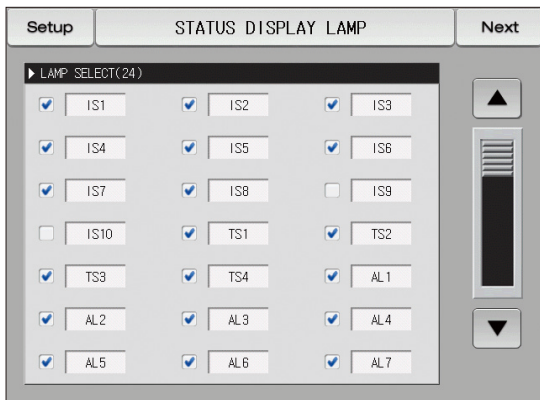

[Fig. 12-7] System initial setting screen 2 #1



[Fig. 12-8] System initial setting screen 2 #2


### References

- ▶ Possible to change the lamp name and type from operation screen.

Parameter	Setting range	Unit	Initial data
Lamp name	0~9, A~Z, Special letters (5 letters in maximum)	ABS	-



[Fig. 12-9] setting screen for lamp name

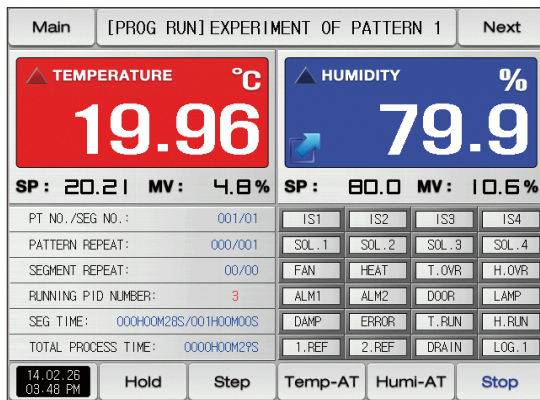


[Fig. 12-10] Lamp setting screen for program operation status

## References

- ▶ It is a screen to input the Lamp name.
- ▶ The Lamp name can be put in 24 letters in maximum.

# Engineering Units - EU, EUS

- When the sensor type (IN-T) or the upper limit/lower limit of input range is changed, the parameters expressed in EU(), EUS() are changed in proportion to current data. (However, the upper and lower range setting data is initialized.)
- Download the instruction manual and communication manual from the homepage.
- EU( ) : Value of engineering unit depending on the range of instrument
- EUS( ) : Value of engineering unit depending on the span of instrument

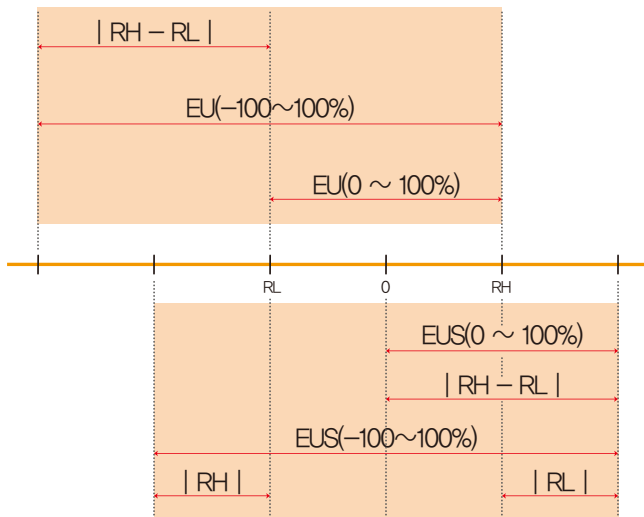

## ► Range of EU( ) and EUS( )

	Range	Center point
EU(0 ~ 100%)	RL ~ RH	$ RH - RL /2 + RL$
EU(-100 ~ 100%)	$- ( RH - RL  +  RL ) \sim RH$	RL
EUS(0 ~ 100%)	$0 \sim  RH - RL $	$ RH - RL /2$
EUS(-100 ~ 100%)	$-  RH - RL  \sim  RH - RL $	0

(Example)

► INPUT = PT\_1

► RANGE = -90.00°C (RL) ~ 200.00°C (RH)

	Range	Center point
EU(0 ~ 100%)	-90.00 ~ 200.00°C	55.00°C
EU(-100 ~ 100%)	-380.00 ~ 200.00°C	-90.00°C
EUS(0 ~ 100%)	0 ~ 290.00°C	145.00°C
EUS(-100 ~ 100%)	-290.00 ~ 290.00°C	0.00°C

RL: Lower limit of input range  
RH: Upper limit of input range



## Queries related with after sales service for TEMI1000

Please inform the TEMI1000 model name, failure condition and contact point for queries of after sales service.

**T : 032-326-9120**

**F : 032-326-9119**



## Customer contact for TEMI1000

Quotation request / Product request

Specification request / Data request/ Other request

- Internet

**[www.samwontech.com](http://www.samwontech.com)**

- E mail

**[webmaster@samwontech.com](mailto:webmaster@samwontech.com)**

**[sales@samwontech.com](mailto:sales@samwontech.com)**





**SAMWON TECHNOLOGY CO.,LTD.**  
(TECHNO-PARK,YAKDAE-DONG) 202-703, 388 SONGNAEDAERO, WONMI-GU,  
BUcheon-CITY, KYUNGGI-DO, KOREA  
T +82-32-326-9120 F +82-32-326-9119 E [webmaster@samwontech.com](mailto:webmaster@samwontech.com)/[sales@samwontech.com](mailto:sales@samwontech.com)

4th Edition of TEMI1000 Series IM : FBB, 17, 2021

